

TI Designs: TIDC-01002

Sub-1GHz組み込みセンサからクラウドへの産業用IoT (Internet of Things)ゲートウェイのリファレンス・デザイン



概要

TIDC-01002デザインでは、長距離のSub-1GHzワイヤレス・ネットワーク経由でセンサをクラウドに接続する方法を紹介します。これは、ビルディング制御やアセット・トラッキングなどの産業用機器に最適です。このTI Designは、TIのSimpleLink™ CC3220プロセッサと、SimpleLinkのSub-1GHz ULP (Ultra-Low-Power)デバイスであるCC13x0およびCC13x2により動作します。このリファレンス・デザインには、TI SimpleLink MCUプラットフォームの一部であるSimpleLink CC13xxおよびSimpleLink CC3220ソフトウェア開発キット(SDK)のTI 15.4-Stack部分が既に組み込まれており、TIの低消費電力、有線、およびワイヤレスMCUの間で統一されたソフトウェア環境を提供します。

リソース



 
TIDC-01002	デザイン・フォルダ
TIDC-01002	リポジトリ・ページ
CC1352	プロダクト・フォルダ
CC1310	プロダクト・フォルダ
CC1350	プロダクト・フォルダ
CC3220	プロダクト・フォルダ

特長

- 最大1kmの直線見通し距離を可能にする、大規模なネットワークからクラウドへの接続性
- TI 15.4-Stackを使用することで、システムがIEEE 802.15.4e/gに準拠できるよう設計者を支援
- TIでテスト済みのハードウェア設計を基礎としているため、短期間で市場へ投入でき、変更不要ですぐに使用可能なデモンストレーション用ソフトウェアが付属
- POSIX (Portable Operating System Interface)をベースとした実装により、TIのインターネット接続されたマイクロコントローラ(MCU)間で簡単に移植可能
- スター型ネットワークをサポート
- ULPセンサ・ノード

アプリケーション

- ビルのセキュリティ・ゲートウェイ
- ドアおよび窓のセンサ・ネットワーク
- HVACゲートウェイ
- アセット管理およびアセット・トラッキング

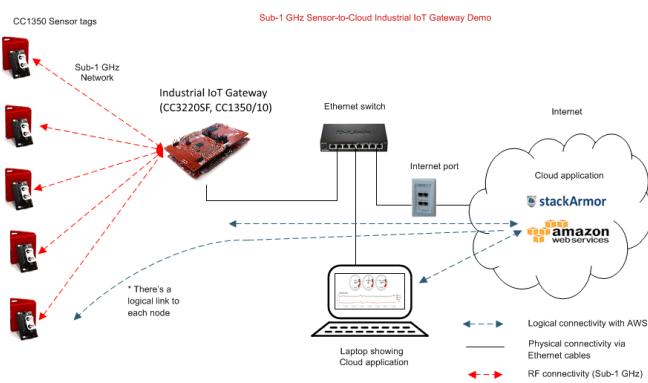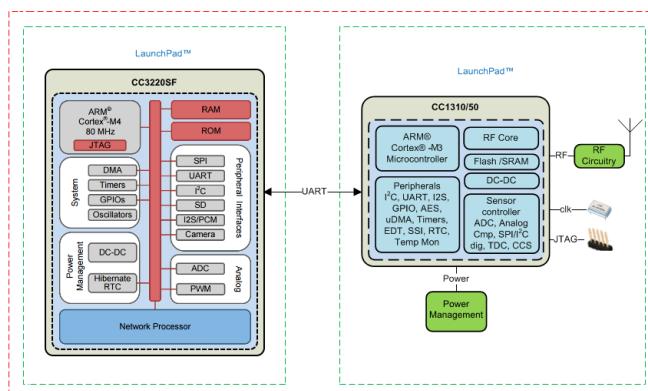

使用許可、知的財産、その他免責事項は、最終ページにあるIMPORTANT NOTICE(重要な注意事項)をご参照くださいますようお願いいたします。英語版のTI製品についての情報を翻訳したこの資料は、製品の概要を確認する目的で便宜的に提供しているものです。該当する正式な英語版の最新情報は、www.ti.comで閲覧でき、その内容が常に優先されます。TIでは翻訳の正確性および妥当性につきましては一切保証いたしません。実際の設計などの前には、必ず最新版の英語版をご参照くださいますようお願いいたします。

1 System Description

The TIDC-01002 provides a reference for creating an industrial, Internet of things (IoT) gateway that is capable of connecting a network of wireless sensors to an enterprise cloud provider. In this reference design, a long-range, low-power wireless network, made up of Sub-1 GHz CC13x0 or CC13x2 devices (both are supported) that run the TI 15.4-Stack-based application, can be connected to multiple *cloud service providers*, such as IBM Watson IoT®, AWS IoT, and so on. An online dashboard is provided, which allows users visualize the real-time sensor data as well as send actuation commands from anywhere in the world using an Internet-connected device with a web browser.

This reference design provides a list of suggested hardware, schematics, and foundational software to quickly begin IoT product development. The design also provides the ability to visualize the data inside a local network without connecting to a *cloud service*. The software design is created to be flexible, to enable other *cloud service providers* of choice.

This reference design enables IoT in numerous applications, such as building security gateways, door and window sensor networks, asset management and tracking, and other IoT-enabled home and industrial automation applications.

The connection between the wireless sensor network and the cloud is made possible by the TI SimpleLink CC3220 device on the CC3220SF LaunchPad™ development platform. On one side, the CC3220 is connected to a Sub-1 GHz device acting as the central node in the wireless network, and on the other side, the device is connected to a cloud service such as IBM Watson IoT or AWS IoT using Wi-Fi®. These two connections allow the CC3220 device to act as a gateway to get the sensor messages from the Sub-1 GHz wireless network to the cloud and to get the actuation requests from the cloud dashboard sent back to the Sub-1 GHz wireless network.

Due to the long-range and low-power capabilities of the Sub-1 GHz sensors, this reference design may be useful for any application that would benefit from distributed sensing. This reference design provides an example that gives the ability to visualize or actuate tens or hundreds of sensors while only needing one gateway device, the SimpleLink CC3220, to be connected to the Internet.

2 System Overview

2.1 Block Diagram

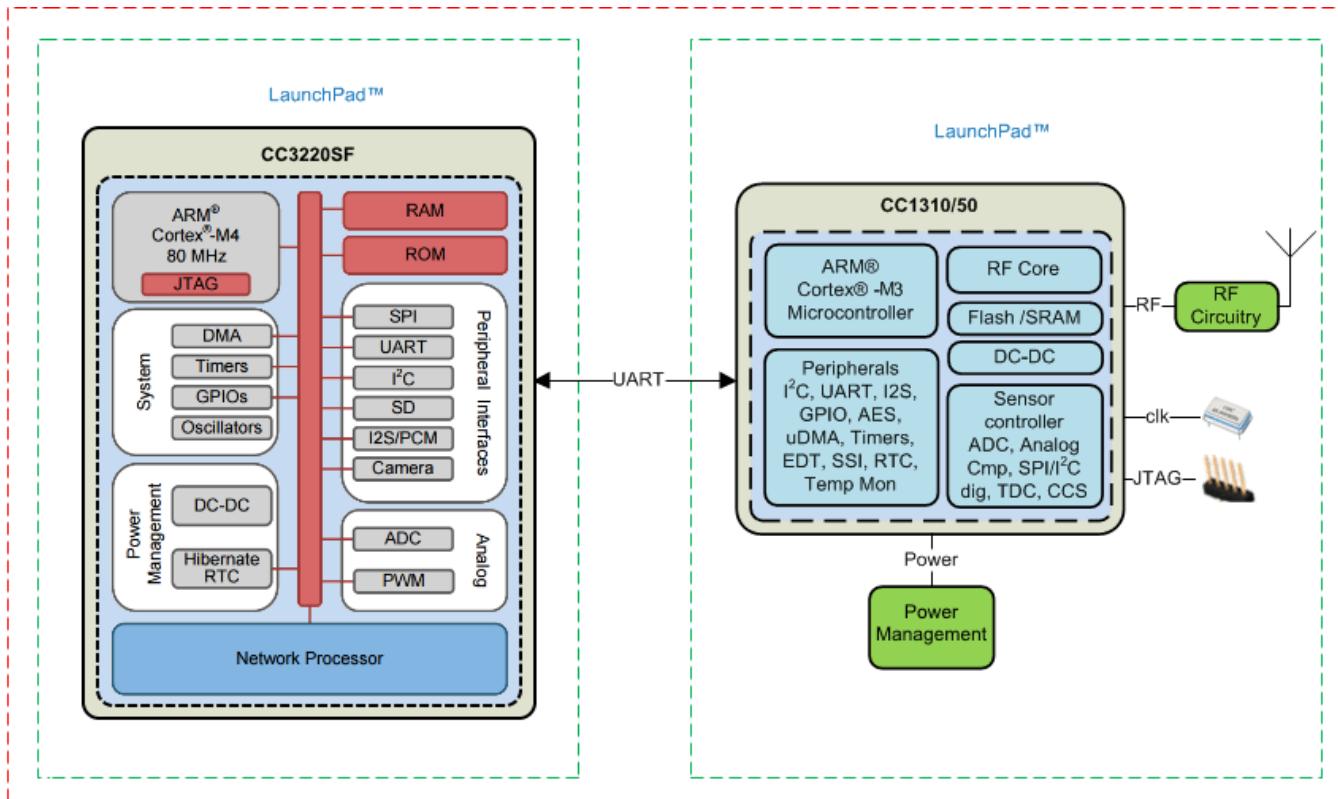


図 1. Block Diagram of IoT Gateway Reference Design

2.1.1 Software Block Diagram

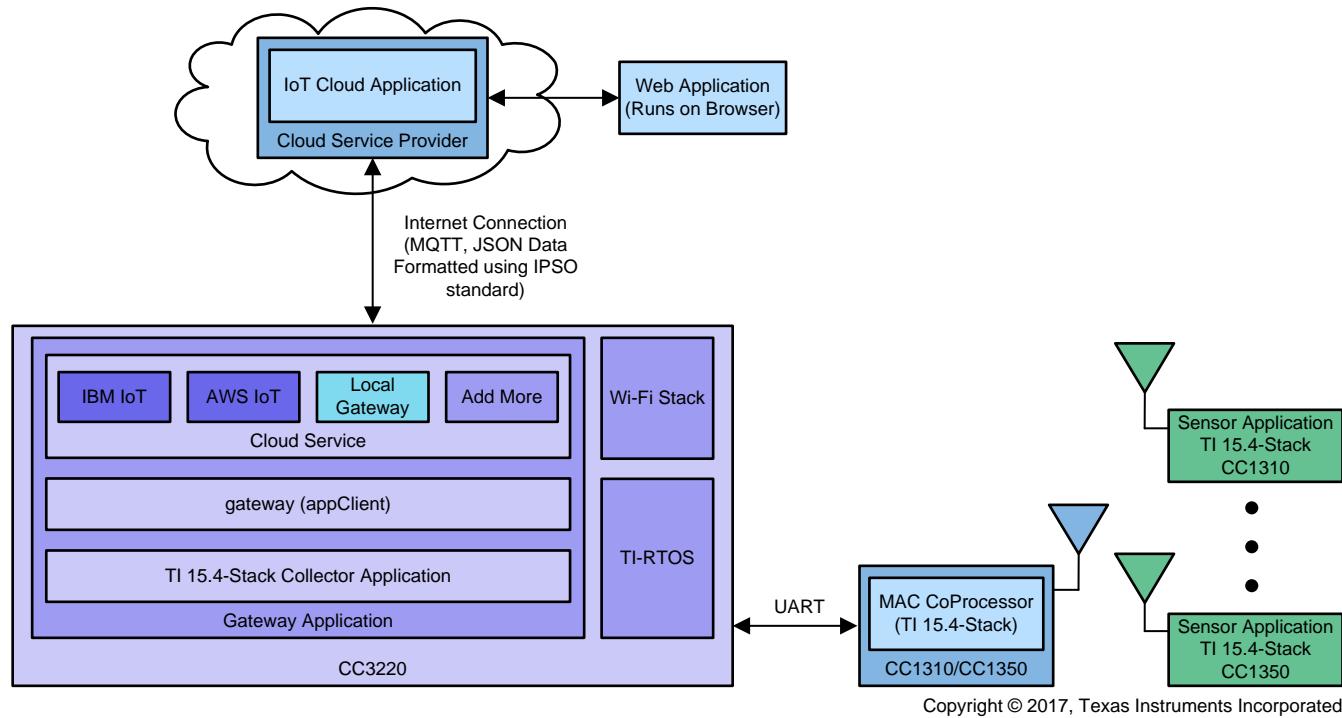


図 2. Software Block Diagram of TI 15.4-Stack Sensor-to-Cloud Reference Design

The following is a high-level description of each module in the software block diagram:

- User interface application: This application presents the network information and device information and provides ability to control network behavior to the end user.
- IoT cloud application: This application runs on the cloud server, which communicates with the IoT gateway application. The interface of the *cloud service* task with the cloud server is described in [2.3.1](#).
- IoT gateway application: This application runs on the SimpleLink CC3220. The application interfaces on one side with the *cloud service* task to enable cloud connectivity and on the other side to the *collector* task to interface with the TI 15.4-Stack based network. The interface between the IoT gateway and the *cloud service* is described in [2.3.1](#).
 - *Cloud service* task: This task provides the *cloud service* provider specific functionality. Users can take the current interface, which is designed as an extensible framework, and quickly modify the interface to add their own functionality for their end product development.
 - *Gateway*: This application component interfaces with the *collector* task through a POSIX message queue interface to enable connection with the TI-15.4 Stack network.
- *TI 15.4-Stack collector* task: This task implements the functionality that starts the network, allows new devices to join the network, configures the joining devices on how often to report the sensor data, configures how often to poll for buffered messages in case of non-beacon and frequency-hopping mode of network operation for sleepy network devices, and tracks connected devices to determine if they are active or inactive on the network. This determination is achieved by the collector periodically sending tracking request messages and awaiting corresponding tracking response messages. The *collector* task also implements components that talk to the *gateway* module. The communication is implemented through POSIX-based message queues.

- MAC CoP application: The MAC coprocessor application runs on the CC13x0 or CC13x2 LaunchPad, which provides a UART-based interface from TI 15.4-Stack to the IoT gateway application.
- CC13x0 or CC13x2 LaunchPad Sensor End Node: The sensor example application from TI 15.4-Stack and runs on the CC13x0 or CC13x2 LaunchPad.

2.2 **Highlighted Products**

This section highlights key hardware devices and software components used in the reference design.

2.2.1 SimpleLink™ CC13x0 and CC13x2

The CC13xx is a member of the SimpleLink family of cost-effective, ULP, 2.4-GHz and Sub-1 GHz RF devices. In addition to flexible low-power modes, very-low active RF and MCU current consumption provide excellent battery lifetime and allow long-range operation on small, coin-cell batteries and in energy-harvesting applications.

The CC13x2R devices combine a flexible, very low-power RF transceiver with a powerful 48-MHz Arm® Cortex®-M4F CPU in a platform supporting multiple physical layers and RF standards. A dedicated Radio Controller (Arm® Cortex®-M0) handles low-level RF protocol commands that are stored in ROM or RAM, thus ensuring ultra-low power and great flexibility. The low power consumption of the CC1352R device does not come at the expense of RF performance; the CC1352R device has excellent sensitivity and robustness (selectivity and blocking) performance.

The CC1350 is the first device in the CC13xx and CC26xx family of cost-effective, ULP wireless MCUs capable of handling both Sub-1 GHz and 2.4-GHz RF frequencies. The CC1350 device combines a flexible, very-low-power RF transceiver with a powerful, 48-MHz, Cortex®-M3 MCU in a platform supporting multiple physical layers and RF standards. A dedicated radio controller (Cortex-M0) handles low-level RF protocol commands that are stored in ROM or RAM, thus, ensuring ULP and flexibility to handle both Sub-1 GHz protocols and 2.4-GHz protocols (for example, *Bluetooth®* low energy). This enables the combination of a Sub-1 GHz communication stack that offers the best possible RF range together with a connection to a Bluetooth low energy smartphone that enables a great user experience through a phone application. The Sub-1 GHz-only devices in this family are the CC1310 and the CC1312.

2.2.2 SimpleLink™ CC3220


The CC3220x device is part of the SimpleLink MCU platform, which consists of Wi-Fi, low energy, Sub-1 GHz and host MCUs, which all share a common, easy-to-use development environment with a single core SDK and rich tool set. A one-time integration of the SimpleLink platform enables the user to add any combination of the portfolio's devices into their design, which allows 100% code reuse when the design requirements change. For more information, visit [SimpleLink Solutions](#) overview.

Created for the IoT, the SimpleLink CC3220x device family from Texas Instruments is a single-chip solution that integrates two physically separated, on-chip MCUs. One of the MCUs is an application processor—an ARM® Cortex®-M4 with a user-dedicated 256KB of RAM and an optional 1MB of XIP flash. The other MCU is a network processor in charge of running all Wi-Fi and Internet logical layers. This ROM-based subsystem includes an 802.11b/g/n radio, baseband, and MAC with a powerful crypto engine for fast, secure Internet connections with 256-bit encryption.

The CC3220x wireless MCU family is part of the second generation of TI's Internet-on-a-chip™ family. This generation introduces new features and capabilities that further simplify the connectivity of things to the Internet. The new capabilities including the following:

- IPv6
- Enhanced Wi-Fi provisioning
- Enhanced power consumption
- Enhanced file system security (supported only by the CC3220S and CC3220SF devices)
- Wi-Fi AP connection with up to four stations
- More concurrently opened BSD sockets; up to 16 BSD sockets, of which six are secure
- HTTPS support
- RESTful API support
- Asymmetric keys crypto library

The CC3220x wireless MCU family supports the following modes: station, AP, and Wi-Fi Direct®. The device also supports both WPA2-Personal and WPA2-Enterprise security modes. This subsystem includes embedded TCP/IP and TLS/SSL stacks, HTTP server, and multiple Internet protocols. The device supports a variety of Wi-Fi provisioning methods including HTTP based on AP mode, SmartConfig™ technology, and WPS2.0.

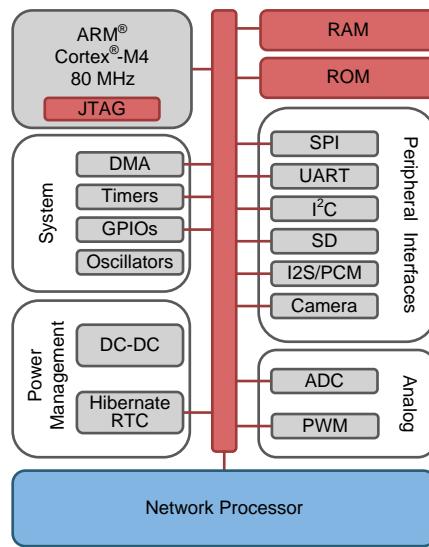

Copyright © 2017, Texas Instruments Incorporated

図 3. CC3220 Block Diagram

2.2.3 TI 15.4-Stack

TI 15.4-Stack is an IEEE802.15.4e/g-based software stack part of the SimpleLink CC13x0 SDK supporting a star network topology for Sub-1 GHz applications. TI 15.4-Stack software runs on the SimpleLink Sub-1 GHz CC13x0 or CC13x2 wireless MCU from TI. The TI 15.4 Stack offers several key benefits, such as longer range in FCC band and better protection against in-band interference by implementing frequency hopping. The SDK also offers customers an accelerated time to market by providing a complete end-to-end, node-to-gateway reference design. TI 15.4-Stack is supported on the industry's lowest-power SimpleLink Sub-1 GHz wireless MCU platform.

This release is available royalty-free to customers using TI's CC13x0 or CC13x2 wireless MCU and also runs on TI's SimpleLink Sub-1 GHz CC13x0 or CC13x2 wireless MCU LaunchPad development kit. This release is available royalty-free to customers using TI's CC13x0 or CC13x2 wireless MCU and also runs on the SimpleLink Sub-1 GHz CC13x0 or CC13x2 wireless MCU LaunchPad development kit from TI.

Features:

- IEEE 802.15.4e/g standards-based software stack
- Frequency hopping
- Medium access with CSMA/CA
- Built-in acknowledgment and retry
- Network and device management (joining, commissioning, service discovery)
- Security feature through AES 128-bit encryption and integrity check
- Supported on SimpleLink Sub-1 GHz CC1310 wireless MCU
- Star topology: point-to-point, one-to-many, and data concentrator
- Synchronous (beacon) and asynchronous (non-beacon) modes
- Designed for 915-MHz FCC, 863-MHz ETSI, and 433-MHz China bands
- SimpleLink long range mode for all supported frequency bands
- Support for SimpleLink CC1190
- Bluetooth low energy beacon advertisement support
- Sensor-to-web example application
- Easy application development guided through sample applications showcasing the stack configuration and APIs
- Coprocessor mode for adding connectivity to any MCU or MPU with Linux® host middleware and console application

For more details and to get the TI 15.4-Stack software, download the [SimpleLink CC13x0 SDK](#), which includes the TI 15.4-Stack.

2.2.4 SimpleLink™ Wi-Fi CC3220 SDK

The SimpleLink Wi-Fi CC3220 SDK contains drivers for the CC3220 programmable MCU, over 30 sample applications, and related documentation. The SDK also contains the flash programmer, a command line tool for flashing software, configuring network and software parameters (SSID, access point channel, network profile, and so on), system files, and user files (certificates, web pages, and so on). This SDK can be used with TI's SimpleLink Wi-Fi CC3220 LaunchPad development kits.

Features:

- Internet-on-a-chip sample applications:
 - Email from SimpleLink Wi-Fi
 - Information center: Get time and weather from the Internet
 - https server: Host a secure web page on SimpleLink Wi-Fi
 - XMPP: IM chat client
 - Serial interface
- Wi-Fi sample applications:

- Easy Wi-Fi configuration
- Station, AP modes
- TCP/UDP
- Security—Enterprise and personal, TLS/SSL
- Power management—Deep sleep, hibernate
- MCU peripheral sample applications:
 - Including parallel camera, I2S audio, ADC, I²C, PWMs, JTAG Flashing, and more

2.3 System Design Theory

2.3.1 TI IoT Gateway-to-Cloud Service Interface

The purpose of this section is to provide a description of the message types and expected data flows that will be shared between the TI IoT gateway and an IoT cloud server. The interface is designed to be flexible to support multiple cloud vendors. For this purpose, the Sub-1 GHz wireless network and node information will be exchanged between the gateway and the cloud using the long-established JavaScript object notation (JSON) format. Additionally, IPSO alliance smart object definitions will be used to define sensors (and their data) that are connected to each node in the wireless networks.

2.3.1.1 Message Types

To fully specify the Sub-1 GHz wireless network information, as well as the Sub-1 GHz sensors and their data, two distinct message types have been defined for the IoT gateway to update the cloud. In order to allow the cloud to send messages back to the TI IoT gateway, two additional message types are defined that allow the cloud to update the wireless network state and send actuation messages to specific devices in the network.

2.3.1.1.1 Network Information Message Type (From TI IoT Gateway to the Cloud)

This message type presents information about the wireless network, its current state, and a list of devices that are connected to the network. As described later in this design guide, this will be the first message type sent after the network is initialized. This message type contains all the information necessary to prepare for receiving sensor data from devices. This message type contains the following fields:

- name: begins as the short address of the network but allows for the cloud to provide a more specific name
- channels: list of channels that the wireless network is operating on
- pan_id: the 16-bit PAN identifier of the network
- short_addr: the 16-bit short address of the PAN-coordinator
- ext_addr: the 64-bit IEEE extended address of the PAN-coordinator device
- security_enabled: yes, if security enabled; no, otherwise
- mode: network operation mode (beacon, non-beacon, frequency hopping)
- state: PAN-coordinator state values (waiting, starting, restoring, started, open, closed)
- devices: list of wireless nodes in the network
 - name: begins as the short address of the device but allows cloud to update

- short_addr: the 16-bit short address of the PAN-coordinator
- ext_addr: the 64-bit IEEE extended address of the PAN-coordinator device
- topic: the topic that the device will send its sensor data updates to
- object_list: list of IPSO alliance smart objects (sensors) attached to this device
 - oid: object ID which specifies the sensor type in the IPSO standard
 - iid: list of instance IDs for the current object (can be multiple same type sensors)

2.3.1.1.2 Device Information Message Type (From TI IoT Gateway to the Cloud)

This message type provides information about the wireless device as well as the latest data for all of the sensors connected to the device. This message type will be sent when a device reports sensor data or switches between an active or inactive state. The following fields are contained in this message type:

- active: whether or not the wireless node is active
- ext_addr: the 64-bit IEEE extended address of the PAN-coordinator device
- rssi: received signal strength indicator of the last message received
- smart_objects: list of the IPSO alliance smart objects connected to this wireless device
 - object ID description: type of sensor (as defined in the IPSO standard); can be multiple types of sensors connected to each device
 - instance ID: the instance ID for the parent object type; can be multiple sensors of the same type
 - resource ID description list: sensor data name value pairs (for example, *sensorValue*: 32.5, *units*: Celsius, and so forth); these resources match what is specified for the given object ID in the IPSO standard

2.3.1.1.3 Update Network State Message Type (From Cloud to TI IoT Gateway)

In the current implementation of the TI IoT gateway, this message type is intended to be able to open or close the wireless network to new devices joining. The cloud's front end user interface can allow a user to click a button to open or close the network and then generate this message type and send it to the TI IoT gateway. The gateway will then notify the network on whether it needs to open or close to new device joins. This message type only includes the desired state of the network and should be sent to the same topic that the cloud is receiving the network information messages from. The following field is all that is required:

- state: should be set to either *open* or *closed*

2.3.1.1.4 Device Actuation Message Type (From Cloud to TI IoT Gateway)

This message type is added to allow the cloud to send actuation messages to specific devices in the wireless network. The current implementation only supports toggling an LED on the wireless device's board. The device actuation message should be sent to the topic of the device as given in the devices list of the network information message. The following field is the only requirement for this message:

- toggleLED: should be set to *true*

2.3.1.2 Data Flows

2.3.1.2.1 Network Information Sent to the Cloud

The following bulleted items are the list of events that can occur on the TI IoT gateway that will cause a network information message type to be sent to the cloud. A description is given with each event and the end of this section describes the expected behavior from the cloud upon receipt of this type of message.

- **Network Startup**

This is the initial event in the TI IoT gateway. The TI IoT gateway will aggregate the information about the wireless network as well as the list of connected devices and their sensor types. The TI IoT gateway will then make a connection to the cloud and send the aggregated data contained in the network information message type.

- **Network Information Update**

This event can occur if any of the information about the wireless network changes. For example, if the network operation mode of the wireless network was changed, the TI IoT gateway would once again aggregate all the information needed (network information and device list) and send the network information message type to the cloud.

- **Network State Change**

This event occurs if the state of the wireless network changes. For example, if the network state changes from open to closed the TI IoT gateway will send a network information message type to the cloud.

- **Device Joins the Wireless Network**

When a new device joins the network, after the network is up and running, this event will occur. In this case, the TI IoT gateway will add the new device and its information to the devices list within the network information message type and then send the updated information to the cloud.

- **Expected Cloud Behavior**

It is expected that the cloud will be prepared for the network startup event and will be able to receive the network information message type (using a wildcard and then filtering or by having prior knowledge about the destination or topic of the message). Once the cloud receives the network information message, the wireless network information (PANID, security, mode, and so on) can be displayed to users and the device list information (topic, object list, and so on) can be used to prepare itself to receive and display device and sensor data.

2.3.1.2.2 Device Information Sent to the Cloud

The following bulleted items are the list of events that will cause the TI IoT gateway to send a device information message type to the cloud. A description is given with each event and the end of this section describes the expected behavior from the cloud upon receipt of this type of message.

- **Device Becomes Inactive**

This event occurs when the TI IoT gateway detects that one of the devices in the connected devices list has stopped sending sensor data updates. The TI IoT gateway will update the *active* field and send a Device Information Message Type to the cloud for the inactive device.

- **Device Reports Sensor Data**

Each time a sensor on a connected device reports sensor data this event occurs. The TI IoT gateway updates the IPSO Alliance Smart Object list in the device for each sensor and then sends a device

information message type to the cloud.

- **Expected Cloud Behavior**

It is expected that the cloud will be listening on each topic given in the connected devices list from the network information message. When one of the two events occur in this section, the TI IoT gateway will send the device information message to the topic (corresponding to the device being update) that the cloud should be listening on or subscribed to. When the device information message arrives at the cloud, the cloud should display the latest device information and sensor data to users.

2.3.1.2.3 *Update Network State Message Sent to the TI IoT Gateway*

This message is used to open or close the wireless network to new devices joining. This message should be an option provided to users in the front end user interface that the cloud presents. When the user decides to update the network state, the cloud should send an update network state message type to the TI IoT gateway on the same topic that the network information messages are arriving on.

- **Expected TI IoT Gateway Behavior**

The TI IoT gateway will receive the Update Network State message and will generate the correct command (either open or close) to the wireless network. This message should in turn cause a network state change event (from 7.2.1 above) that will send a network information message back to the cloud which can confirm the successful completion of the Update Network State command.

2.3.1.2.4 *Device Actuation Message Sent to the TI IoT Gateway*

This method is used to toggle the LED on the board of the connected devices. This message is meant to be a proof-of-concept on the current device setup and will change for customer use-case specific actuations. A toggle LED button for each device will be provided to users of the cloud's front end interface. When the toggle LED button is clicked the cloud should send a device actuation message to the TI IoT gateway on the same topic that the device information messages are arriving on.

- **Expected TI IoT Gateway Behavior**

The TI IoT gateway will generate a toggle LED command and send it to the device corresponding to the topic that the device actuation message was received on. This will cause the LED to toggle.

Because the state of the LED is not captured in the device information message type, there will be no feedback to the cloud that the LED actually toggled.

3 Hardware, Software, Testing Requirements, and Test Results

3.1 Required Hardware and Software

The CC3220SF plus CC13x0/CC13x2 sensor-to-cloud reference design helps developers create ULP, long-range, star-topology network solutions. The sensor-to-cloud reference design includes the Gateway example application running on the CC3220SF, MAC CoProcessor (CoP) application running on the CC13x0 or CC13x2, in addition to sensor node applications. The CC3220SF Gateway example application interfaces over UART with a CC13x0 or CC13x2 LaunchPad, which acts as a MAC CoP. The Gateway example application implements a IEEE 802.15.4 full-function device, which performs the functions of a network PAN coordinator (starting a network and permitting devices to join this network) and also provides an interface for monitoring and collecting sensor data from one or more sensor devices.

The Gateway example application provides an IEEE 802.15.4 network to IP bridge and is a great starting point to create IoT applications based on TI 15.4-Stack.

3.1.1 Hardware

- 2x CC13x0 or 2x CC13x2 LaunchPad development kits
- 1x CC3220SF LaunchPad development kit
- USB cables
- Wi-Fi access point with Internet access

3.1.2 Software

- [CC3220-SensorToCloud SW](#)
- [CC3220 SDK v1.50.00.06](#)
- [SimpleLink CC13x0 SDK](#) or [SimpleLink CC13x2 SDK](#)
- [UniFlash v4.1.1.1250](#) or later
- [Tera Term](#) or any other equivalent terminal program
- [Cloud Foundry CLI](#) (for IBM Cloud only)
- (Optional) [SimpleLink Starter Pro IOS® app](#) or [SimpleLink Wi-Fi Starter Pro Android™ app](#) (downloaded from the app store on smartphones or tablets)

3.2 Testing and Results

This section describes the hardware and software used for running the tests and the results obtained.

3.2.1 Test Setup

During the development process of this reference design, the full hardware and software portions described in earlier sections were used for testing. Multiple CC13x0 and CC13x2 sensor nodes and a CC3220SF LaunchPad (connected to a CC1310 coprocessor) were used to verify the IoT gateway functionality with the IBM cloud and AWS IoT cloud services. The test results of this reference design can be visualized by the IoT dashboard shown in [3.2.2](#).

3.2.1.1 Running the Out-of-Box Examples

This section provides detailed instructions to assist developers set up and understand the principles behind the out-of-box examples.

Some of the topics covered in this section are:

1. Programming the CC13xx LaunchPad development kits
2. Programming the gateway example application on the CC3220SF LaunchPad
3. Connecting the CC13x0 MAC-CoP LaunchPad with the CC3220SF LaunchPad
4. Setting up and configuring the cloud service
5. Running and using the example

For steps on how to setup and run the *IBM gateway example* please follow the instructions in [3.2.1.1.1](#) and to setup and run the *AWS IoT gateway example* please follow the instructions in [3.2.1.1.2](#).

注: This guide can be performed using either CC13x0 or CC13x2 LaunchPad development kits for the MAC CoP. The training material is based on CC1350, and the same procedures apply when using either a CC1310 or CC13x2 devices.

3.2.1.1.1 Running IBM Gateway Example

1. Label one CC1350 LaunchPad as *Sensor* and the other as *MAC-CoP*. These labels will be referred to throughout this guide. It is recommended to use non-permanent marking for this (for example, sticky notes) as these labels may only be relevant for this specific example.
2. Program the *MAC-CoP* and the *Sensor* LaunchPad by following the steps in [3.2.1.1.3](#).
3. Program the CC3220SF LaunchPad by following the steps in [3.2.1.1.4](#).
4. Connect the *MAC-CoP* LaunchPad with the CC3220SF LaunchPad by following the steps in [3.2.1.1.5](#).
5. Set up an account for IBM Cloud by following the instructions in [3.2.1.1.6](#).
6. Set up the Watson IoT platform service as in [3.2.1.1.7](#).
7. Follow [3.2.1.1.8](#) to set up Node.js and cloud foundry app.
8. After all of these steps have been completed, go to [3.2.1.1.9](#), and follow the steps to connect the gateway to the Internet and run the example.

3.2.1.1.2 Running AWS IoT Example

Before getting started with the AWS IoT example please request the AWS IoT demo configuration from StackArmor by filling out the following [form](#).

1. Label one CC1350 LaunchPad as Sensor and the other as MAC-CoP. These labels will be referred to throughout this guide. It is recommended to use non-permanent marking for this (for example, sticky notes), as these labels may only be relevant for this specific example.
2. Program the MAC-CoP and the Sensor *LaunchPad™* by following the steps in [3.2.1.1.3](#).
3. Import and build the AWS IoT example by following the steps in [3.2.1.1.4.2](#).
4. Program the CC3220SF LaunchPad by following the steps in [3.2.1.1.4.4](#).
5. Connect the MAC-CoP LaunchPad with the CC3220SF LaunchPad by following the steps in [3.2.1.1.5](#).
6. After all of these steps have been completed, go to [3.2.1.1.9](#), and follow the steps on how to connect the gateway to the Internet and run the example.

3.2.1.1.3 Programming CC13x0 LaunchPad™

1. It is assumed that all the required software has already been installed. If not, install the required software [3.1.2](#) now.
2. Connect the CC13x0 LaunchPad to the PC.
3. Open UniFlash.
4. Select LAUNCHXL-CC1350 as show in [図 4](#), and click on the *Start* button.

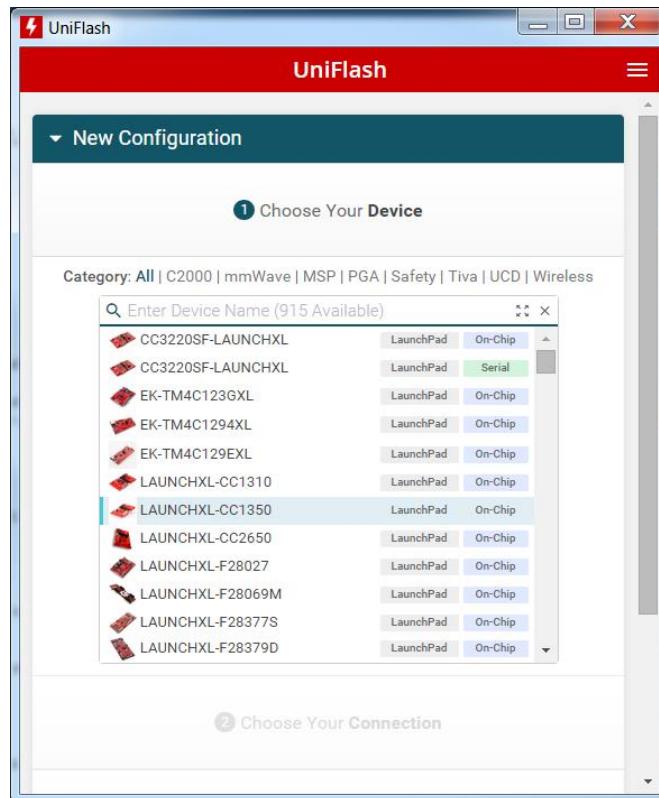


図 4. Choose Device: UniFlash

5. Make sure the *Program* tab is selected on the left, and click the *Browse* button to select the desired image for the CC13xx LaunchPad located in <S2C_Repo_Directory>\tidc01002\prebuilt\.

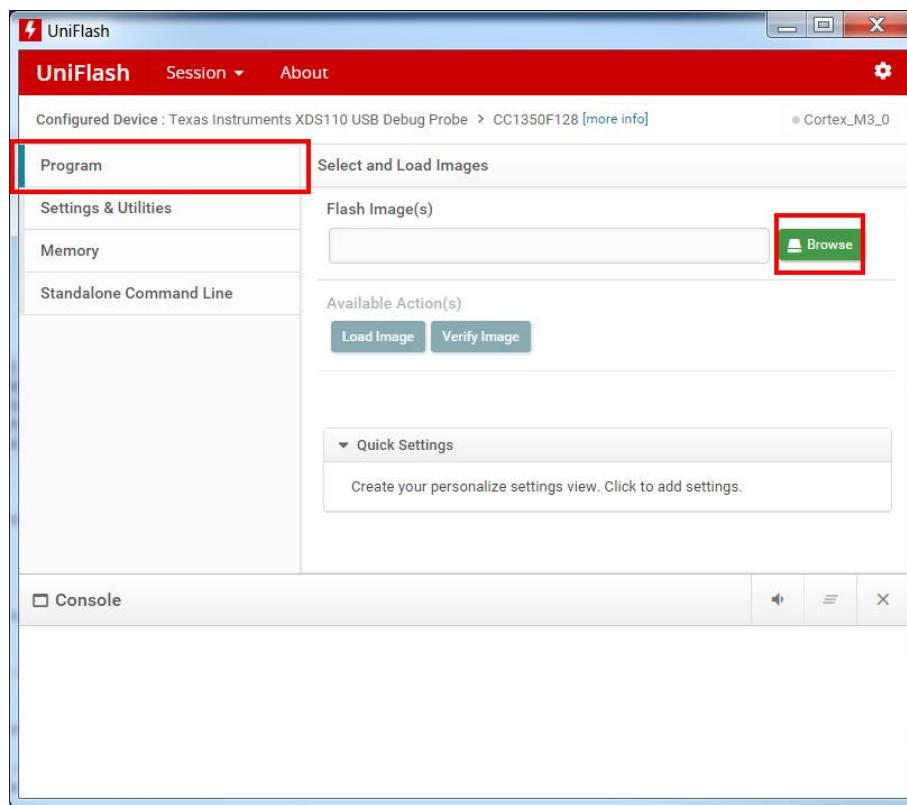


図 5. Browse for Firmware Image

6. After selecting the desired image, click on the *Load Image* button to flash the CC1350 LaunchPad.

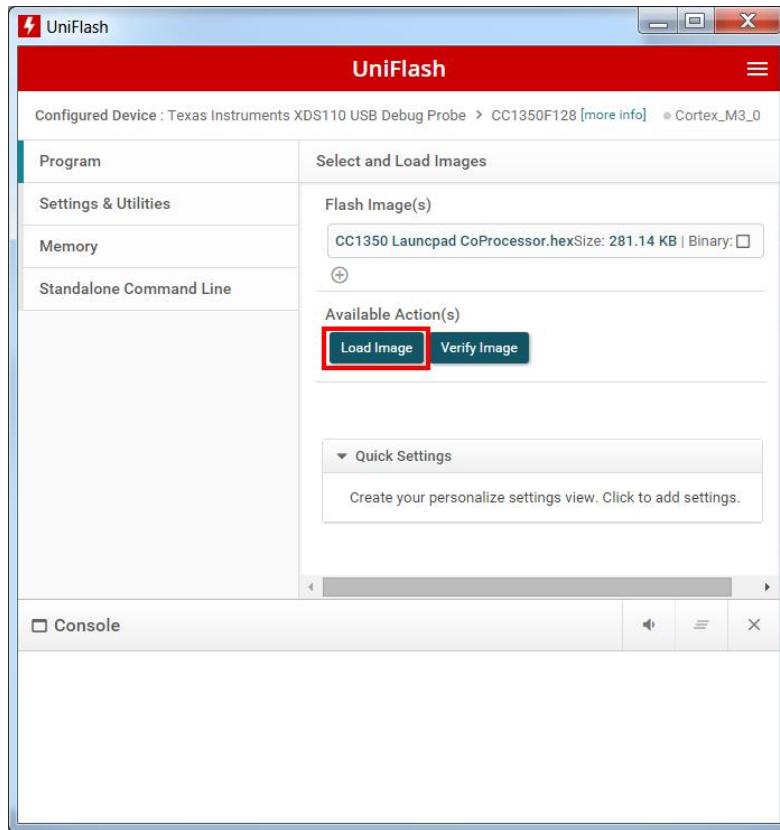


図 6. Load Image

7. If loading the image was successful, a success message should show in the console as shown in 図 7.

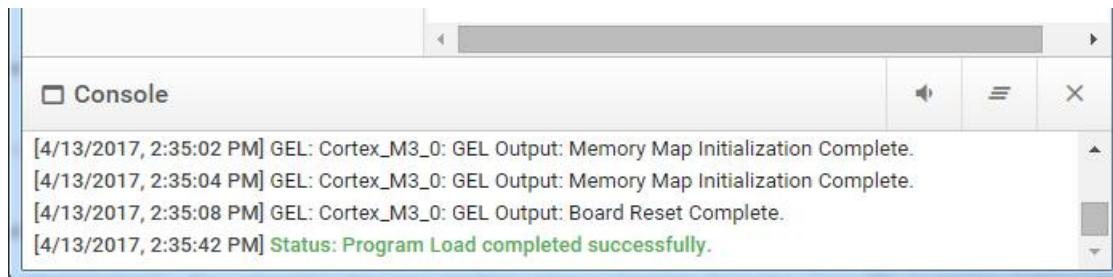


図 7. Successful Load

3.2.1.1.4 Programming the CC3220SF LaunchPad™

This section describes two ways of programming the CC3220SF LaunchPad. 3.2.1.1.4.1 explains the process of programming the CC3220SF LaunchPad by importing a preconfigured Image Creator project to UniFlash. 3.2.1.1.4.4 shows how to create an Image Creator project from scratch to program the CC3220SF with a binary generated from Code Composer Studio™ (CCS).

3.2.1.1.4.1 Programming a Preconfigured Image Creator Project

Note that only the IBM cloud service is provided in the preconfigured Image Creator project since the AWS IoT example needs extra configuration that need to be added and compiled in the source code.

1. Open UniFlash.
2. On the *Choose your Device* section select CC3220SF-LAUNCHXL, and make sure to select the *Serial* option and not *On-Chip* as shown in 図 8. Click on the *Start Image Creator* button.

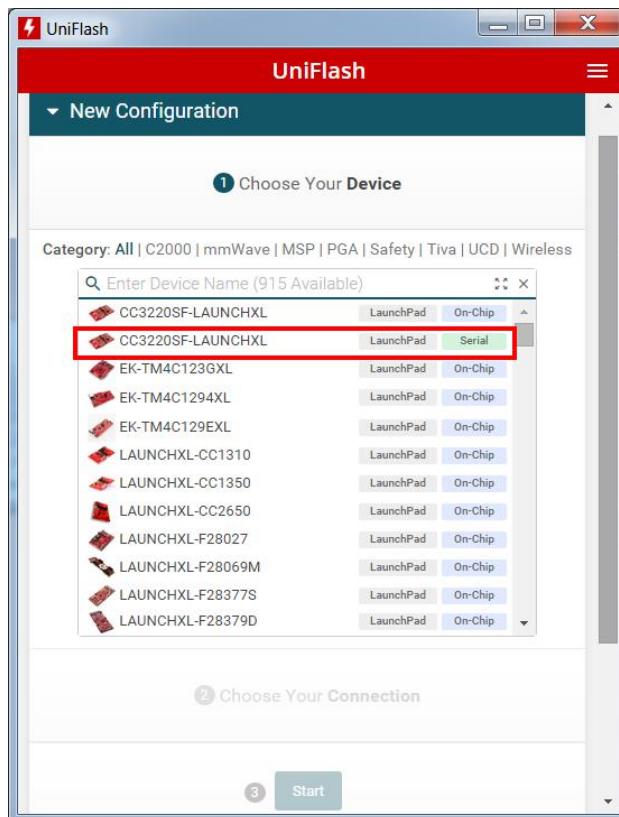


図 8. Choose Device: CC3220SF

3. After starting Image Creator, click on the *Manage Projects* button as shown in 図 9.

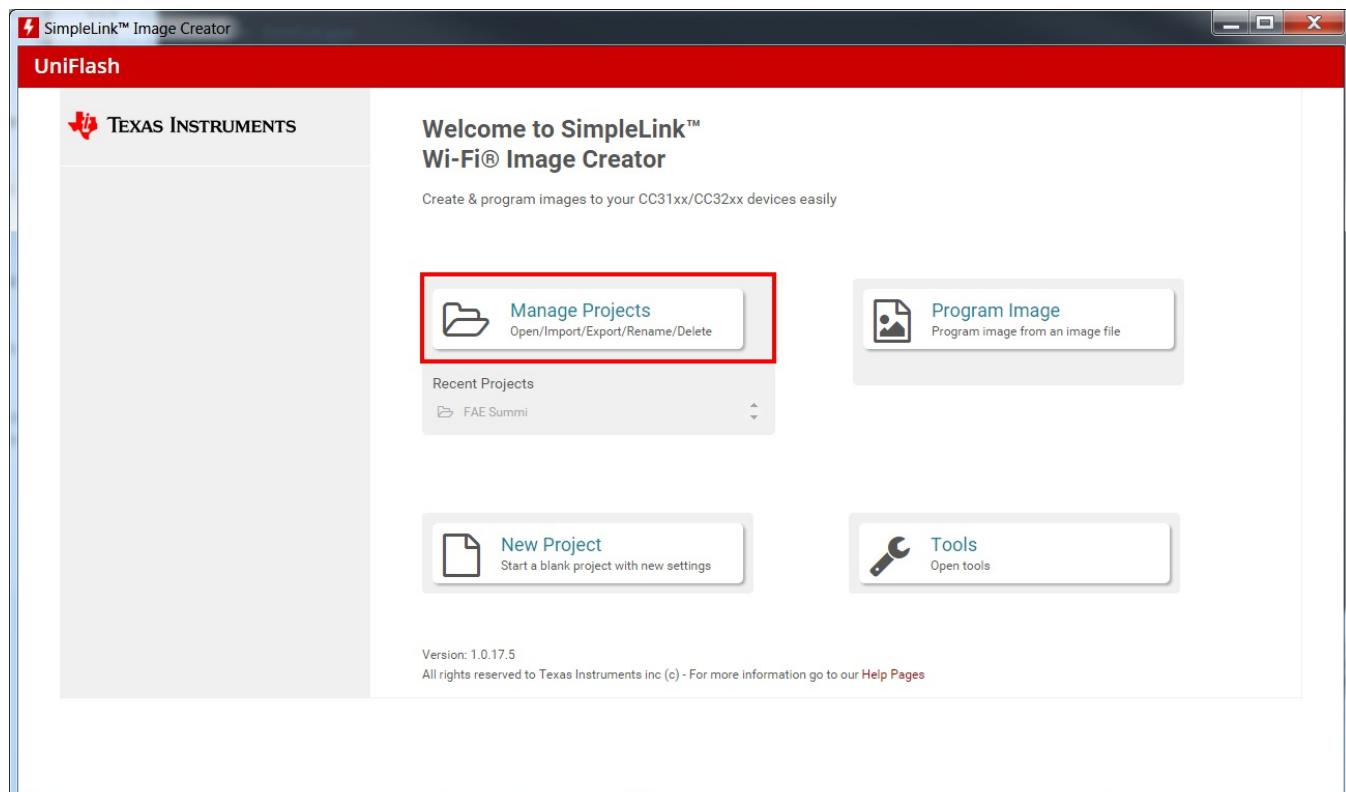


図 9. Manage Project

4. Click on the *Import Project from ZIP file* button, and select the zip folder `C:\<S2C_Repo_Directory>\tfdc01002\prebuilt\CC3220SF_LaunchXL\Uniflash_CC3220\ImageCreatorProject.zip`.

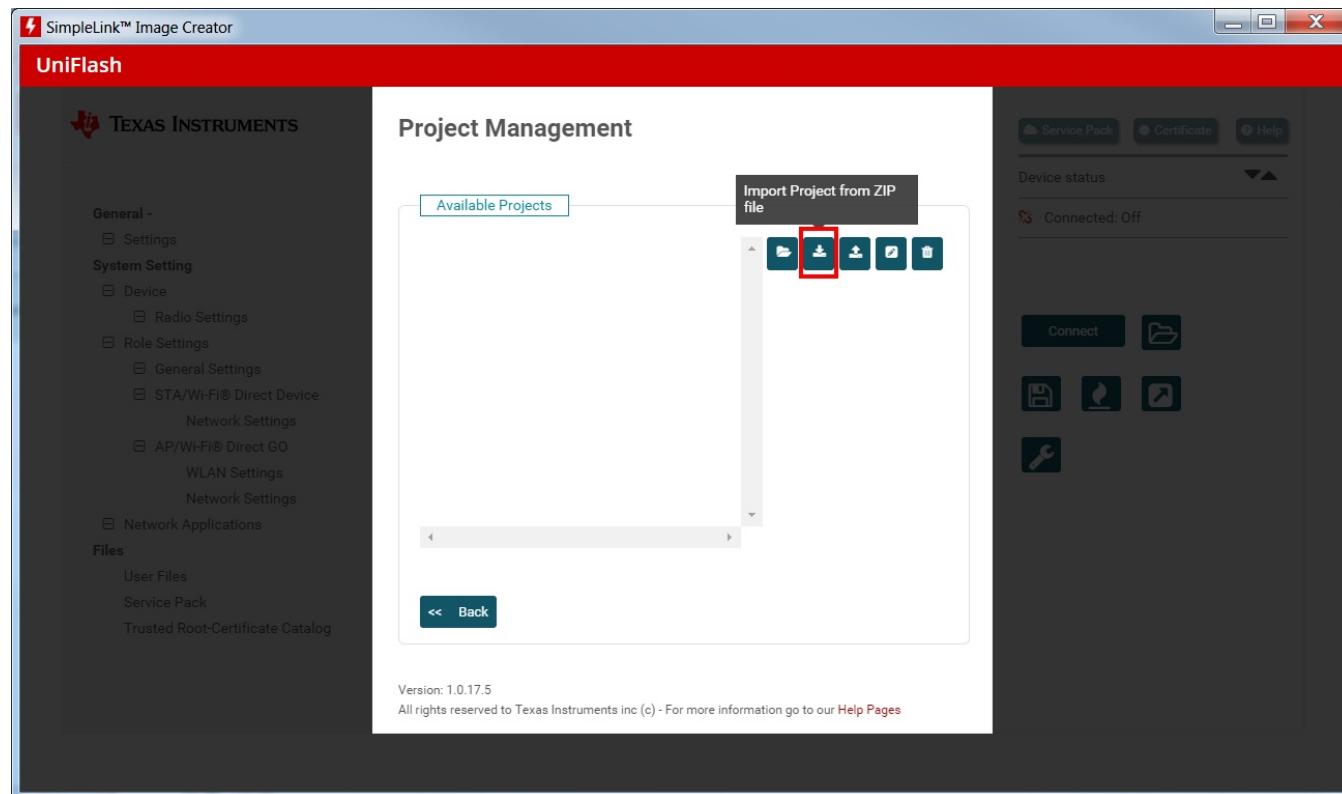


図 10. Import Project

5. Open the CC3220SF_154StackGtway project.

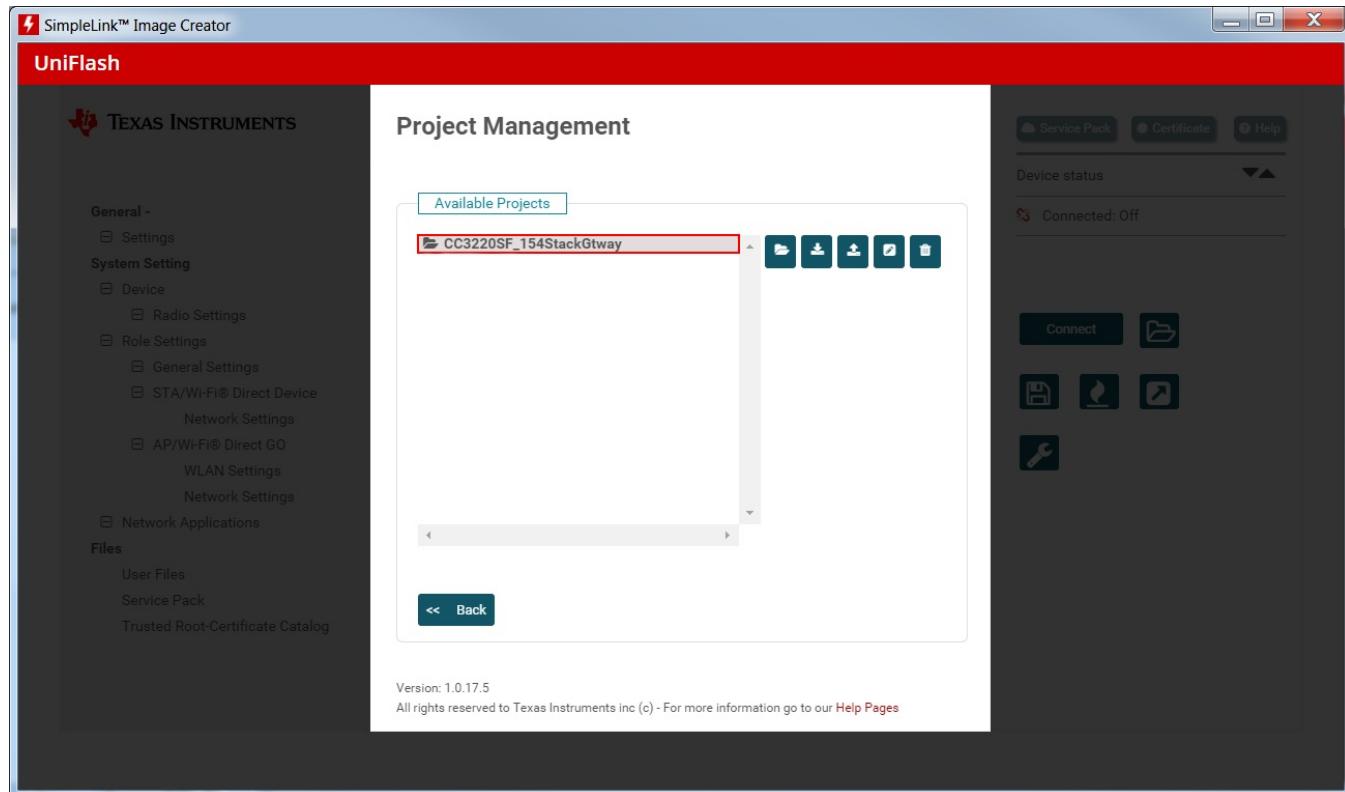


図 11. Open Project

6. Connect the device to the PC through a USB cable, and press the *Connect* button found on the bottom-right corner. Once the device is connected, select the *Generate Image* button underneath the *Disconnect* button, and select *Program Image (Create & Program)*.

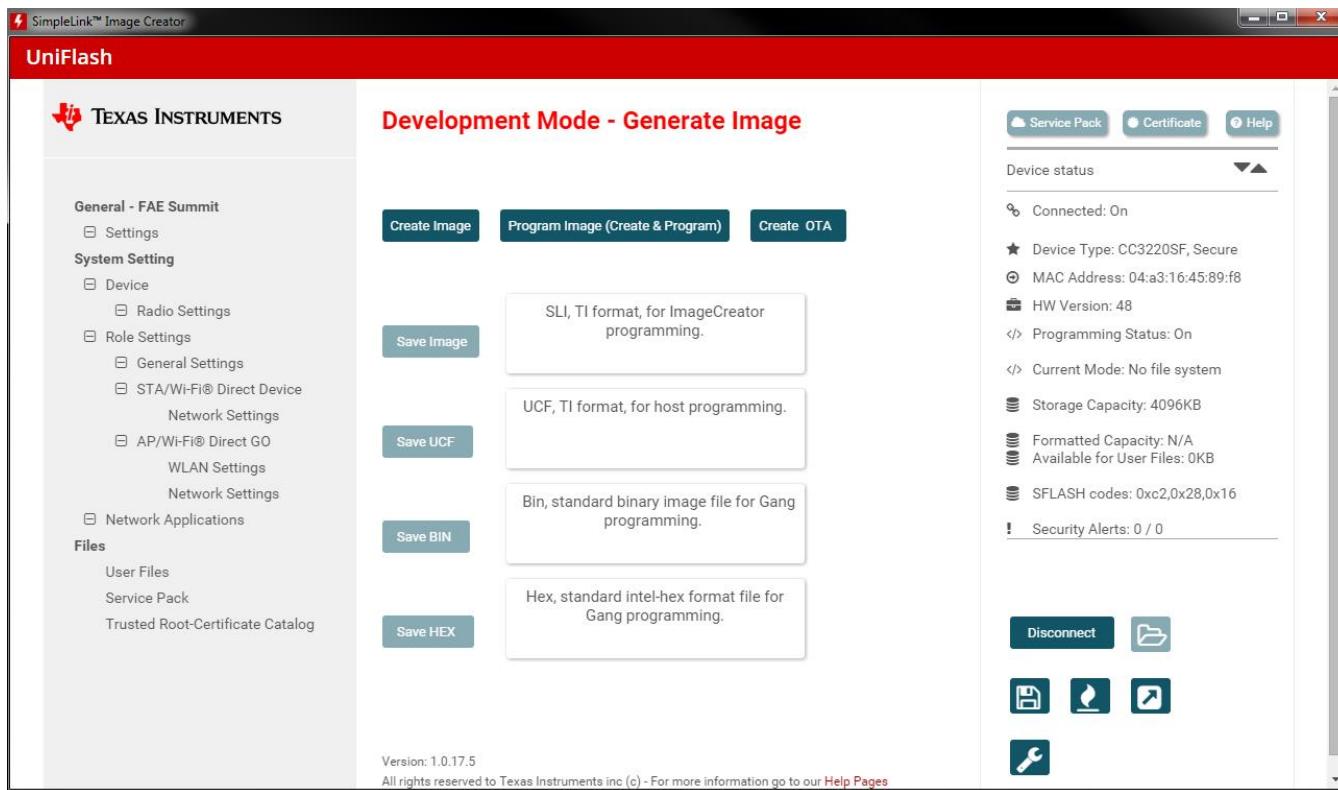


図 12. Generate Image

3.2.1.1.4.2 Importing Examples to Code Composer Studio (CCS)

1. Open CCS version 7.3.
2. It is assumed that the CC3220 SDK has already been installed in a directory referred to as `CC32XX_SDK_INSTALL_DIR`. If not, install the CC3220 SDK now as this example requires it.
3. Import the Gateway project by going to *File* → *Import* → *C/C++* → *CCS Projects*, and click on *Next*.

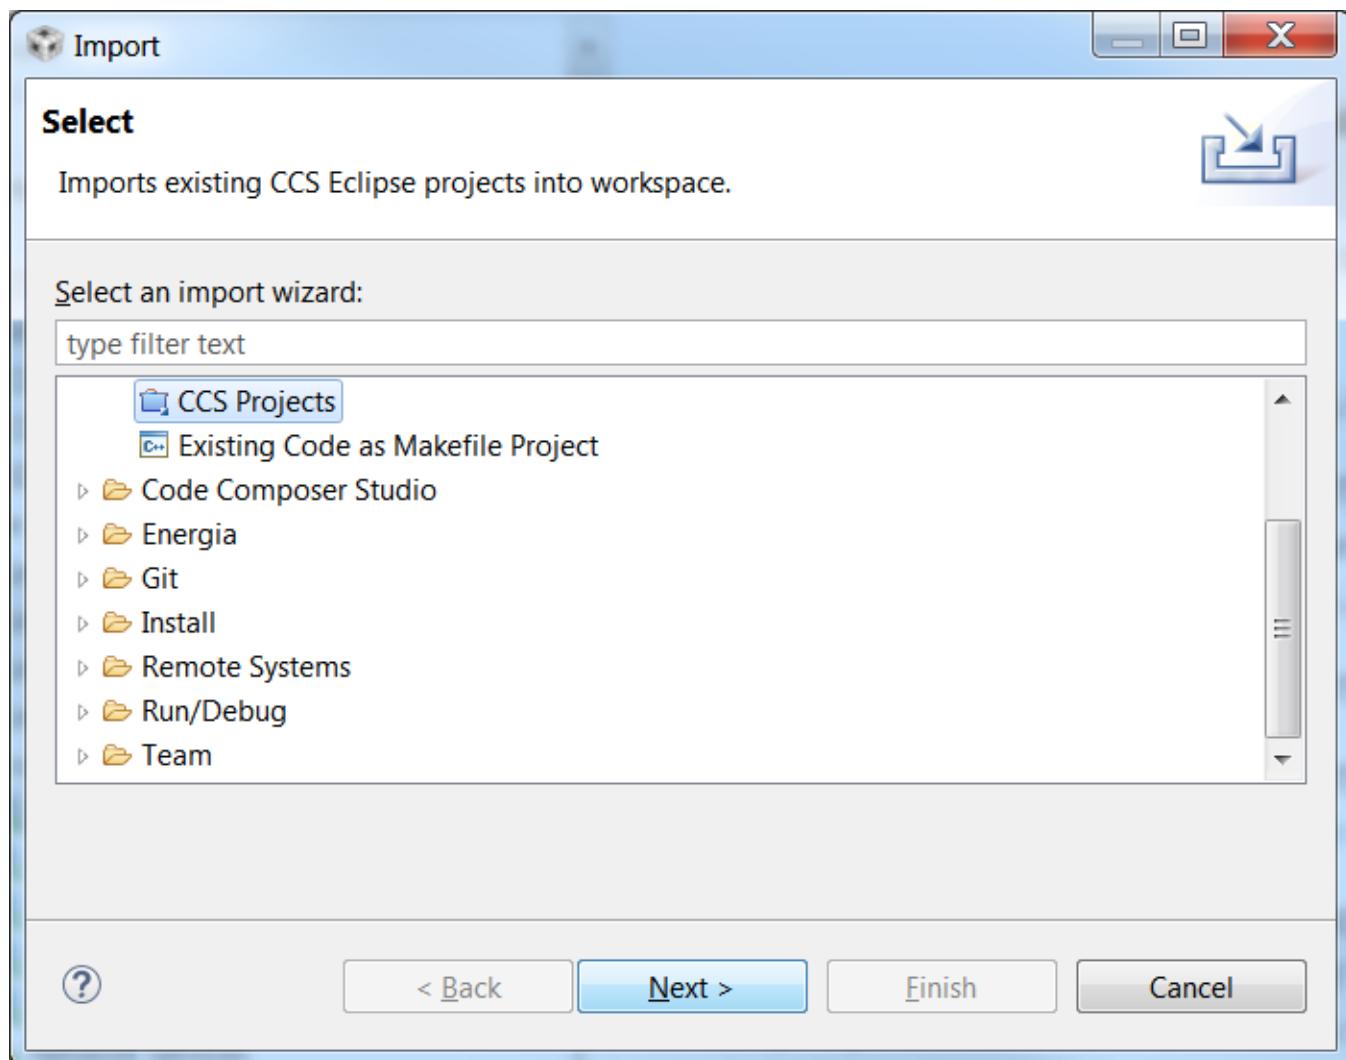


図 13. Select Project to Import

4. Click on *Browse...* and navigate to <S2C_Repo_Dir>\tidc01002\examples\cc3220sf_gateway_app.

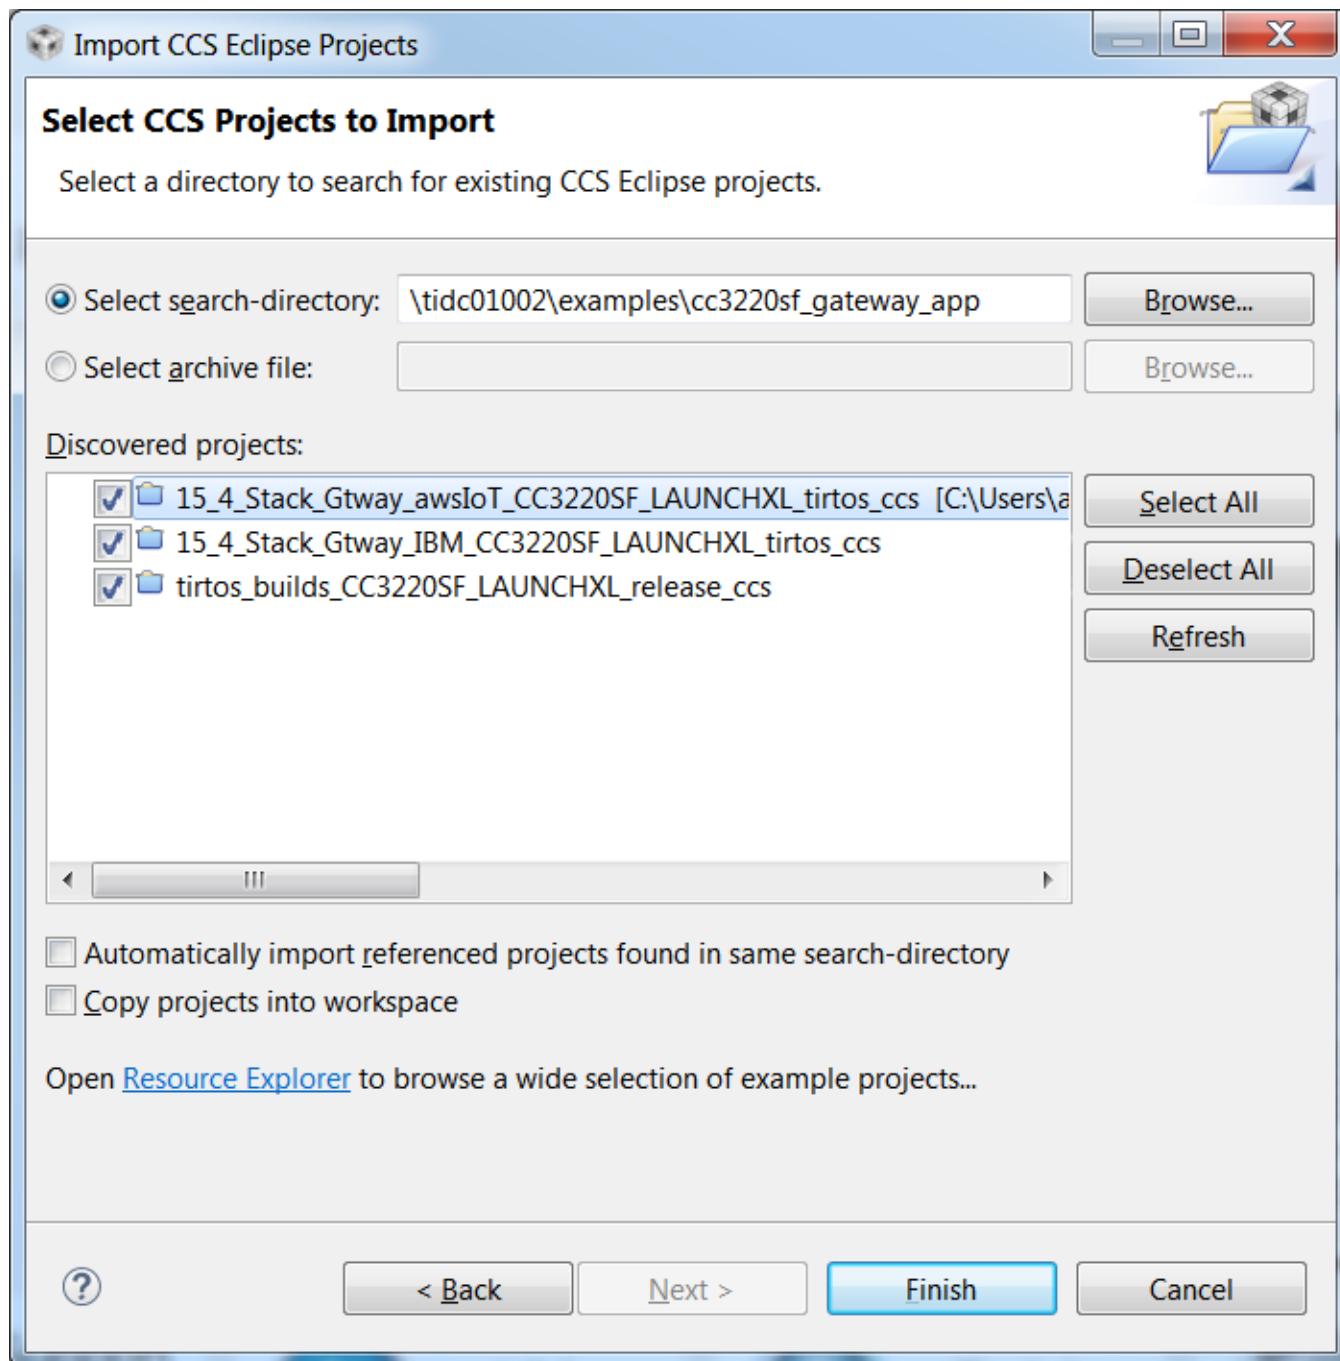


図 14. Select Projects to Import

5. Select the desired examples to be imported and click on *Finish*.
6. (*AWS Example Only*) Request AWS IoT demo configuration from StackArmor by filling out the following [form](#).
7. (*AWS Example Only*) Update the AWS configuration file:
 1. After receiving the certificates and configuration information from StackArmor open the `aws_iot_config.h` file, found in CloudService/AWS.
 2. Set the value of `AWS_IOT_MQTT_HOST` to the URL provided by StackArmor, it should look something like this "<https://<random-string>.iot.us-east-1.amazonaws.com>"

3. Modify AWS_IOT_MQTT_CLIENT_ID to a unique name for the device.
4. Replace the value of AWS_IOT_MY_THING_NAME with the extended address of the MAC-CoP LaunchPad.
5. Open the file certs.h, found in the CloudService/AWS directory.
6. Search for “USER STEP” and update the CA root certificate string, the client certificate string, and the client (private) key string.

8. Compile the example by clicking on the Build button ().
9. If the CC3220SF LaunchPad is already in developer mode, the example can be run and debugged directly from CCS by clicking on the debug button ().
10. If the CC3220SF Launchpad is not in developer mode, follow [3.2.1.1.4.4](#) to flash and run the example.

3.2.1.1.4.3 Compiling the Mac-CoP from Source

These are optional steps if there is a need to re-compile the Mac-CoP firmware for the gateway as opposed to using the prebuilt CoP firmware.

When re-compiling the Mac CoP firmware, the pin configuration for the UART needs to be modified since the default Mac CoP example in the CC13xx SDK uses IOID 3 and IOID 2 pins for UART and the gateway uses IOID 11 and IOID 9. See steps below to modify the pin configuration.

1. Import the **coprocessor** example from the CC13xx SDK to CCS
2. Open the file CC13X0_LAUNCHXL.h and modify the two lines shown below.

```
/* UART Board */
#define Board_UART_RX           IOID_9          /* RXD */
#define Board_UART_TX           IOID_11         /* TXD */
```

3. Now rebuild the example and flash it into the CC13xx LaunchPad

3.2.1.1.4.4 Creating an Image Creator Project in UniFlash

The following steps will allow the user to customize the example and use the new, updated files instead of the pre-build ones.

1. Open UniFlash.
2. On the *Choose your Device* section, select CC3220SF-LAUNCHXL. Make sure the *Serial* option is selected and not *On-Chip* as shown in [図 15](#). Click on the *Start Image Creator* button.

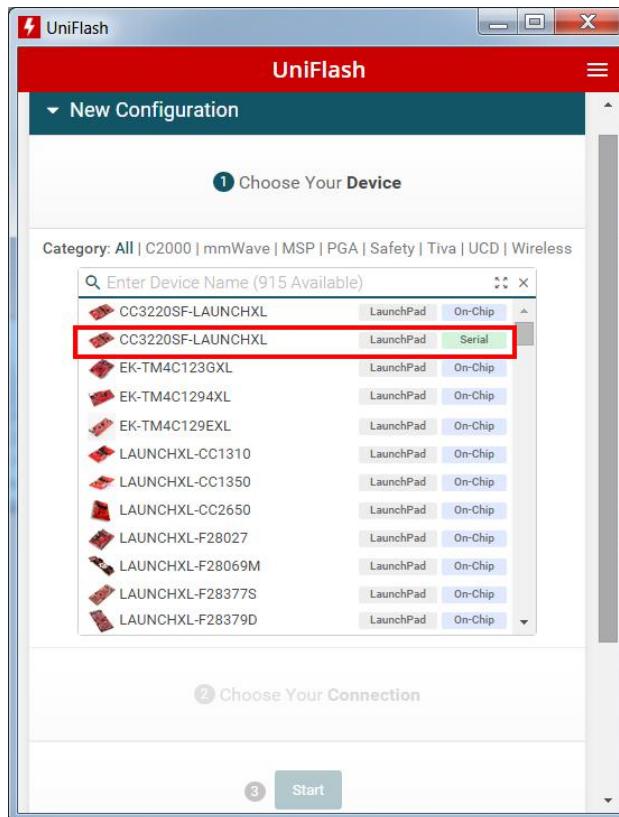


図 15. Select CC3220 Device

3. After starting Image Creator, click on the *New Project* button as in 図 16.

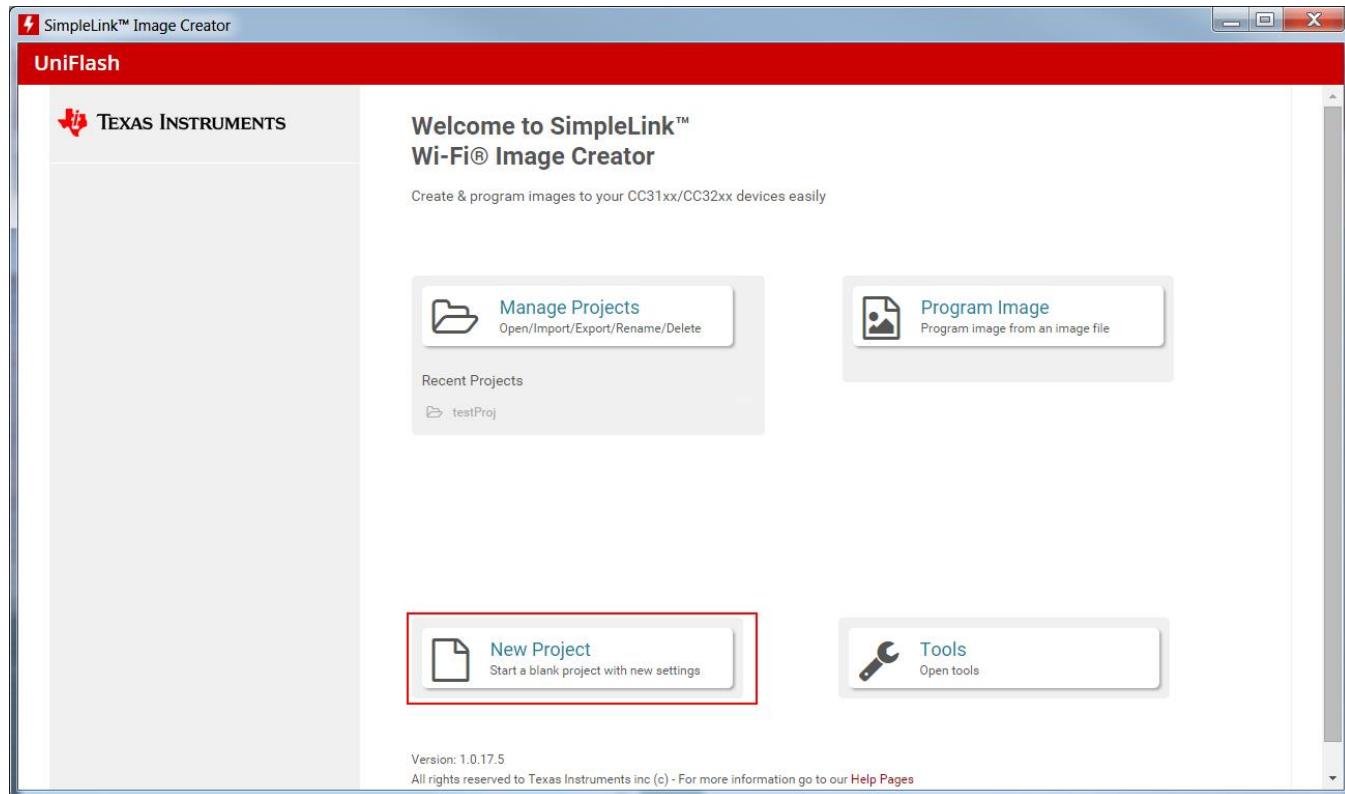


図 16. New Project

4. Enter a project name, select *CC3220SF* in the *Device Type* drop-down menu, make sure device mode is in *Develop*, and click on the *Create Project* button.

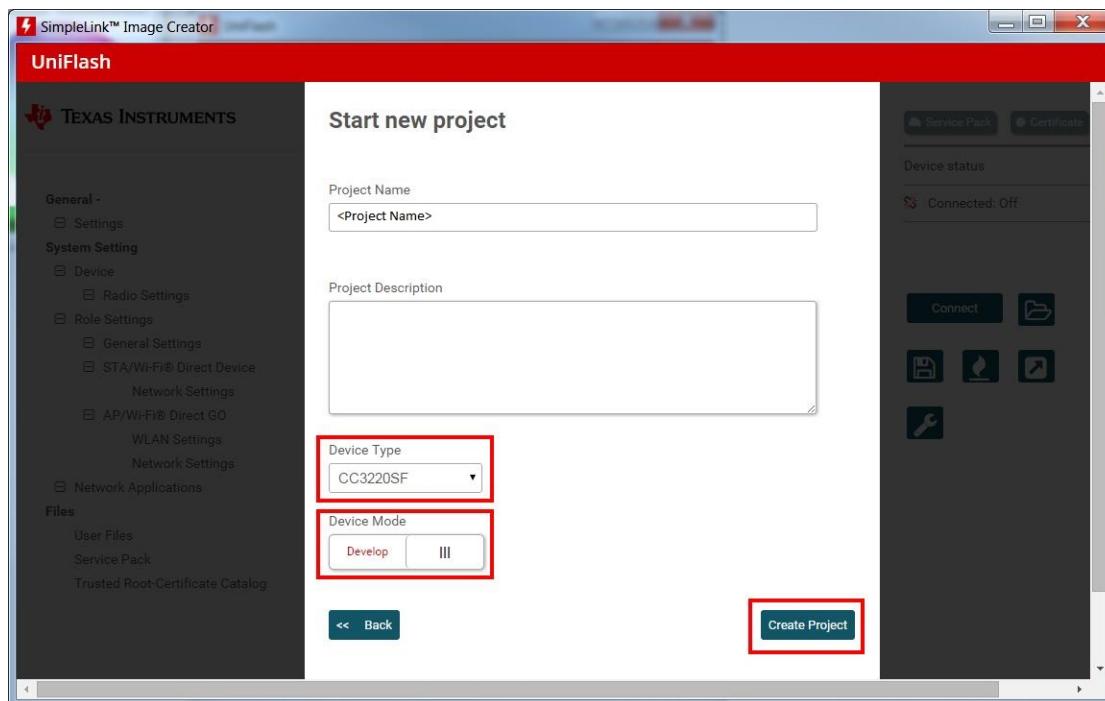


図 17. Starting a New Project

5. Select *Trusted Root-Certificate Catalog* in the bottom-left corner and uncheck the *Use default Trusted Root-Certificate Catalog* box. Include the *Source File* (*certcatalogPlayGround20160911.lst*) and *Signature Source File* (*certcatalogPlayGround20160911.lst.signed.bin*) found in *C:\ti\simplelink_cc32xx_sdk_1_50_00_06\tools\cc32xx_tools\certificate-catalog*.

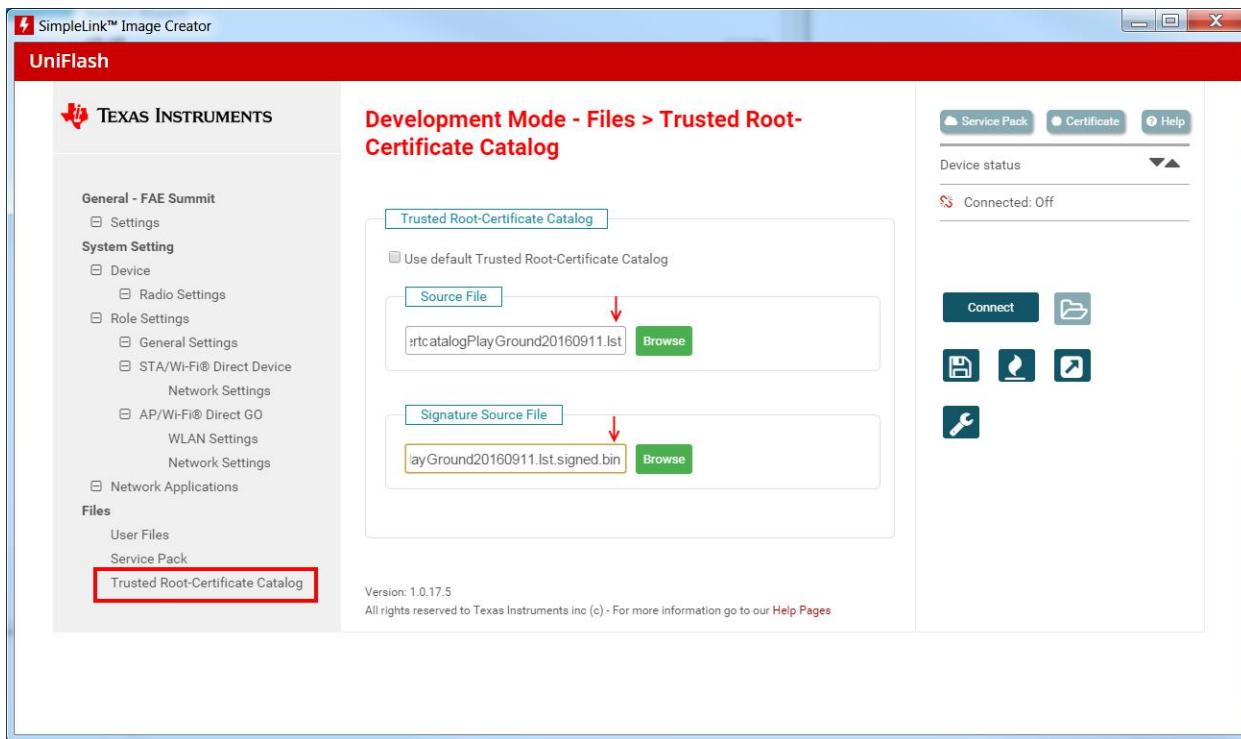


図 18. Trusted Root Certificates

6. Select Service Pack in the bottom-left corner and include the service pack bin (*sp_3.3.0.0_2.0.0.0_2.2.0.4.bin*) found in *C:\ti\simplelink_cc32xx_sdk_1_50_00_06\tools\cc32xx_tools\servicepack-cc3x20*.

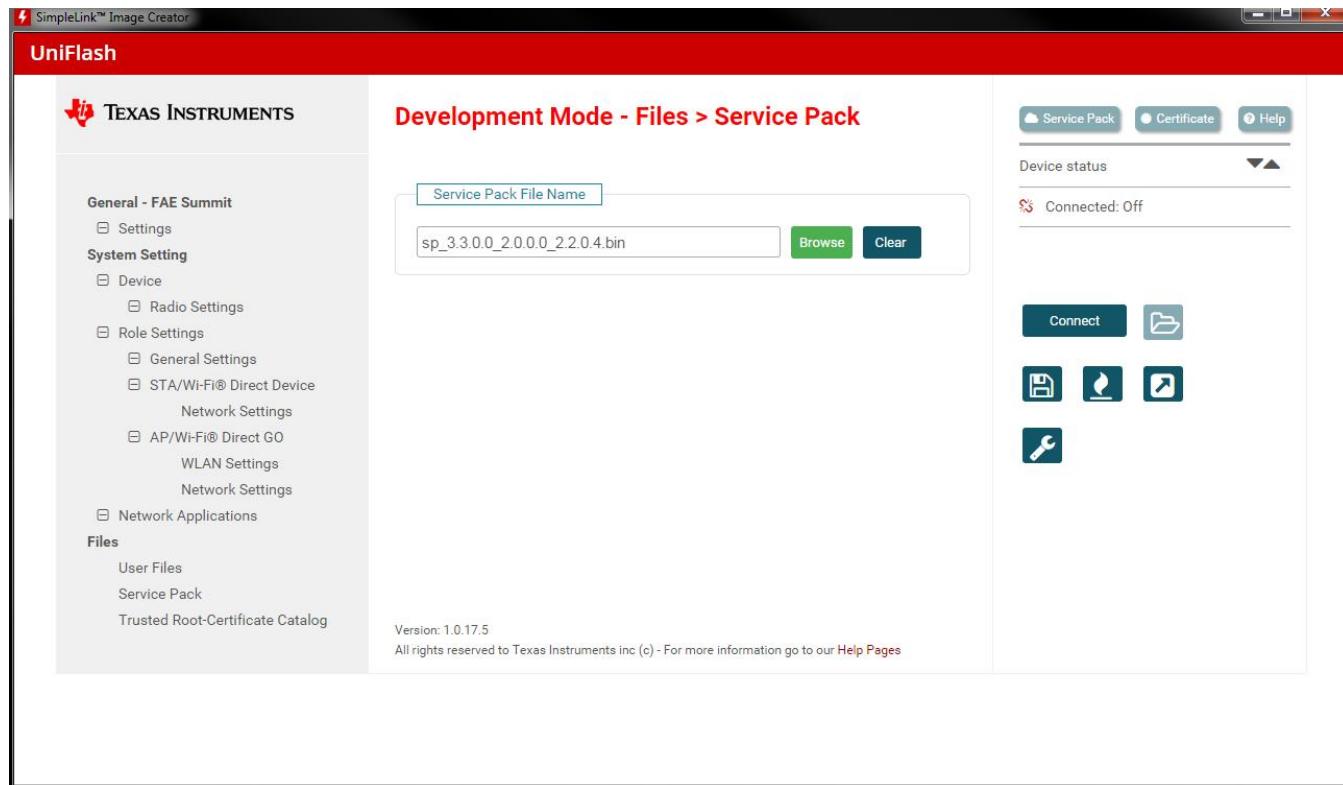


図 19. Service Pack

7. Select *User Files* and include the *dummy-root-ca-cert* and *dummy-root-ca-cert-key* files by clicking on the *Add File* icon. These files can be found in *C:\ti\simplelink_cc32xx_sdk_1_50_00_06\tools\cc32xx_tools\certificate-playground*. Create a folder named *www* by clicking on the *New Folder* icon. This folder will contain all the web server required files.

注: When adding the files do not select any of the options in the pop-up window—just click the *Write* button.

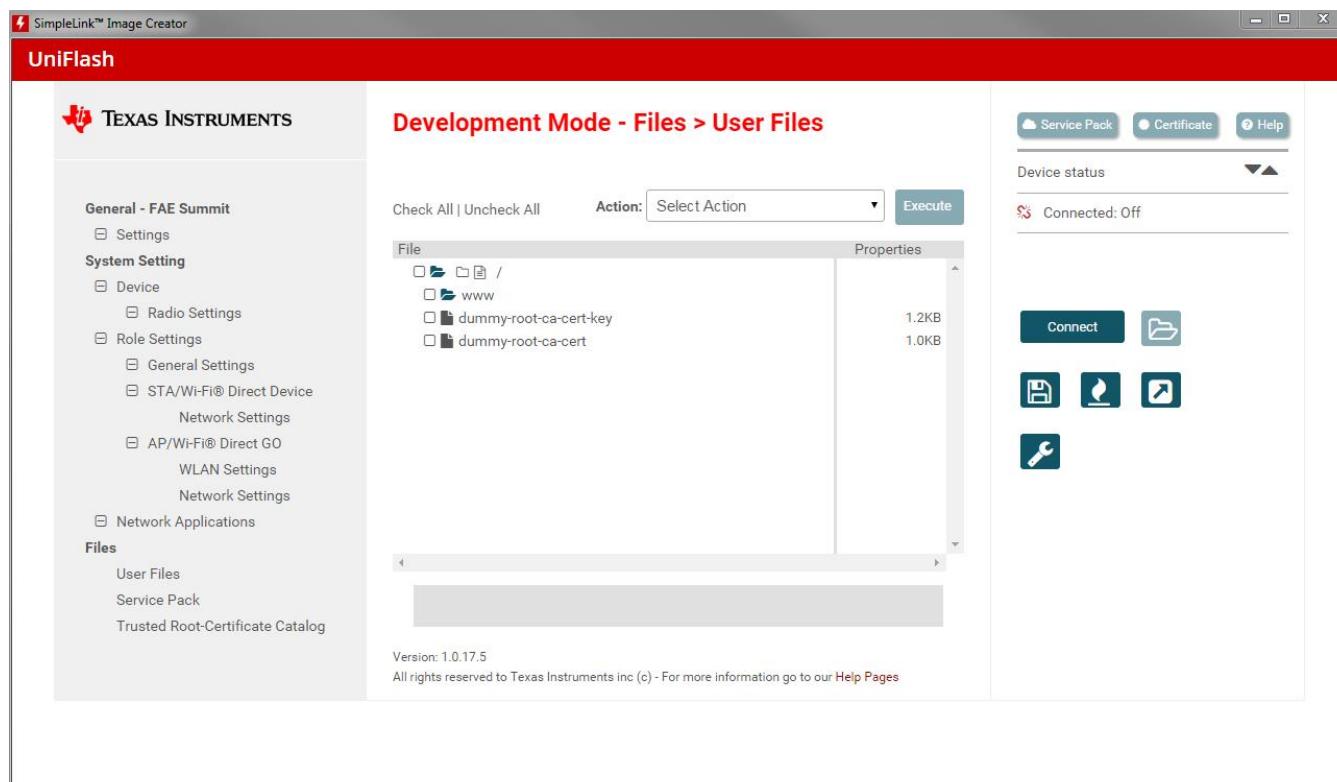


図 20. User Files

8. Go to the following directory: *C:\<S2C Repo Directory>\tidc01002\src\www*, and recreate the same folder structure in the *www* folder in the devices *User Files*.

9. After creating all the folders in the www folder, transfer all the files in C:\S2C Repo Directory>\tidec01002\src\www to the www folder of the device.

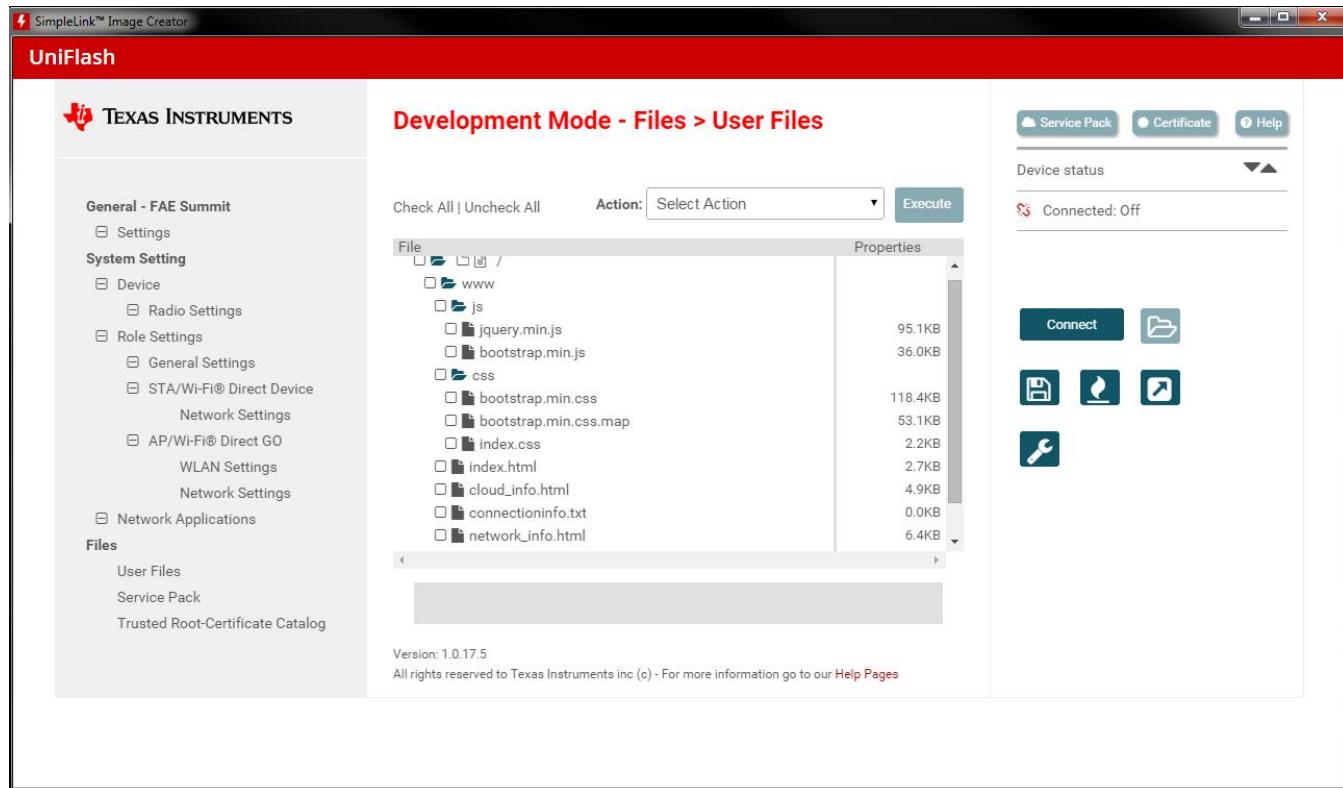


図 21. www Folder

10. On the drop-down box in the top-right corner, select *Select MCU Image*, and press *Browse*.

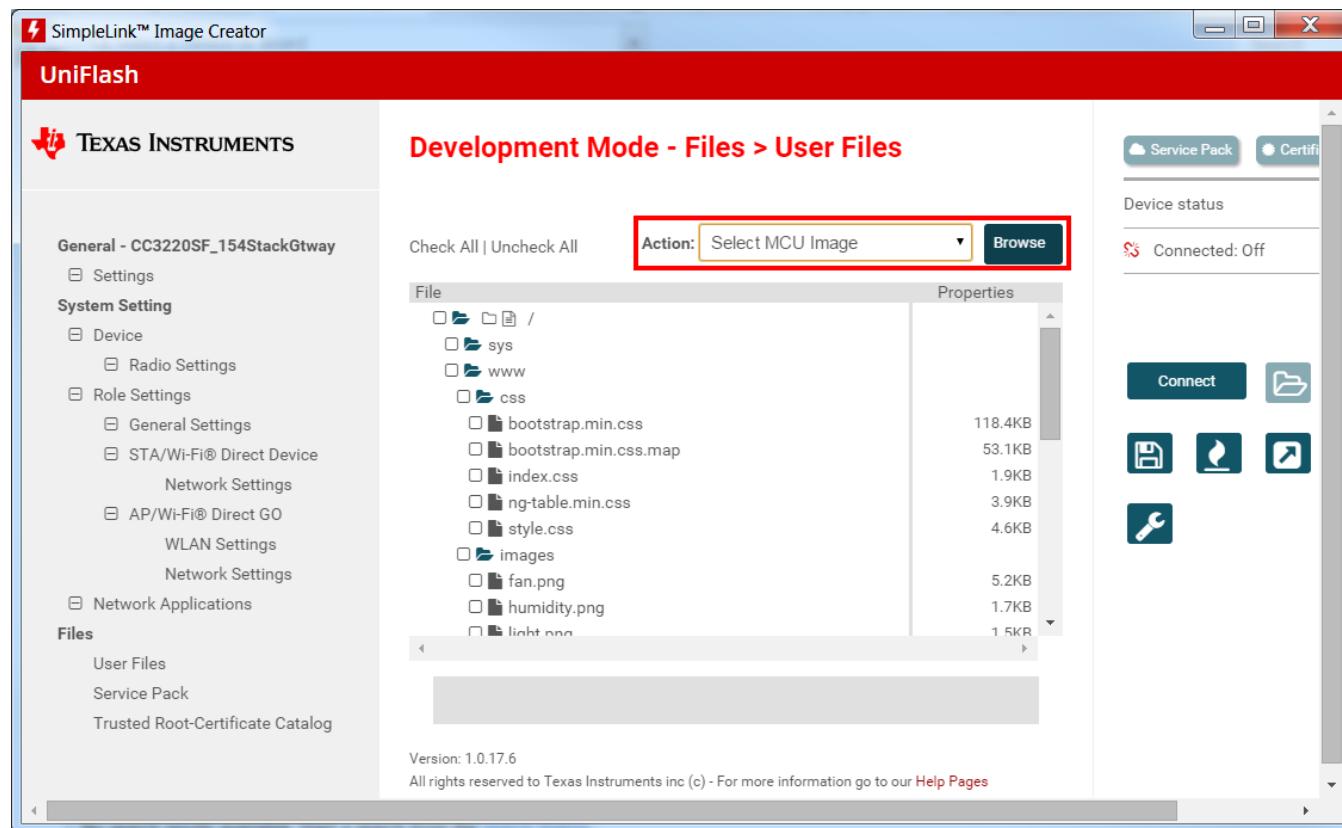


図 22. Select MCU Image

11. Navigate to the examples directory (<S2C Repo

Directory>\tidc01002\examples\cc3220sf_gateway_app). Go into the directory of the example to be programmed in the CC3220sf and then go to the Debug folder. If the example has been successfully compiled in CCS then the Debug folder should have the files shown in 図 23. Select the .bin file.

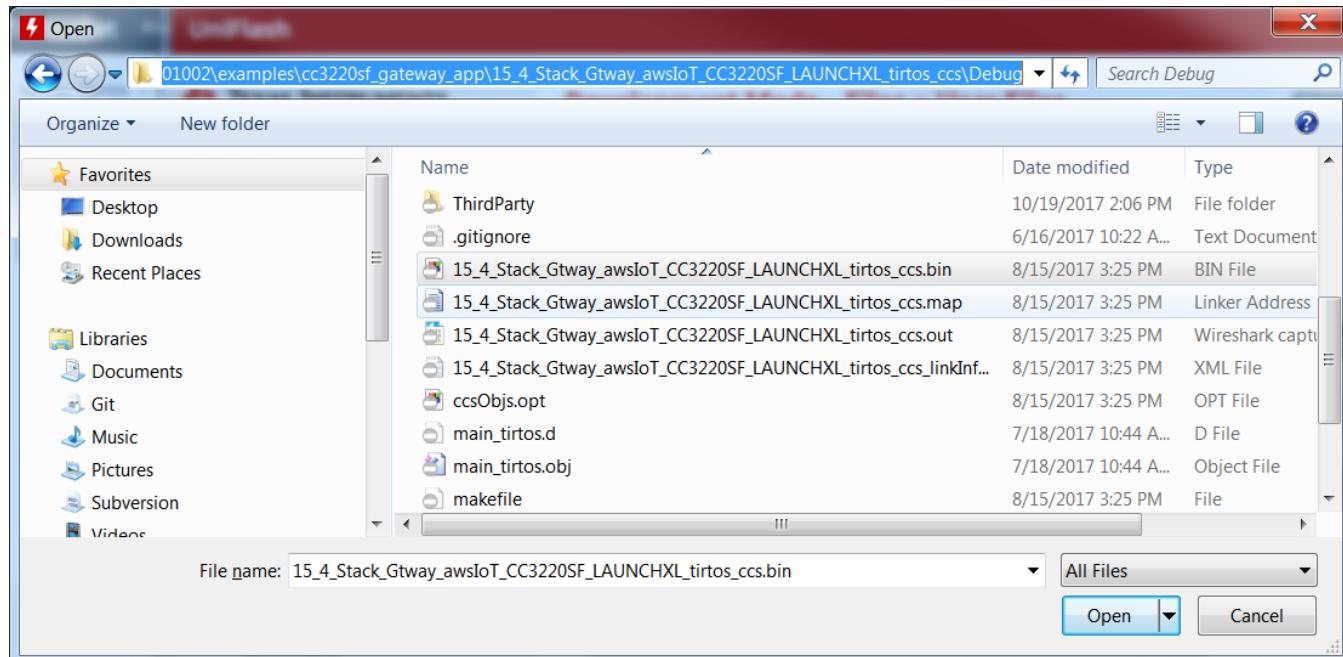


図 23. Select Desired Example Binary

12. On the next menu select *Private Key Name*: and include the dummy-root-ca-cert-key. On the *Certification File Name*: select *dummy-root-ca-cert* from the list.

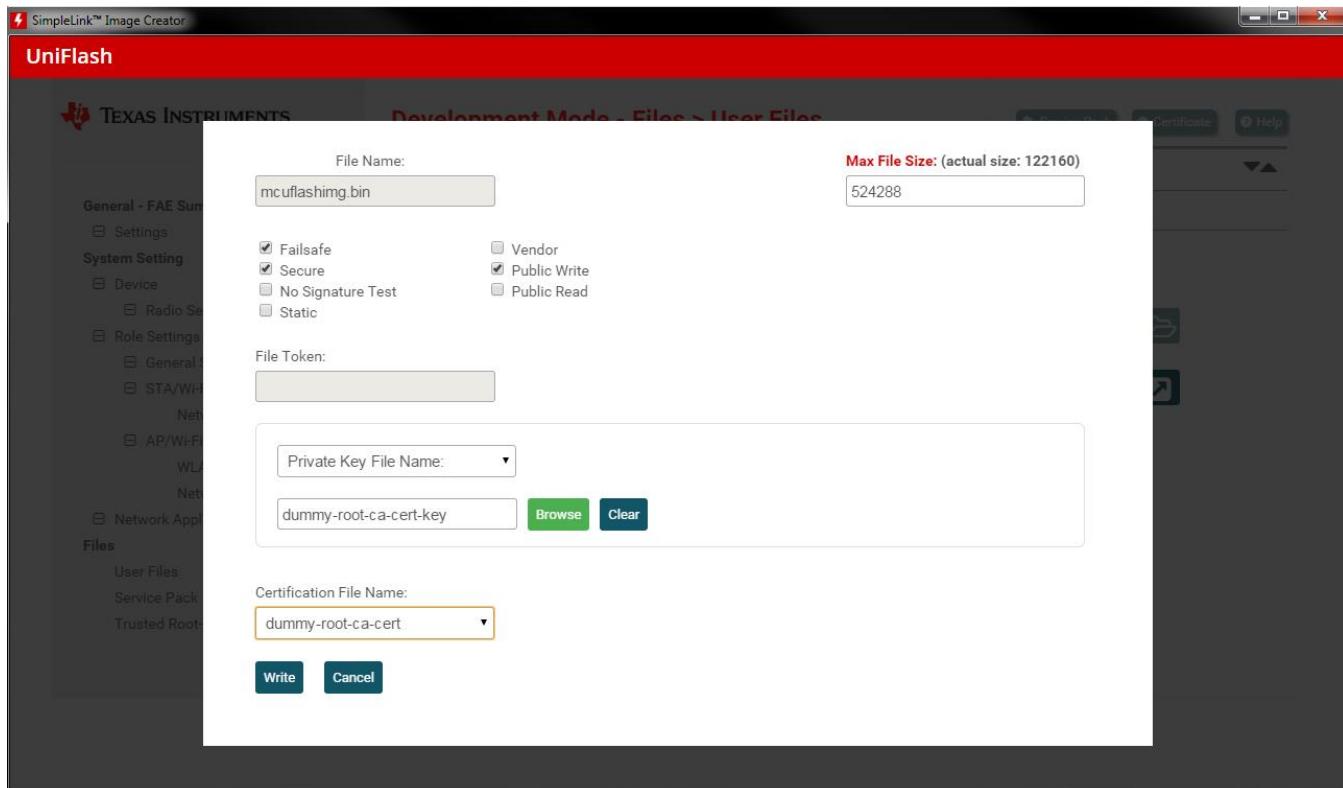


図 24. Select MCU Image

13. Connect the device to the PC through a USB cable, and press the *Connect* button found on the bottom-right corner. Once the device is connected, select the *Generate Image* button underneath the *Disconnect* button. Select *Program Image (Create & Program)*.

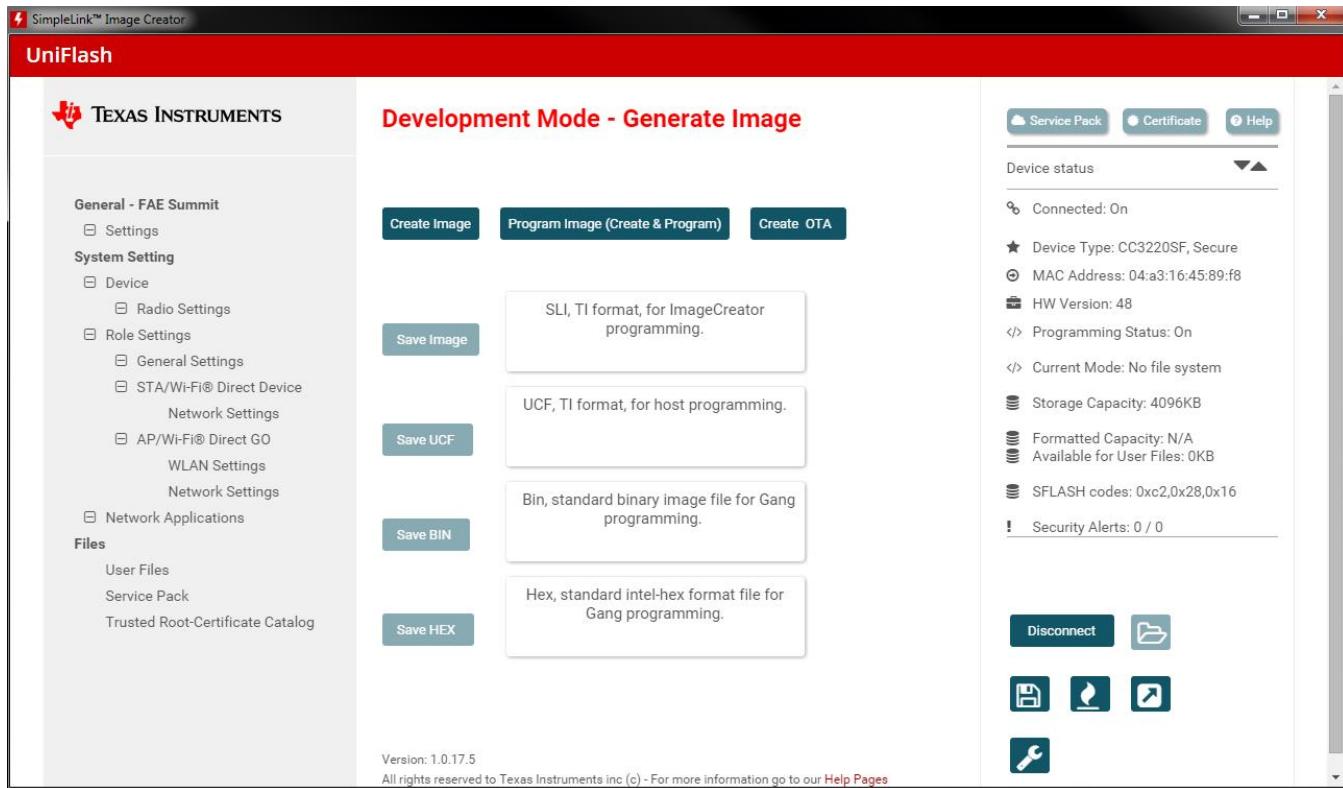


図 25. Generate Image

3.2.1.1.5 Connecting the MAC-CoP and the CC3220SF LaunchPad™

The following procedure applies for both CC13x0 and CC13x2.

1. Remove all jumpers at the center of the *MAC-CoP LaunchPad* except the *Reset* jumper highlighted in green. Also move the *VSENSE* jumper highlighted in blue in [図 26](#) to the *Extern Pwr* position.

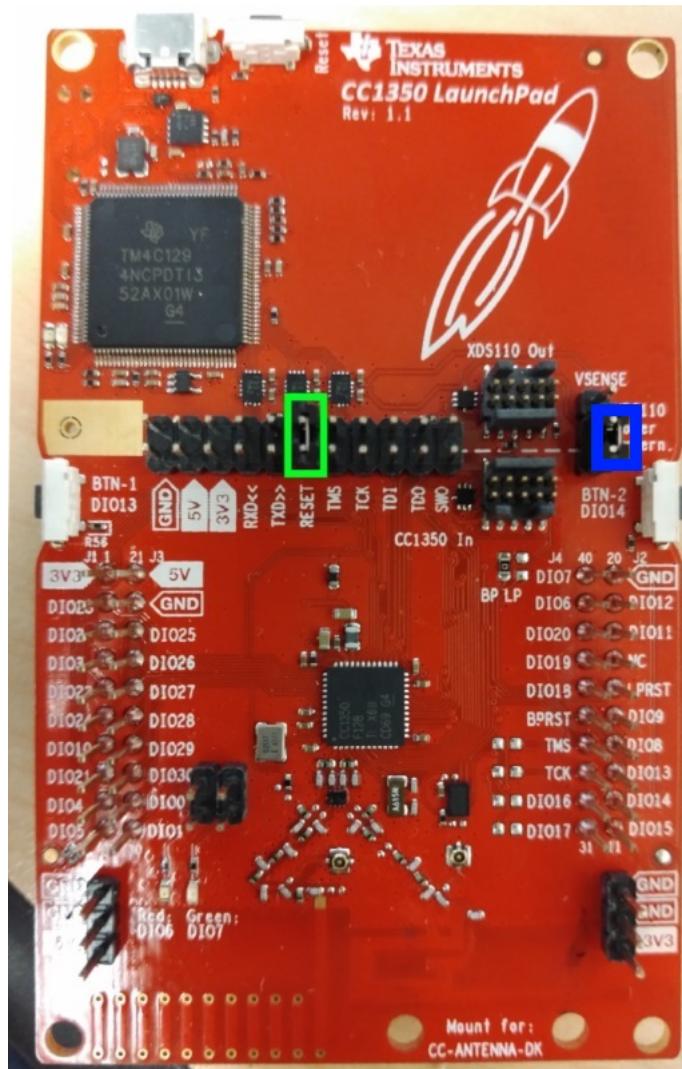


図 26. CC1350 LaunchPad™

2. Stack both LaunchPad development kits on top of each other as shown in 図 27.

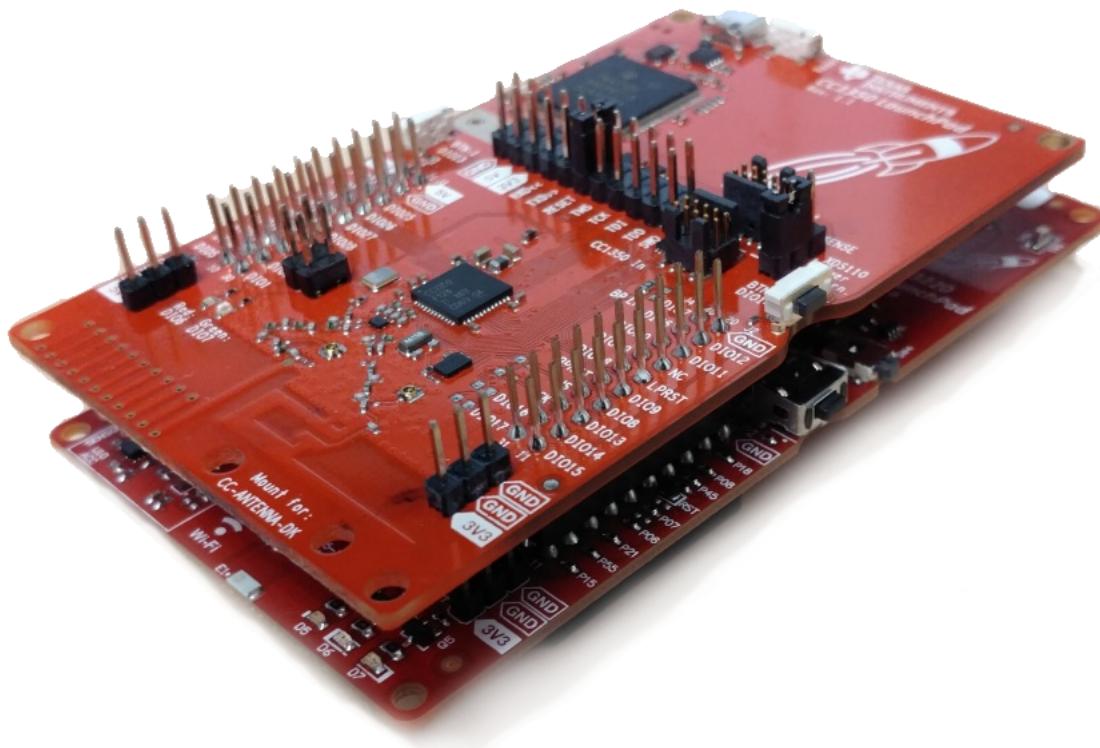


図 27. Stacked CC1350 and CC3220SF LaunchPad™ Development Kits

3. Connect a USB cable only to the CC3220 LaunchPad, and plug it in the PC.
4. Open a serial console (such as, PuTTy or Tera Term), select the COM port associated to the CC3220SF LaunchPad, and use the configuration below:
 - Baud Rate: 115200
 - Data: 8bit
 - Parity: none
 - Stop: 1bit
 - Flow Control: none
5. Press the Reset button on the CC13x0 or CC13x2 LaunchPad attached to the CC3220SF, if the setup was successful, some debug logs should be displayed on the terminal..

3.2.1.1.6 Open and Configure an IBM Cloud™ Account

1. It is assumed that all the required software has already been installed. If not, install the required software now.
2. Go to [IBM Cloud](#), click sign up if to create an account or log in if you already have an account.
3. Once logged in, click on the *Catalog* tab located on the top-right corner.


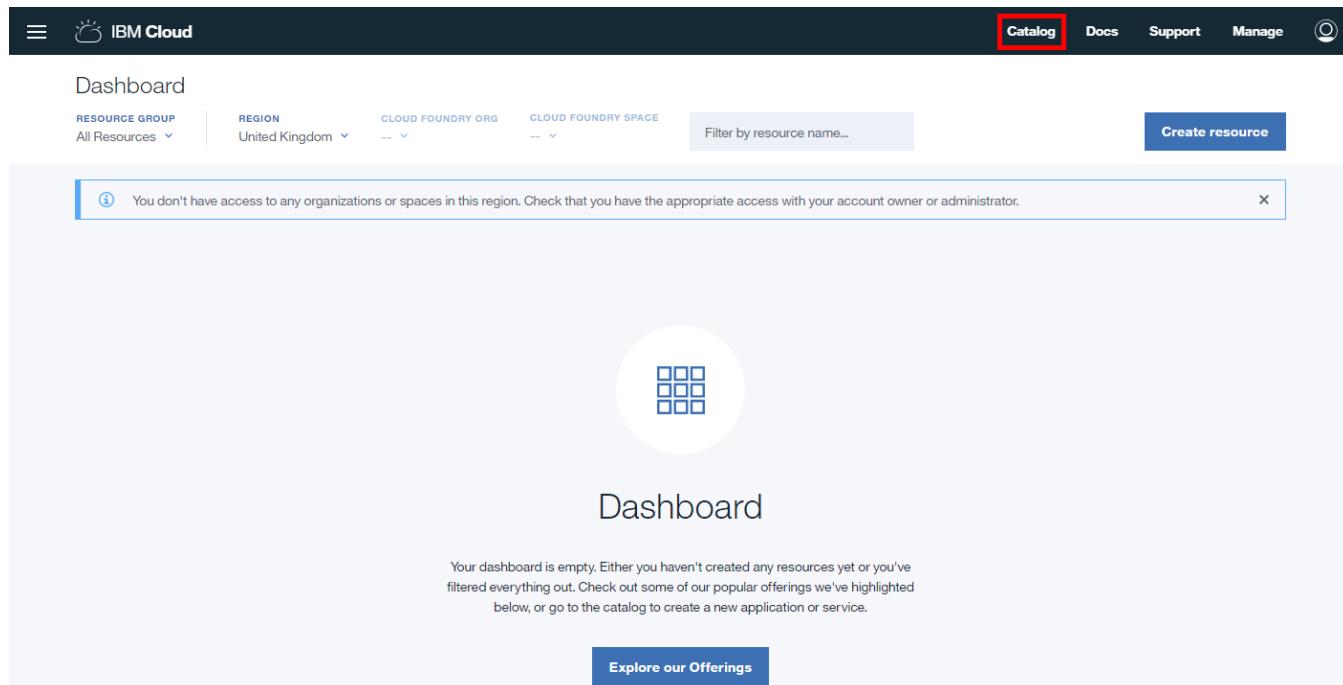


図 28. IBM® Cloud


4. After selecting Catalog, click on *Cloud Foundry Apps* on the left menu.

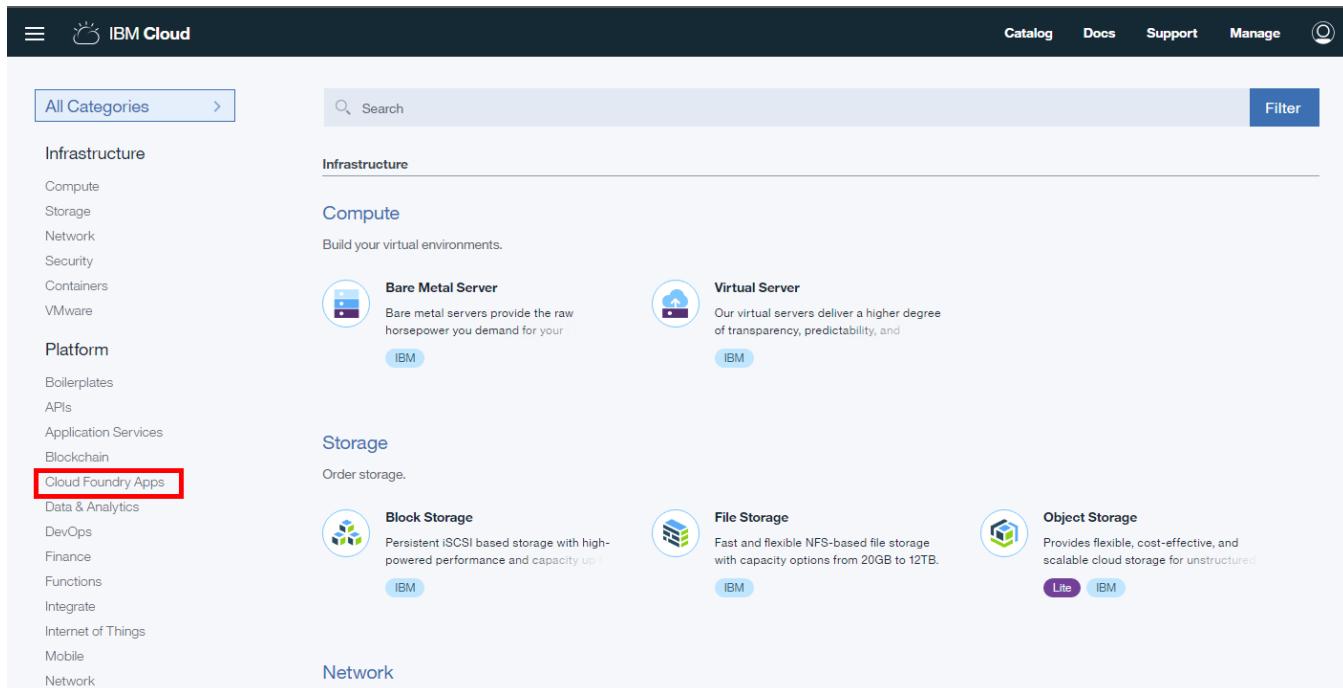

The screenshot shows the IBM Cloud Catalog interface. On the left sidebar, under the 'Cloud Foundry Apps' category, the 'SDK for Node.js' option is highlighted with a red box. The main content area displays various cloud storage options: Bare Metal Server, Virtual Server, Block Storage, File Storage, and Object Storage. Each option includes a brief description and an IBM logo.

図 29. IBM Cloud™ Catalog


5. Choose *SDK for Node.js* from the options provided.

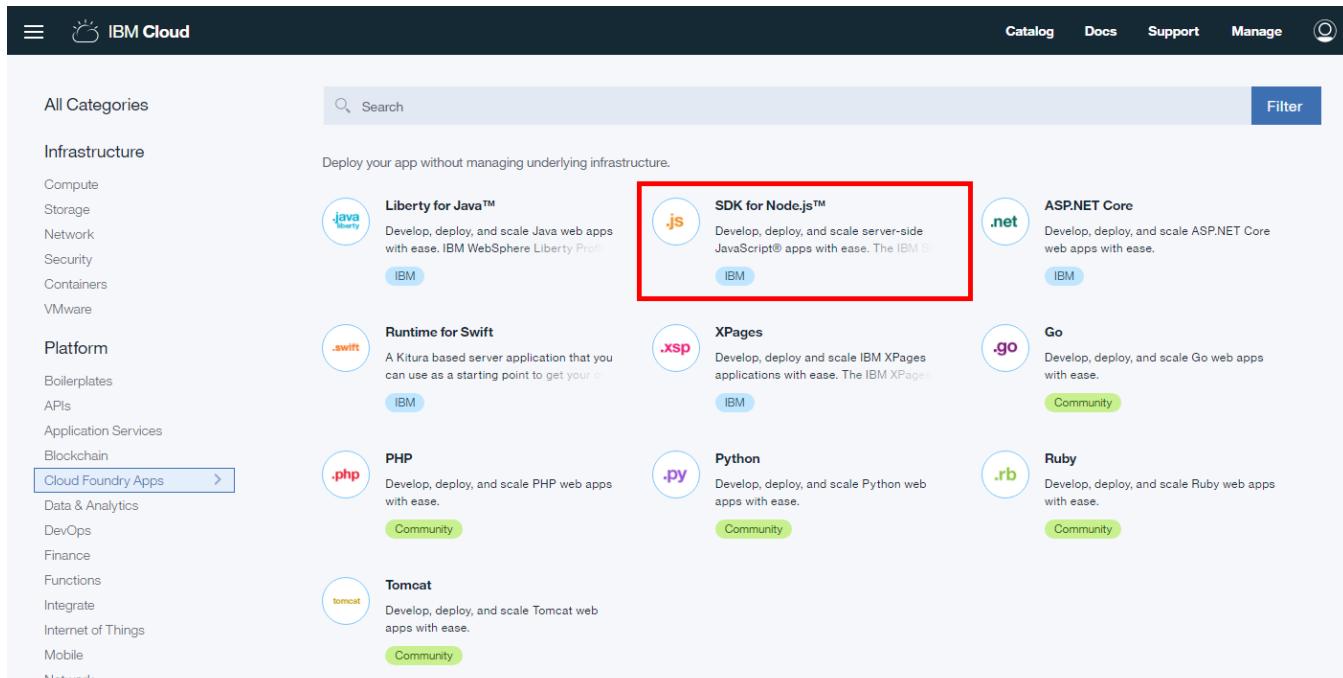

The screenshot shows the IBM Cloud Catalog interface. The 'Cloud Foundry Apps' section is selected on the left sidebar. In the main content area, the 'SDK for Node.js' option is highlighted with a red box. Other available options include Liberty for Java, ASP.NET Core, Runtime for Swift, XPages, Go, PHP, Python, Ruby, and Tomcat. Each option has a corresponding icon and a brief description.

図 30. Create Node.js Application

6. Enter a name for the new Node.js application under the *App name* text box, and press the *Create* button on the bottom-right corner.

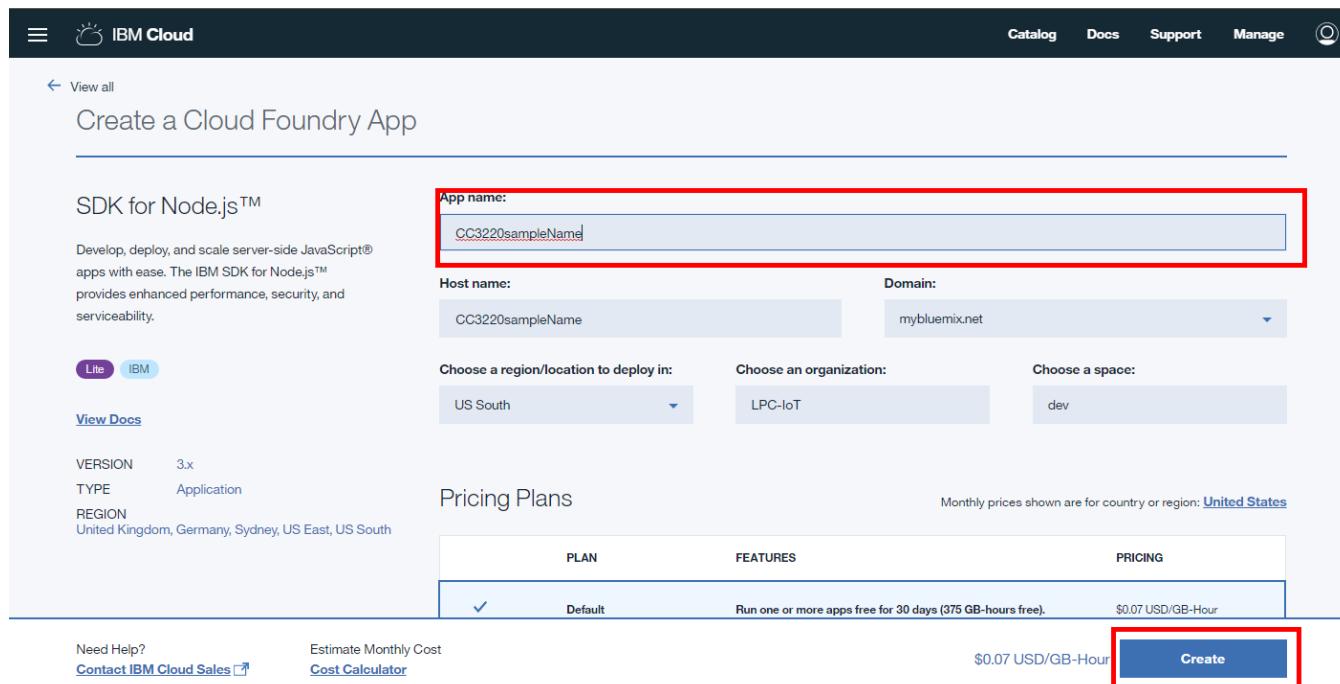

SDK for Node.js™

Develop, deploy, and scale server-side JavaScript® apps with ease. The IBM SDK for Node.js™ provides enhanced performance, security, and serviceability.

Host name: CC3220sampleName **Domain:** mybluemix.net

Choose a region/location to deploy in: US South **Choose an organization:** LPC-IoT **Choose a space:** dev


Pricing Plans

PLAN	FEATURES	PRICING
Default	Run one or more apps free for 30 days (375 GB-hours free).	\$0.07 USD/GB-Hour

Need Help? [Contact IBM Cloud Sales](#) [Cost Calculator](#) Estimate Monthly Cost [Cost Calculator](#) \$0.07 USD/GB-Hour **Create**

図 31. Name and Create Application

7. Once the app has been created, click on the *Catalog* tab located on the top-right corner.

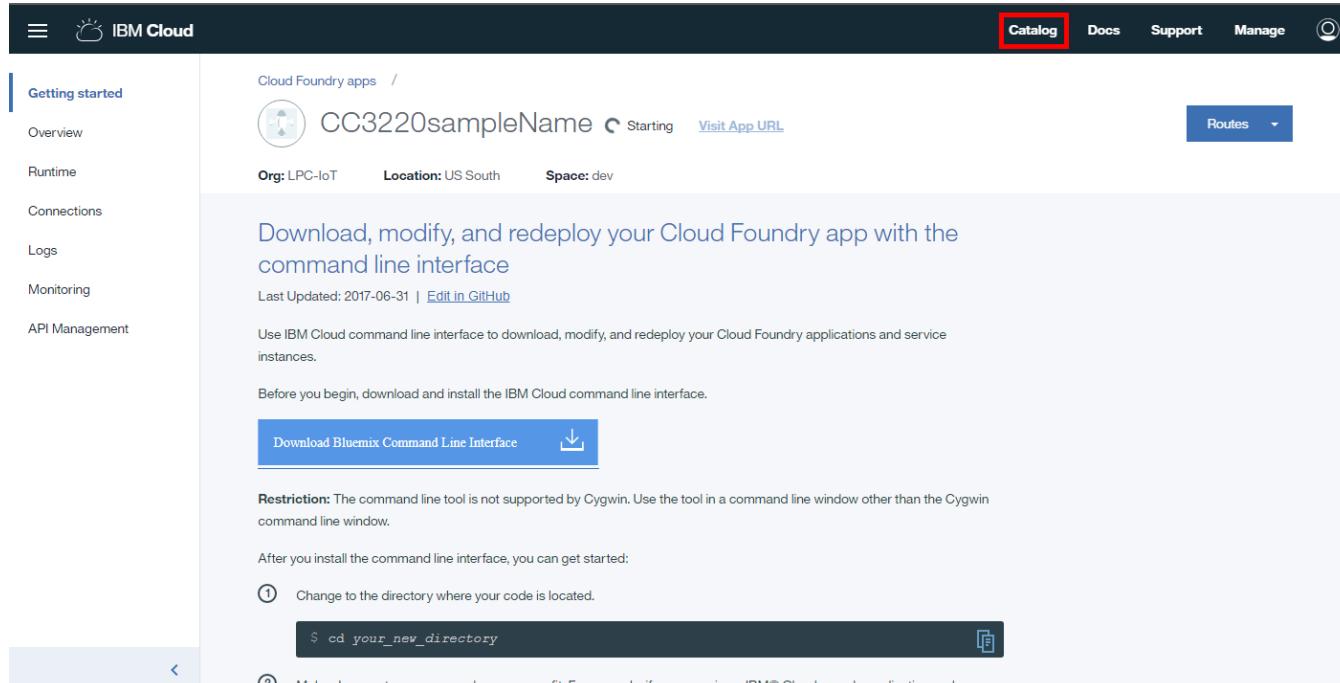

Cloud Foundry apps /

CC3220sampleName Starting [Visit App URL](#)

Org: LPC-IoT Location: US South Space: dev

Download, modify, and redeploy your Cloud Foundry app with the command line interface

Last Updated: 2017-06-31 | [Edit in GitHub](#)

Use IBM Cloud command line interface to download, modify, and redeploy your Cloud Foundry applications and service instances.

Before you begin, download and install the IBM Cloud command line interface.

[Download Bluemix Command Line Interface](#)

Restriction: The command line tool is not supported by Cygwin. Use the tool in a command line window other than the Cygwin command line window.

After you install the command line interface, you can get started:


- ① Change to the directory where your code is located.

```
$ cd your_new_directory
```

- ② Make changes to your app code as you see fit. For example, if you are using a IBM® Cloud sample application and your

図 32. Go to Catalog


8. After selecting the Catalog, click on *Internet of Things* under Services on the left menu

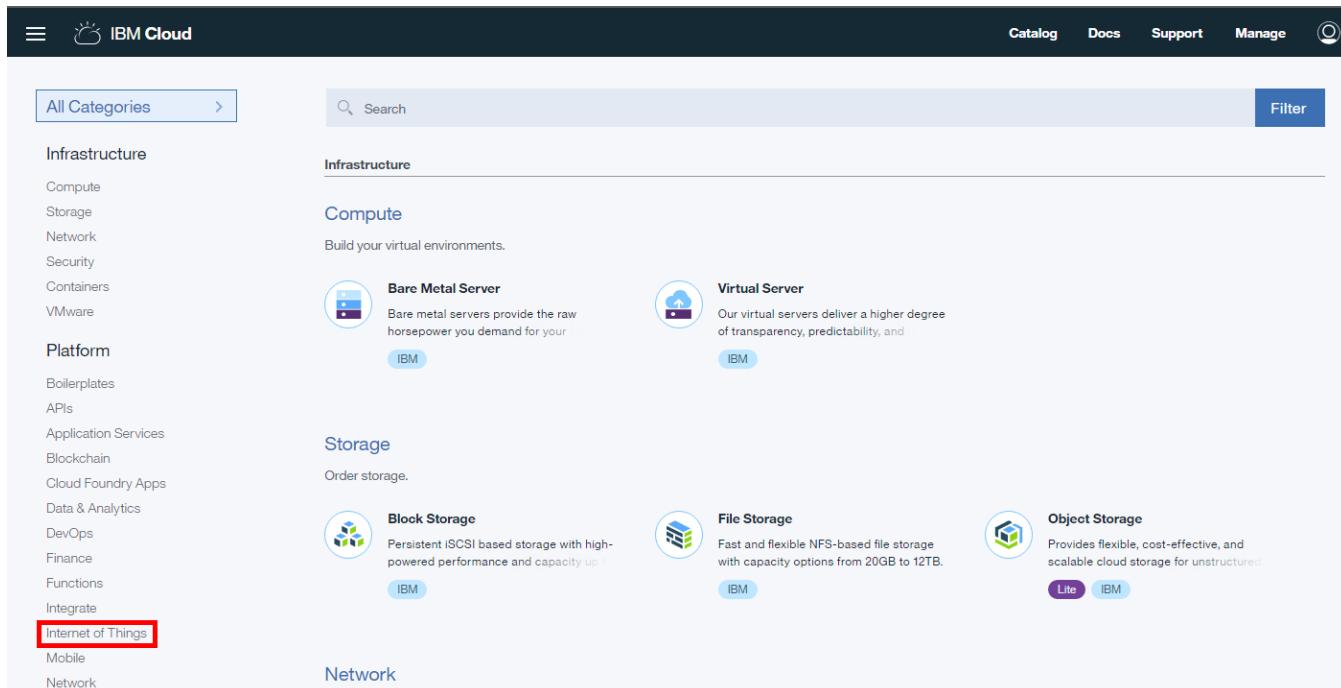

The screenshot shows the IBM Cloud Catalog interface. On the left, there's a sidebar with categories like Infrastructure, Compute, Storage, Network, Security, Containers, VMware, Platform, Application Services, Blockchain, Cloud Foundry Apps, Data & Analytics, DevOps, Finance, Functions, Integrate, and Internet of Things. The 'Internet of Things' option is highlighted with a red box. The main content area has tabs for Infrastructure, Compute, Storage, Network, and a search bar. Under Compute, there are options for Bare Metal Server and Virtual Server. Under Storage, there are Block Storage, File Storage, and Object Storage. Under Network, there are Boilerplates, APIs, Application Services, Blockchain, Cloud Foundry Apps, Data & Analytics, DevOps, Finance, Functions, Integrate, and Internet of Things.

図 33. IBM Cloud™ Catalog


9. Choose *Internet of Things Platform* from the options provided.

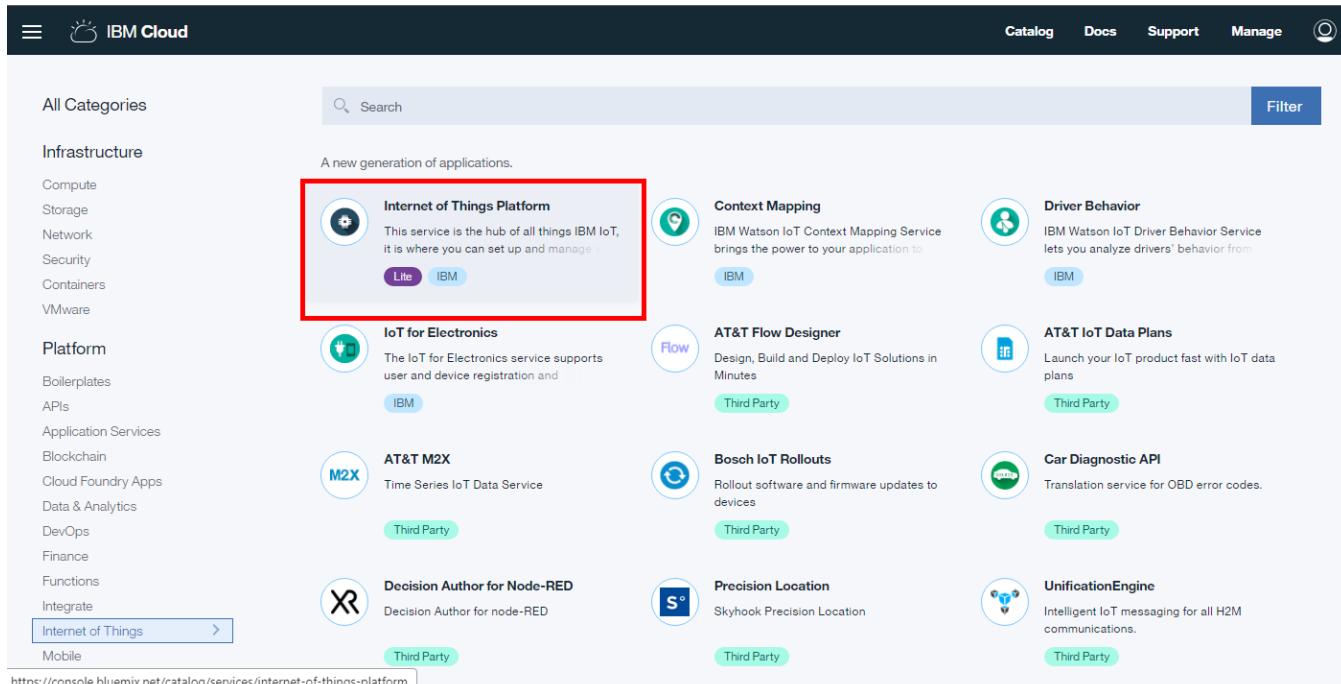

The screenshot shows the IBM Cloud Catalog interface with the 'Internet of Things' category selected in the sidebar. In the main content area, the 'Internet of Things Platform' service is highlighted with a red box. Other visible services include Context Mapping, Driver Behavior, IoT for Electronics, AT&T Flow Designer, AT&T IoT Data Plans, M2X, Bosch IoT Rollouts, Car Diagnostic API, Decision Author for Node-RED, Precision Location, and UnificationEngine. Each service has a brief description and a 'Lite' or 'IBM' button. The URL at the bottom is <https://console.bluemix.net/catalog/services/internet-of-things-platform>.

図 34. IoT Service Options

10. Give the new platform a service name. Click the *Create* button on the bottom-right corner.

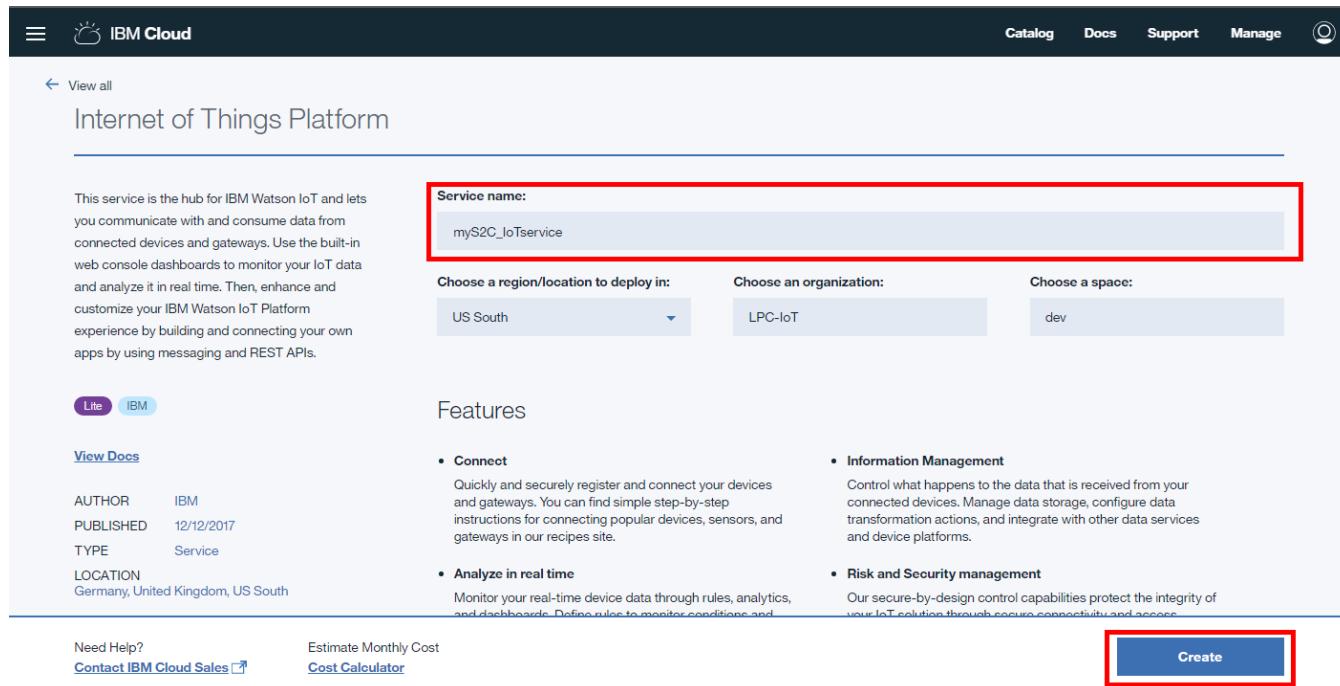

This service is the hub for IBM Watson IoT and lets you communicate with and consume data from connected devices and gateways. Use the built-in web console dashboards to monitor your IoT data and analyze it in real time. Then, enhance and customize your IBM Watson IoT Platform experience by building and connecting your own apps by using messaging and REST APIs.

Service name: myS2C_IoTservice

Choose a region/location to deploy in: US South Choose an organization: LPC-IoT Choose a space: dev

Features

- **Connect**
Quickly and securely register and connect your devices and gateways. You can find simple step-by-step instructions for connecting popular devices, sensors, and gateways in our recipes site.
- **Analyze in real time**
Monitor your real-time device data through rules, analytics, and dashboards. Define rules to monitor conditions and
- **Information Management**
Control what happens to the data that is received from your connected devices. Manage data storage, configure data transformation actions, and integrate with other data services and device platforms.
- **Risk and Security management**
Our secure-by-design control capabilities protect the integrity of your IoT solution through secure connectivity and access.

Need Help? [Contact IBM Cloud Sales](#) [Cost Calculator](#) Estimate Monthly Cost [Cost Calculator](#) **Create**

図 35. Create IoT Platform

11. Click on the Launch button as shown below.

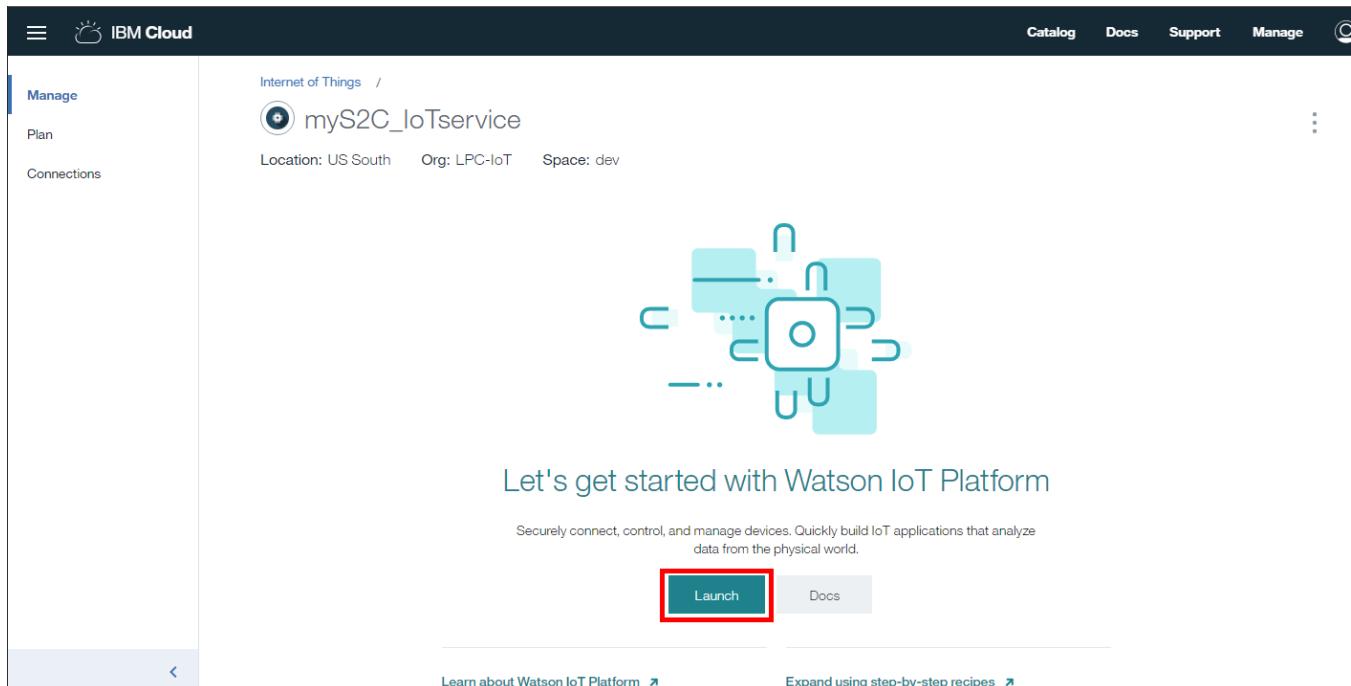


図 36. Launch Service Screen

3.2.1.1.7 Set Up Watson IoT™ Platform Service

1. Once on the IBM Watson IoT Platform, go to Devices on the navigation bar on the left as shown in [図 37.](#)


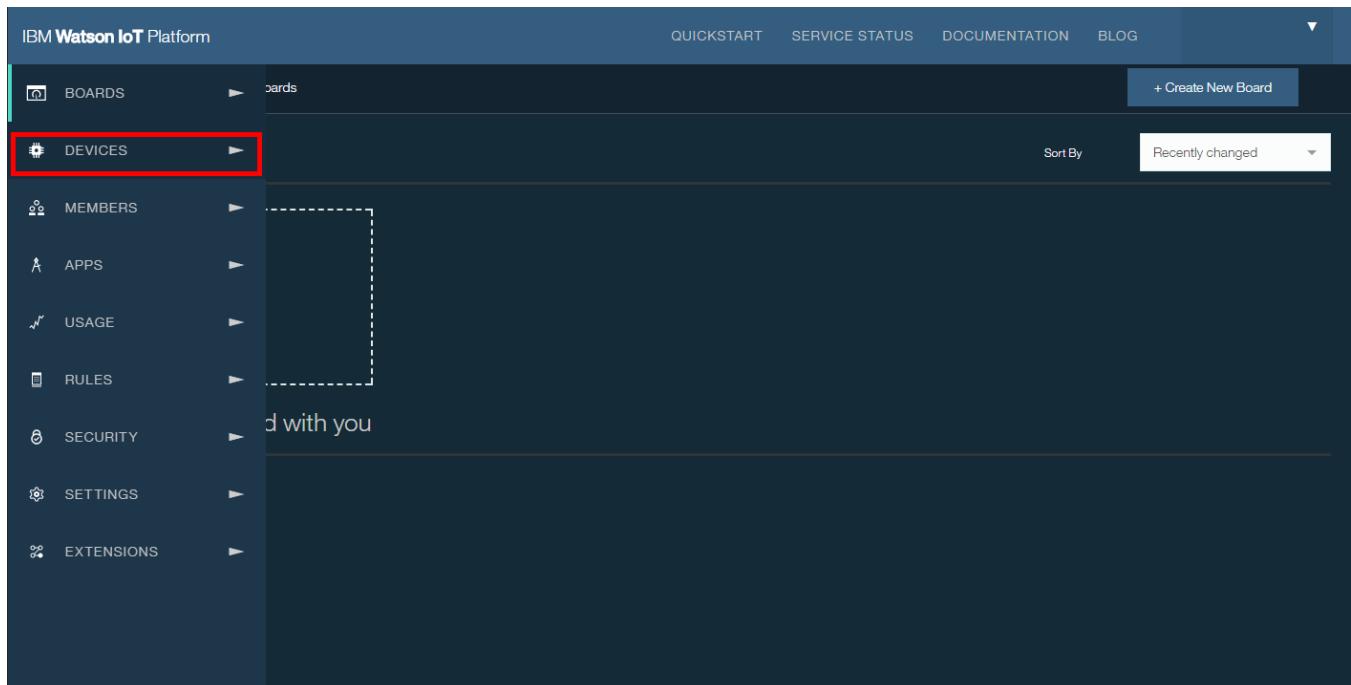


図 37. Go to Dashboard


2. Go to Device Types and Select Add Device Type on the top-right corner.

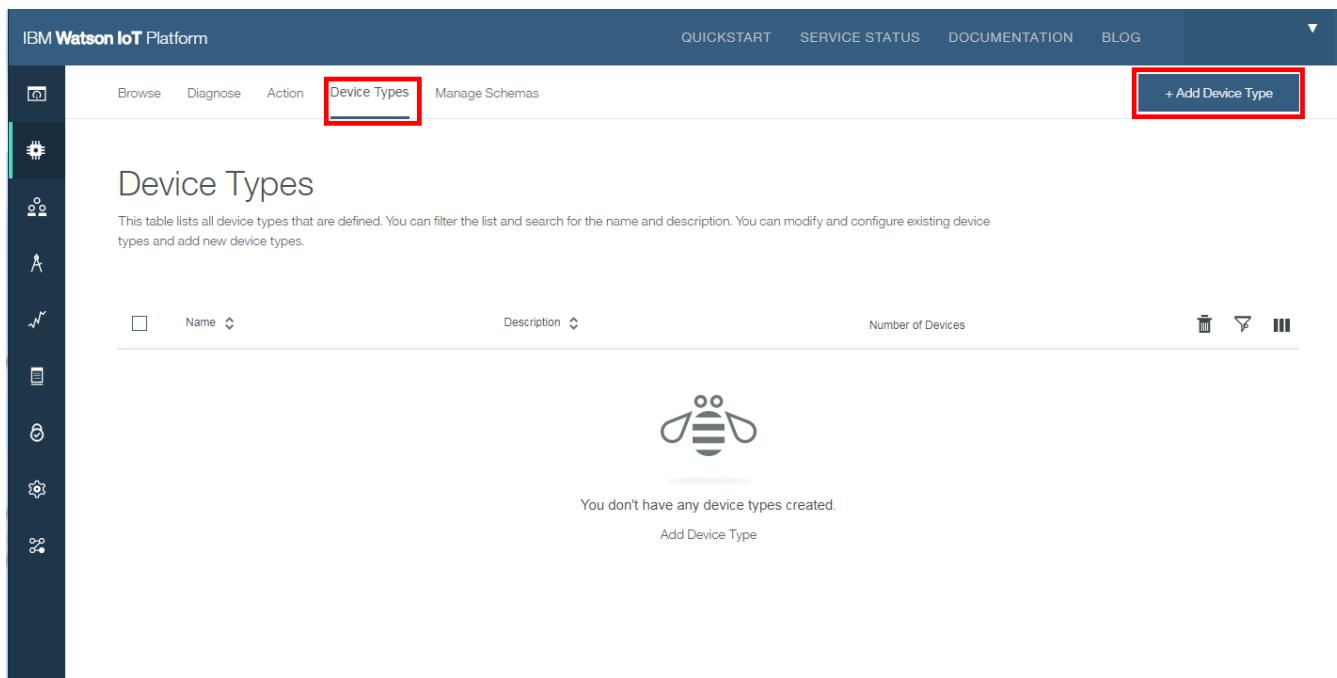

The screenshot shows the IBM Watson IoT Platform interface. On the left is a vertical sidebar with various icons. The main header bar includes links for QUICKSTART, SERVICE STATUS, DOCUMENTATION, and BLOG. Below the header, there are tabs for Browse, Diagnose, Action, and Device Types, with 'Device Types' being the active tab and highlighted with a red box. To the right of the tabs is a 'Manage Schemas' link. In the top right corner of the main content area is a blue button labeled '+ Add Device Type' with a red box around it. The main content area is titled 'Device Types' and contains a message stating 'You don't have any device types created.' with a small bee icon. Below this message is a blue 'Add Device Type' button.

図 38. Add Device Type


3. Select *Gateway* under *Type* and enter "gateway" for the name and click on *Next*.

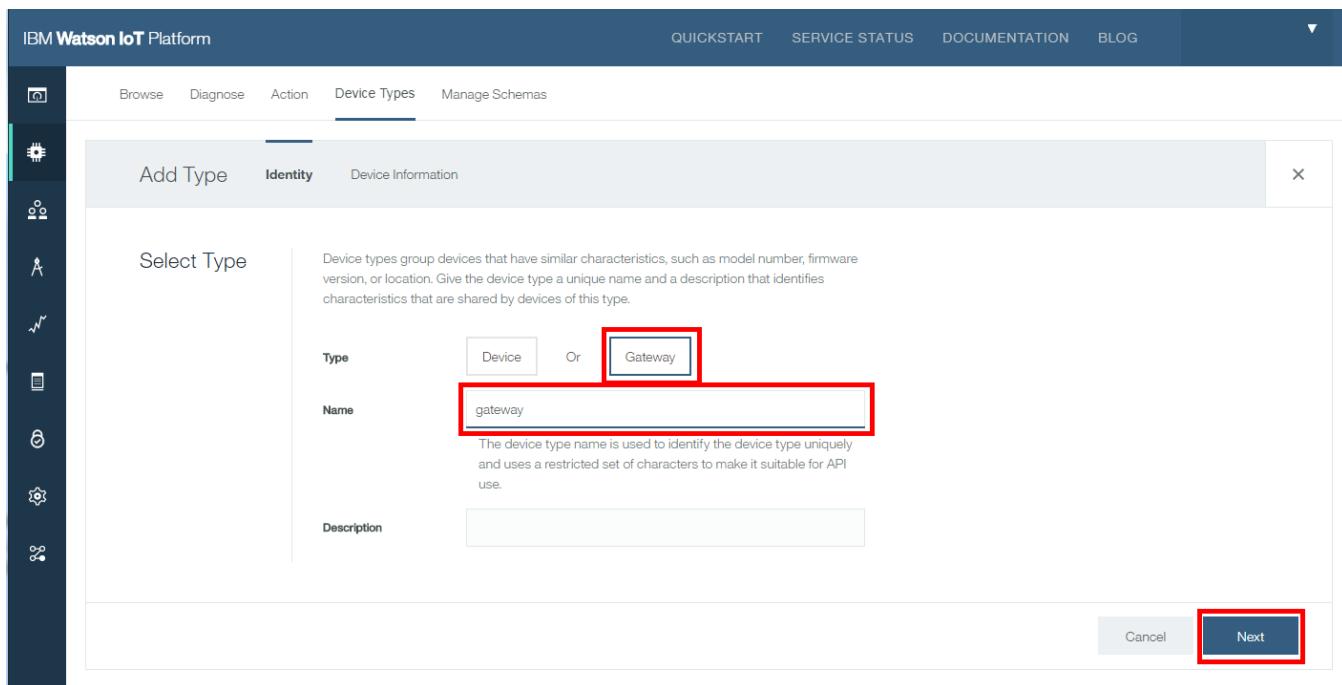

The screenshot shows the 'Add Type' interface in the IBM Watson IoT Platform. On the left is a sidebar with various icons. The main area has tabs for 'Identity' and 'Device Information', with 'Identity' selected. A sub-section titled 'Select Type' is shown, with a note explaining that device types group similar characteristics. The 'Type' dropdown is set to 'Gateway', which is highlighted with a red box. The 'Name' field contains the value 'gateway', also highlighted with a red box. Below these fields is a 'Description' input box. At the bottom right are 'Cancel' and 'Next' buttons, with 'Next' also highlighted with a red box.

図 39. Create Gateway Type

4. Click on Done.

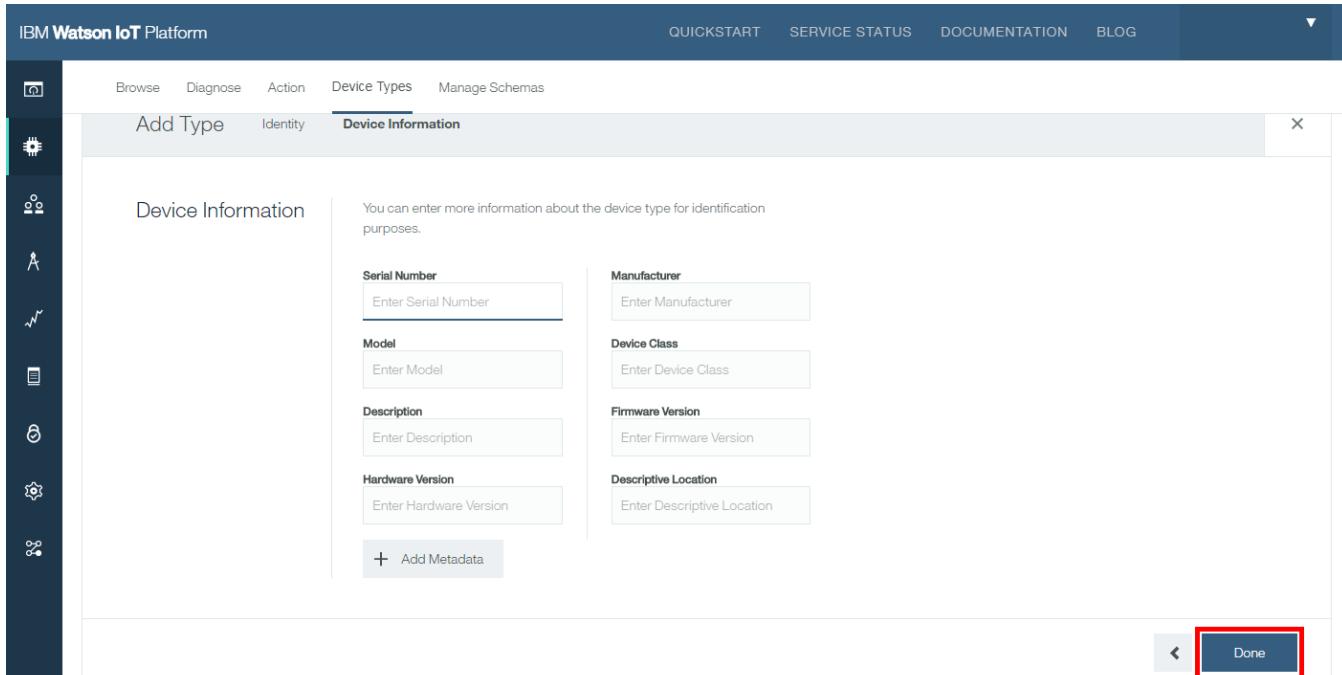

The screenshot shows the 'Device Information' screen for the 'gateway' device type. It includes fields for 'Serial Number', 'Model', 'Description', 'Hardware Version', 'Manufacturer', 'Device Class', 'Firmware Version', and 'Descriptive Location'. There is also a '+ Add Metadata' button. At the bottom right is a 'Done' button, which is highlighted with a red box.

図 40. Gateway Type Device Information

5. Go to the Browse tab and click on Add Device.

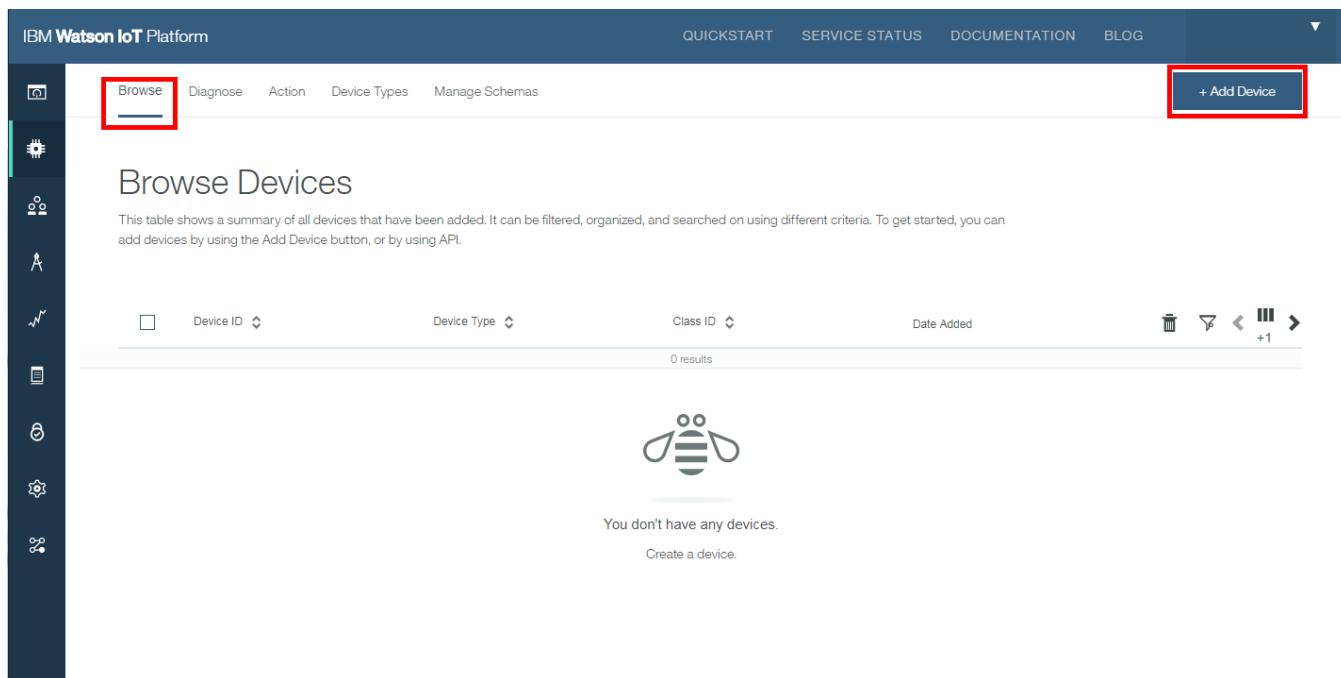


図 41. Browsing Devices

6. Select gateway as the device type and enter a device ID.

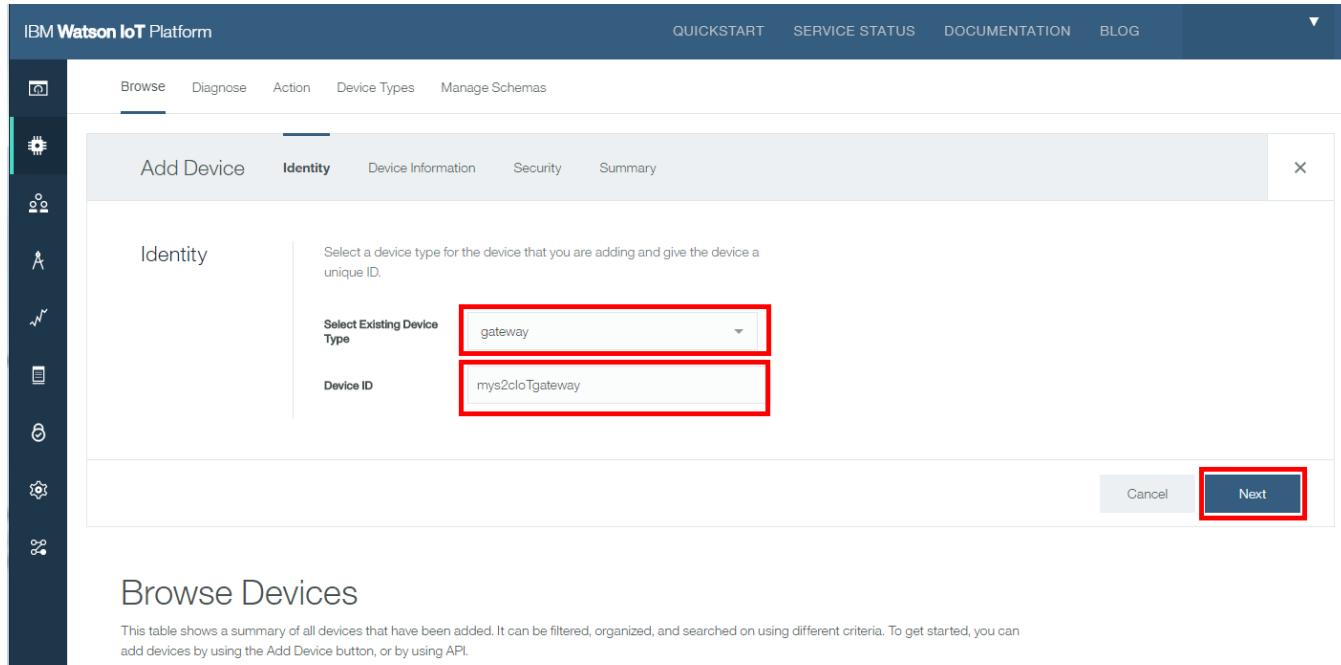


図 42. Add Device Identity

7. Skip the Device Information and click next.

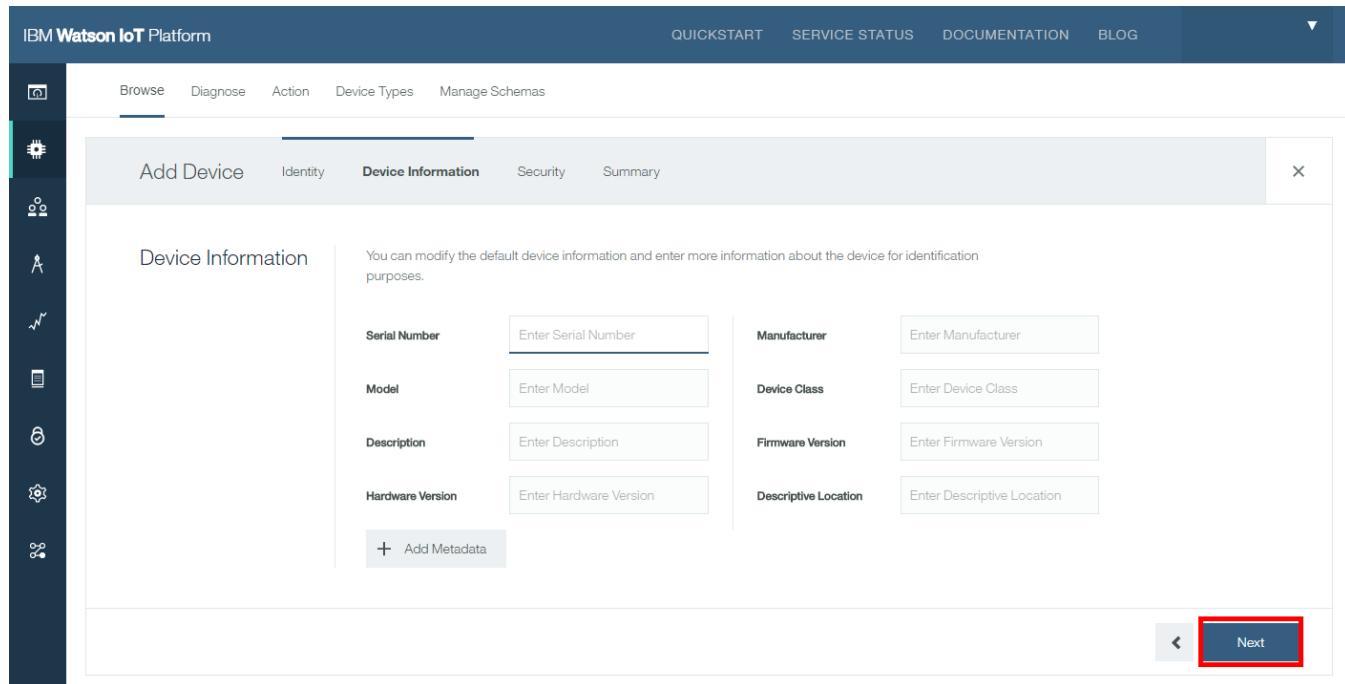


図 43. Device ID

8. On the *Security* tab, fill out the *token* field. Make note of this token, as this will be used for authenticating the device to the cloud. Click *Next*.


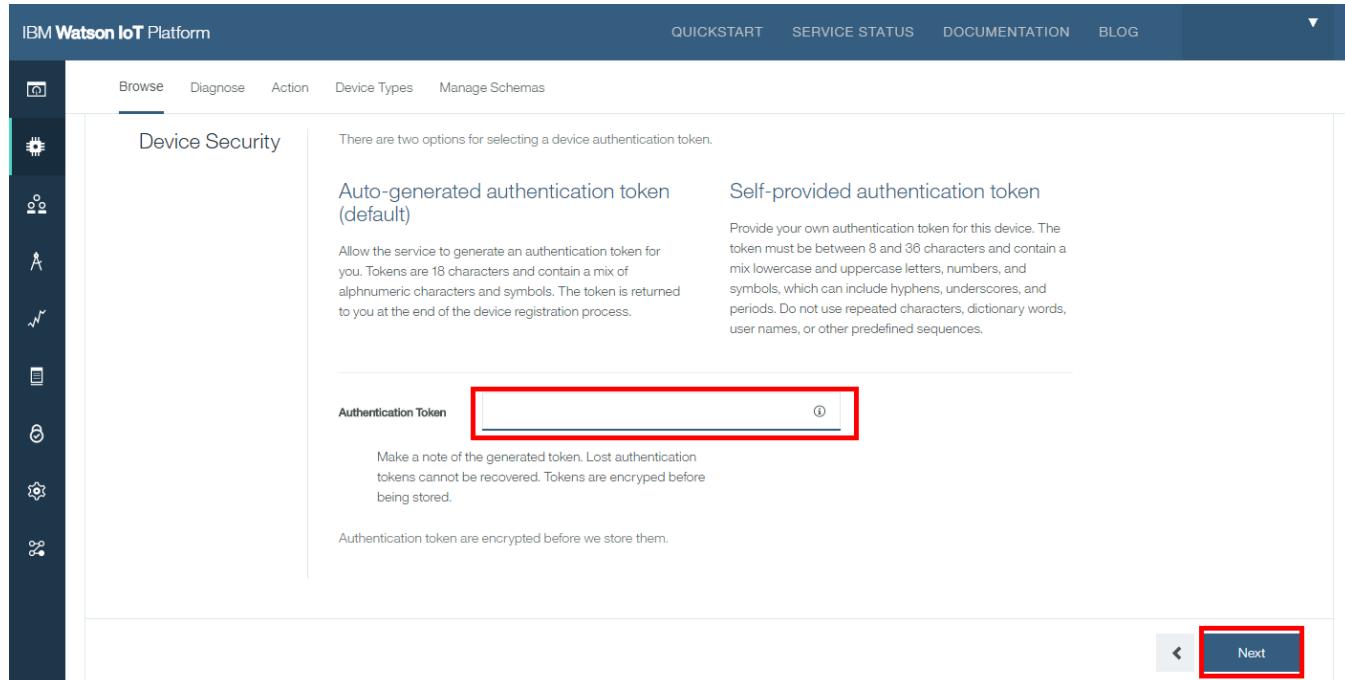


図 44. Authentication Token

9. Keep clicking *Next* until a summary of the device credentials and information shows. Take a screenshot of this page, as this will be the last time the *Authentication Token* is visible. Click on *Done*.

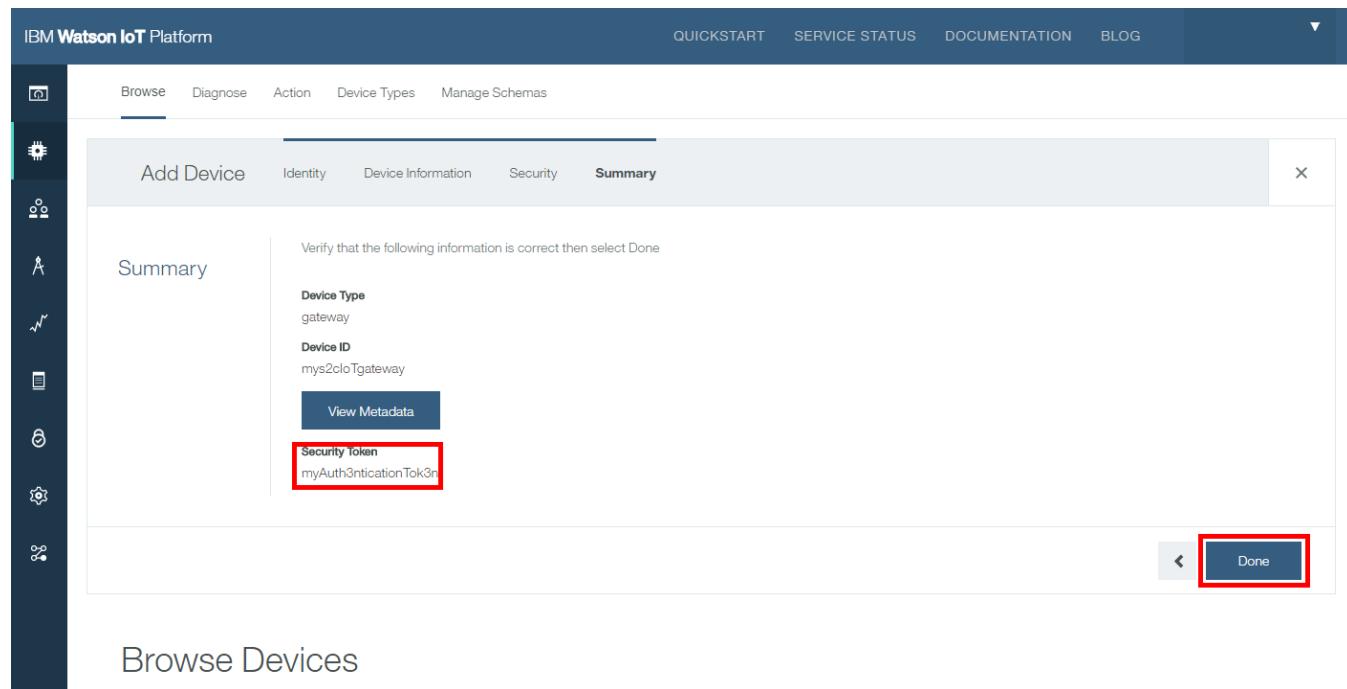


The screenshot shows the 'Add Device' interface in the IBM Watson IoT Platform. On the left is a sidebar with various icons. The main area has tabs for 'Identity', 'Device Information', 'Security', and 'Summary'. The 'Summary' tab is active. It displays the following information:

- Device Type:** gateway
- Device ID:** myS2CLOTgateway
- View Metadata** button
- Security Token:** myAuth3nticationTok3n (This field is highlighted with a red box)

At the bottom right of the summary section is a **Done** button, which is also highlighted with a red box.

図 45. Adding Device Summary


10. After adding the new device, go to security on the menu on the left as shown below.

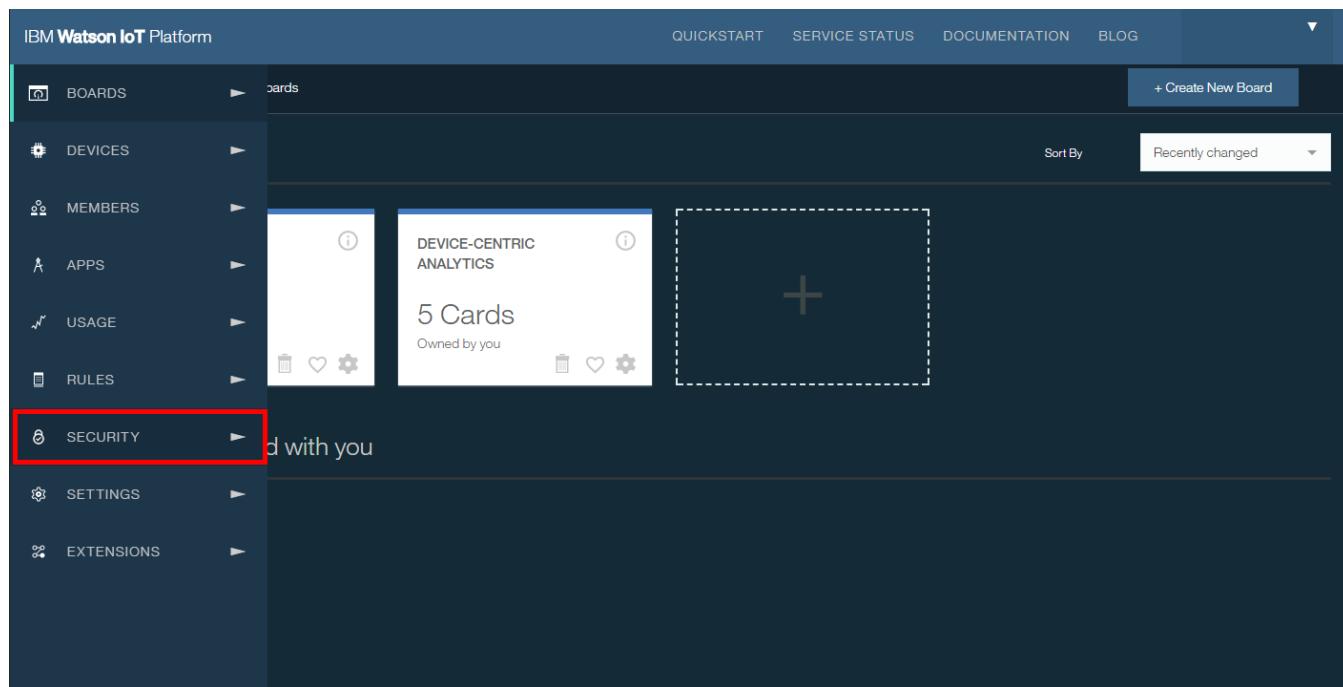

The screenshot shows the IBM Watson IoT Platform dashboard. On the left, there is a vertical navigation menu with the following items: BOARDS, DEVICES, MEMBERS, APPS, USAGE, RULES, SECURITY, SETTINGS, and EXTENSIONS. The 'SECURITY' item is highlighted with a red rectangular box. To the right of the menu, there is a main content area displaying a 'DEVICE-CENTRIC ANALYTICS' card. This card shows '5 Cards' owned by the user. There is also a large, empty dashed-bordered box with a plus sign in the center, likely for creating new cards. At the top of the page, there are links for QUICKSTART, SERVICE STATUS, DOCUMENTATION, and BLOG, along with a 'Create New Board' button and sorting options.

図 46. Security Menu

11. Click on the edit button for Connection Security.

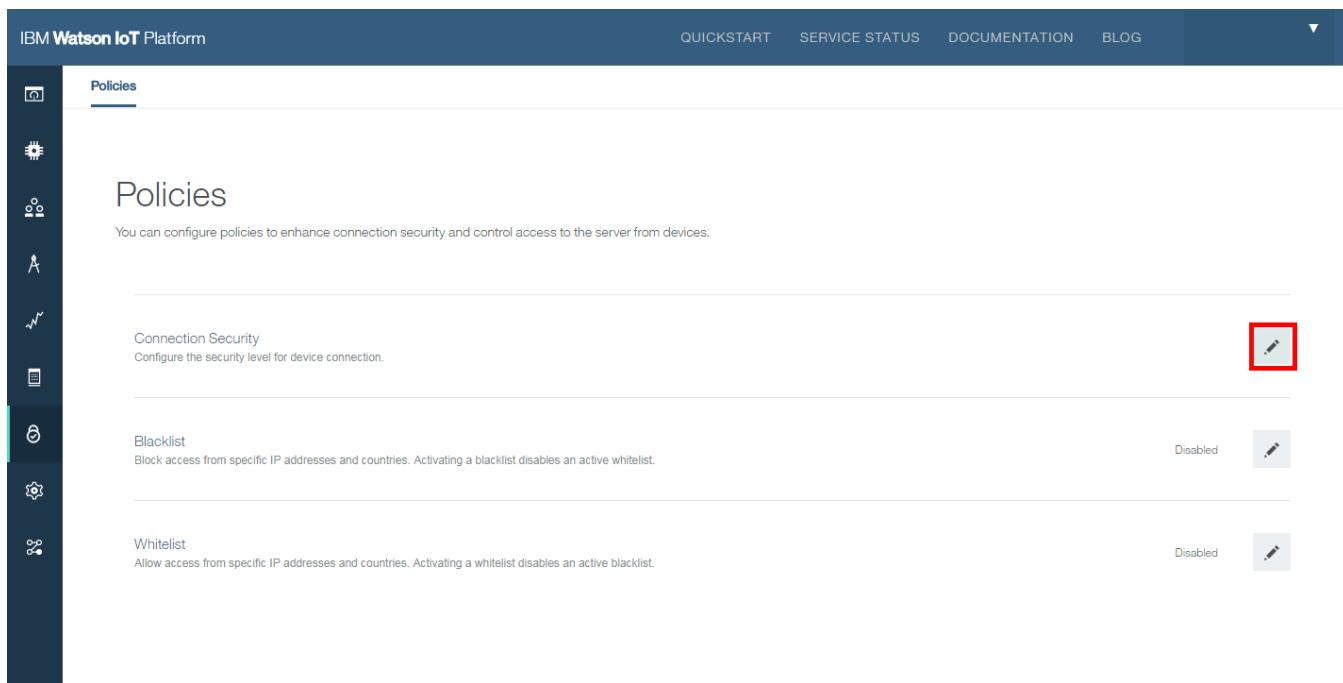


The screenshot shows the IBM Watson IoT Platform Policies page. On the left is a sidebar with various icons. The main area is titled "Policies" and contains three sections: "Connection Security", "Blacklist", and "Whitelist". Each section has a description, a status indicator (e.g., "Disabled"), and an edit icon. The "Connection Security" edit icon is highlighted with a red box.

Setting	Status	Edit Icon
Connection Security	Disabled	
Blacklist	Disabled	
Whitelist	Disabled	

図 47. Modifying Connection Security

12. Click on the drop down menu under security level and select TLS Optional, and then save the new configuration.

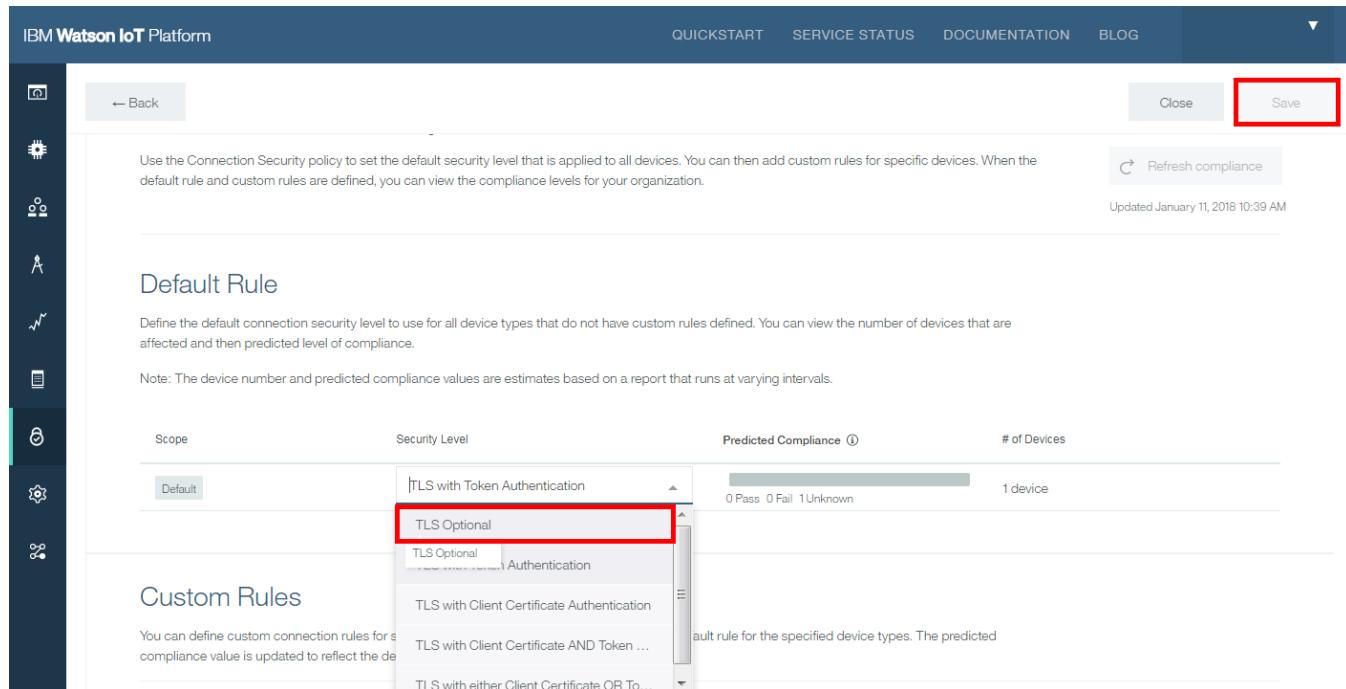


The screenshot shows the 'Default Rule' configuration page. The 'Scope' is set to 'Default'. In the 'Security Level' column, a dropdown menu is open, showing options like 'TLS with Token Authentication', 'TLS Optional', 'TLS with Client Certificate Authentication', 'TLS with Client Certificate AND Token ...', and 'TLS with either Client Certificate OR To...'. The 'TLS Optional' option is highlighted with a red box. In the top right corner, there are 'Close', 'Save' (which is also highlighted with a red box), and 'Refresh compliance' buttons. Below the buttons, it says 'Updated January 11, 2018 10:39 AM'.

図 48. Save New Security Rule

3.2.1.1.8 Set Up Node.js Cloud Foundry App

1. Locate C:\<S2C Repo Directory>\tidc01002\examples .
2. Open the *ibm_cloud_application* folder, and open the *Manifest.yml* with a text editor. Replace the name and services fields with the name of the cloud foundry app and Watson IoT platform.

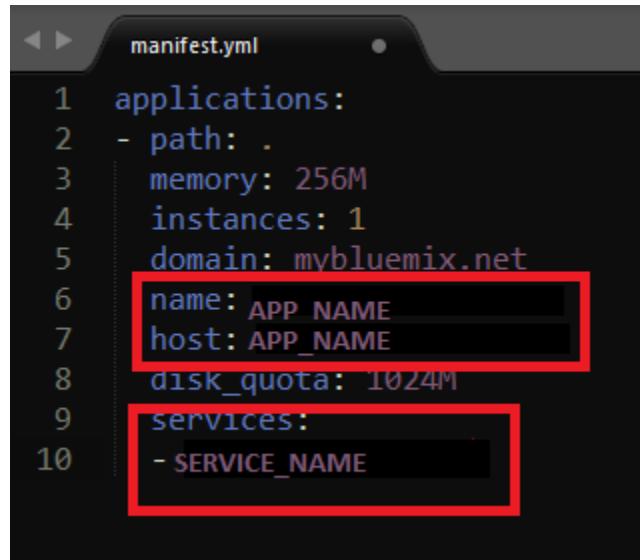

```


manifest.yml
1 applications:
2   - path: .
3     memory: 256M
4     instances: 1
5     domain: mybluemix.net
6     name: APP_NAME
7     host: APP_NAME
8     disk_quota: 1024M
9
10    services:
11      - SERVICE_NAME

```

図 49. Manifest

3. Open a command console and navigate to the IBM-Cloud-Dashboard folder (`cd C:\S2C Repo Directory>\tidc01002\examples\ibm_cloud_application`).
4. Type in **cf api https://api.ng.bluemix.net**
5. Log in to the created account: **cf login**
6. Push the code to the IBM cloud foundry app: **cf push**

7. Go back to the IBM Cloud Dashboard by clicking *IBM Cloud* on the top left.

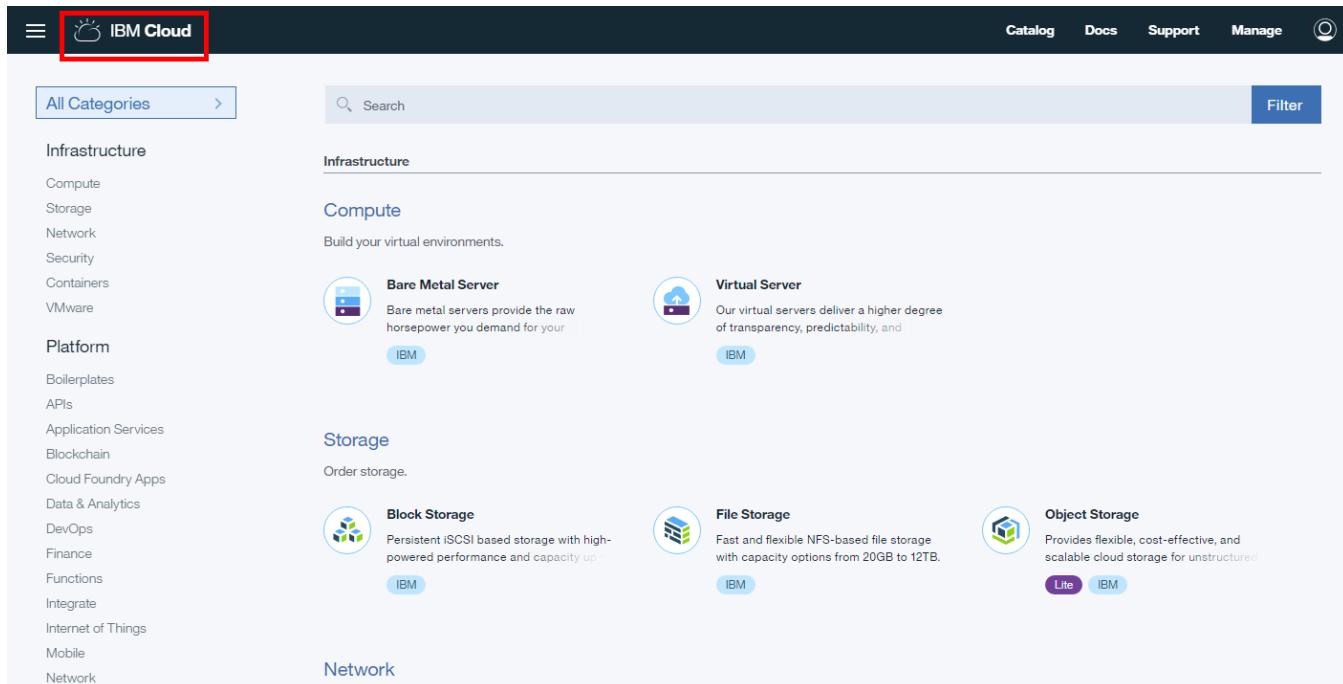


The screenshot shows the IBM Cloud dashboard interface. At the top, there's a navigation bar with 'IBM Cloud' (highlighted with a red box), 'Catalog', 'Docs', 'Support', 'Manage', and a search icon. Below the navigation is a search bar with 'Search' and a 'Filter' button. The main content area is divided into several sections:

- Infrastructure** section with links to Compute, Storage, Network, Security, Containers, VMware, and Platform.
- Compute** section with 'Bare Metal Server' and 'Virtual Server' options.
- Storage** section with 'Block Storage', 'File Storage', and 'Object Storage' options.
- Network** section.

図 50. Dashboard

8. The cloud foundry apps and IoT services created on the previous on the dashboard will be visible.
Click on the cloud foundry app.

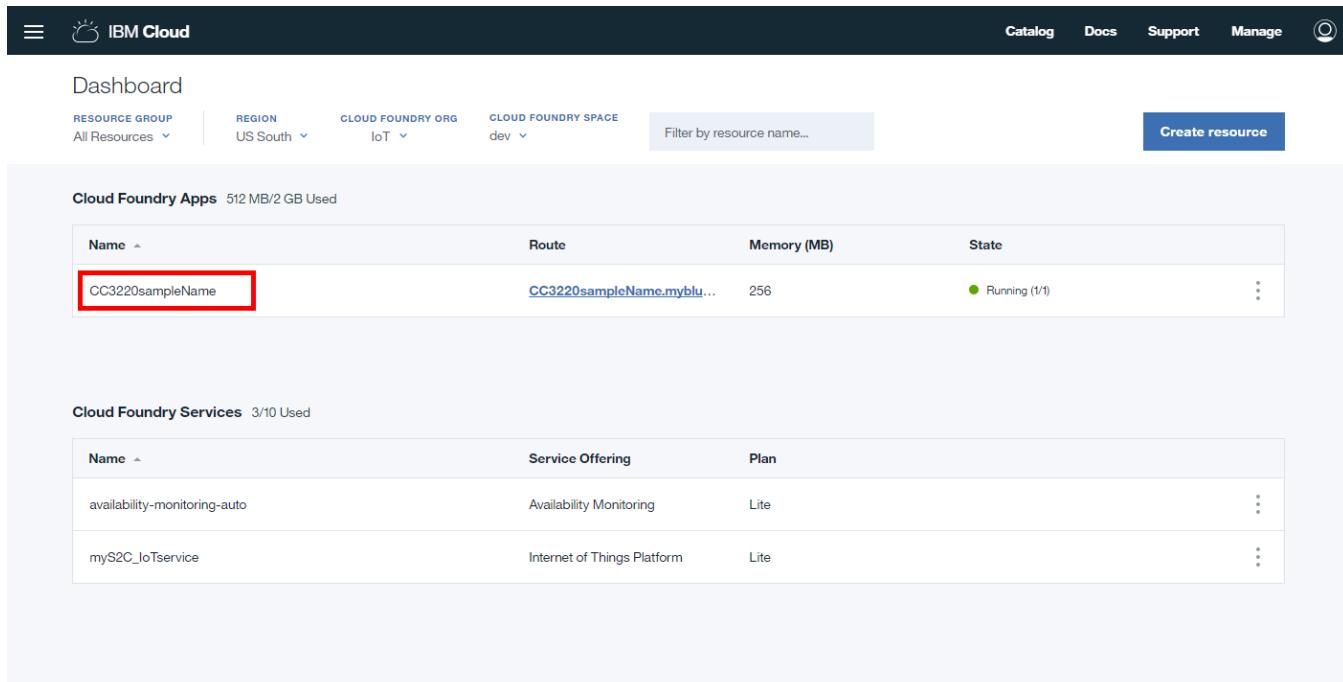

The screenshot shows the IBM Cloud dashboard with the 'Cloud Foundry Apps' section highlighted. The 'Cloud Foundry Apps' section displays a table with the following data:


Name	Route	Memory (MB)	State
CC3220sampleName	CC3220sampleName.myblu...	256	Running (1/1)

The 'Cloud Foundry Services' section displays a table with the following data:

Name	Service Offering	Plan
availability-monitoring-auto	Availability Monitoring	Lite
myS2C_IoTservice	Internet of Things Platform	Lite

図 51. Cloud Foundry App


9. Click on the *Connections* tab to the left.

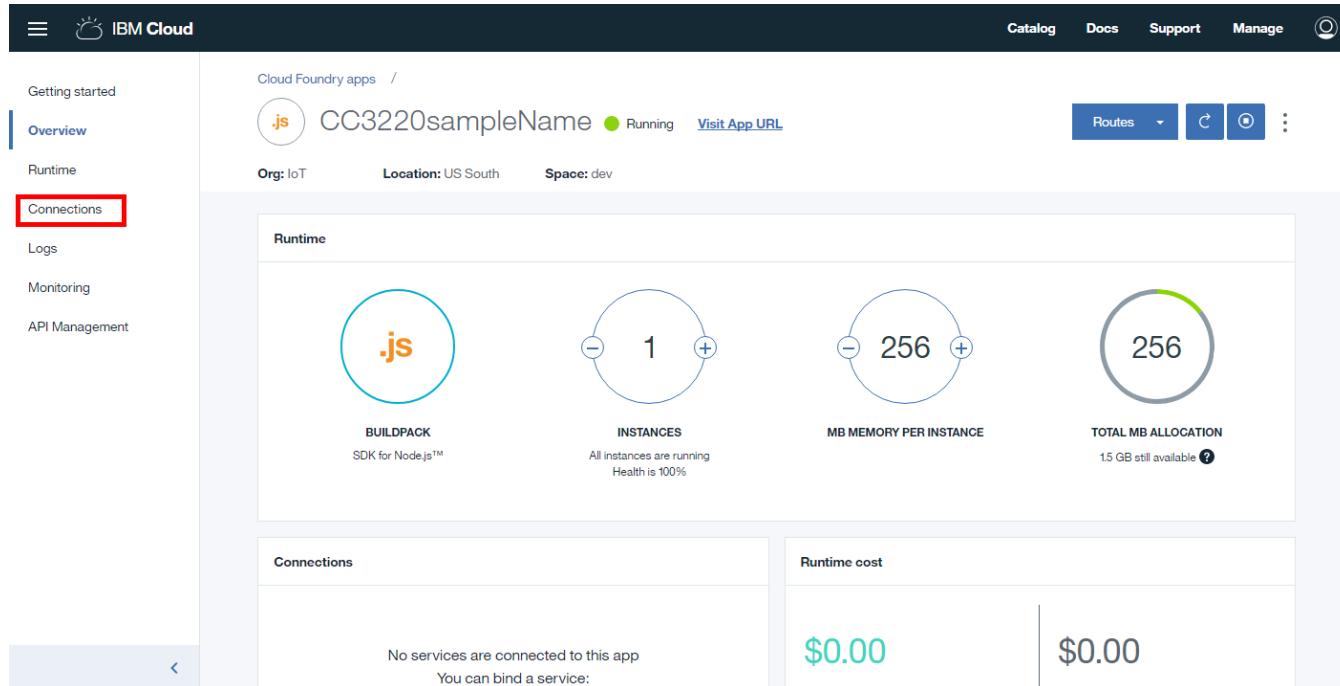

The screenshot shows the IBM Cloud interface for the 'CC3220sampleName' application. The left sidebar has a red box around the 'Connections' tab. The main area displays runtime details: Buildpack (SDK for Node.js™), Instances (1), MB Memory per Instance (256), and Total MB Allocation (256). Below this, the 'Connections' section shows 'No services are connected to this app'. Runtime cost is listed as \$0.00.

図 52. Connections


10. Click on the *View credentials* button. This page shows the information required to establish a connection between the cloud front end and the back end server. Screenshot or save the information for later.

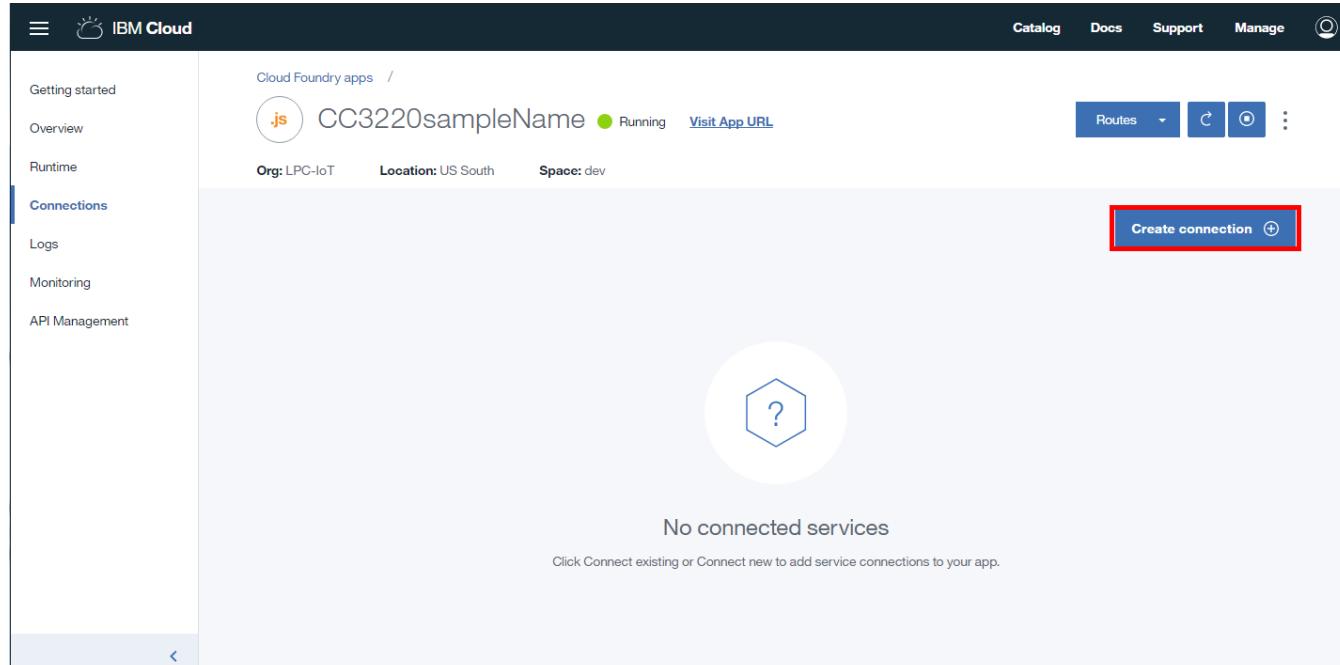

The screenshot shows the 'View Credentials' page for the 'CC3220sampleName' application. The left sidebar has a red box around the 'Connections' tab. A red box highlights the 'Create connection' button in the top right corner. The main area shows a large question mark icon and the message 'No connected services'. A note at the bottom says 'Click Connect existing or Connect new to add service connections to your app.'

図 53. View Credentials

11. Select the service previously created in this guide and click the connect button.

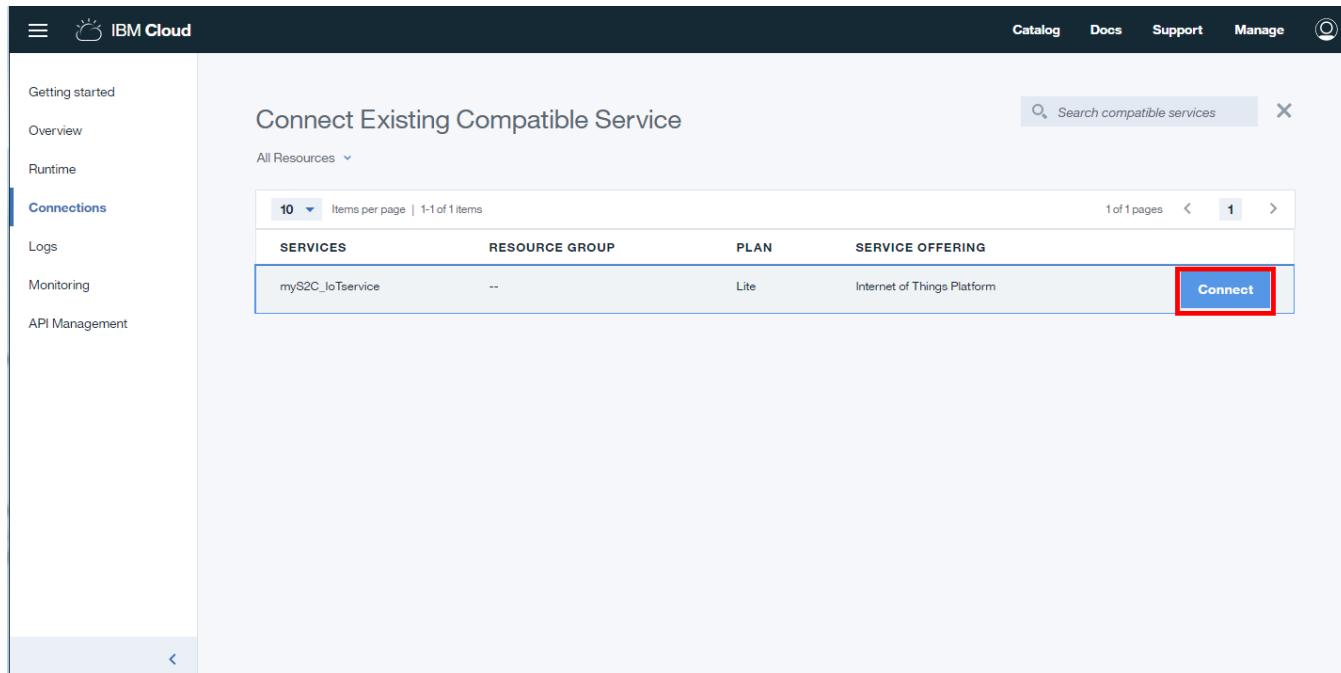

The screenshot shows the IBM Cloud interface. On the left, there's a sidebar with links like Getting started, Overview, Runtime, Connections (which is selected and highlighted in blue), Logs, Monitoring, and API Management. The main area is titled "Connect Existing Compatible Service". It shows a table with one item:

SERVICES	RESOURCE GROUP	PLAN	SERVICE OFFERING
myS2C_IoTservice	--	Lite	Internet of Things Platform

A blue rectangular box highlights the "Connect" button in the last column of the table.

図 54. Connect Service

12. Restage the app.


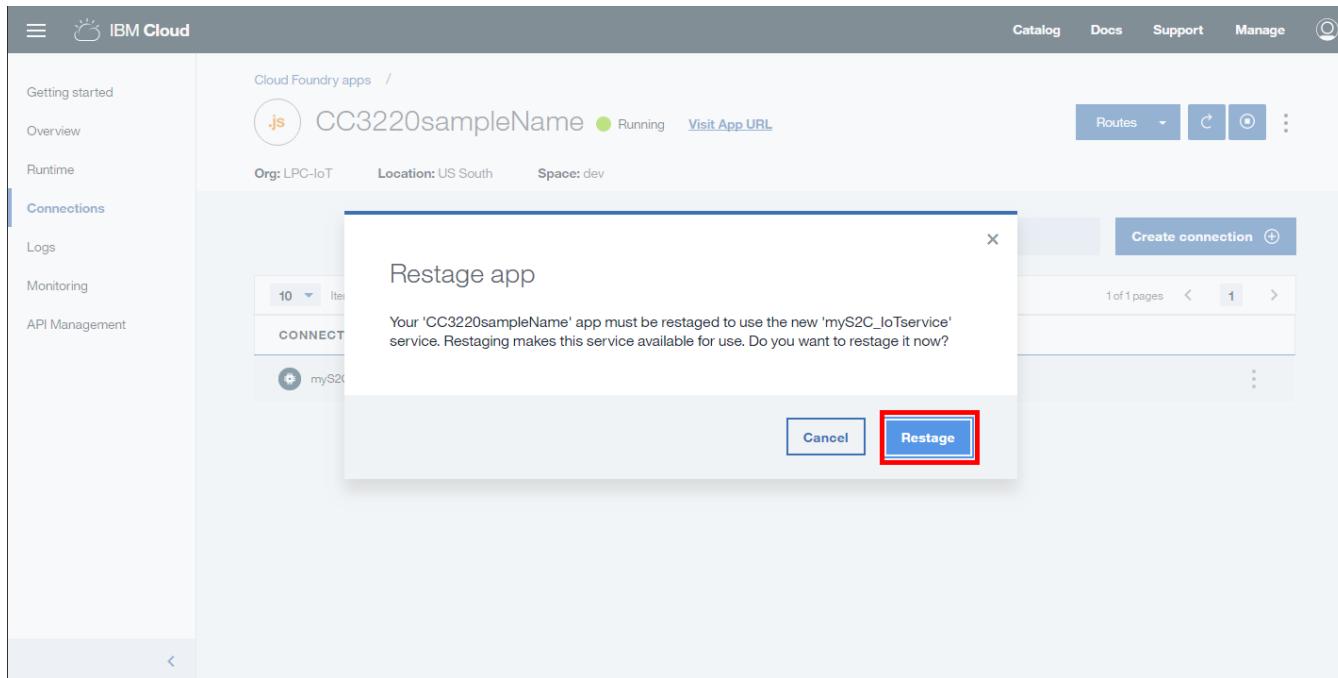


図 55. Restage the App

13. Click on the right side of the service and select View Credentials.

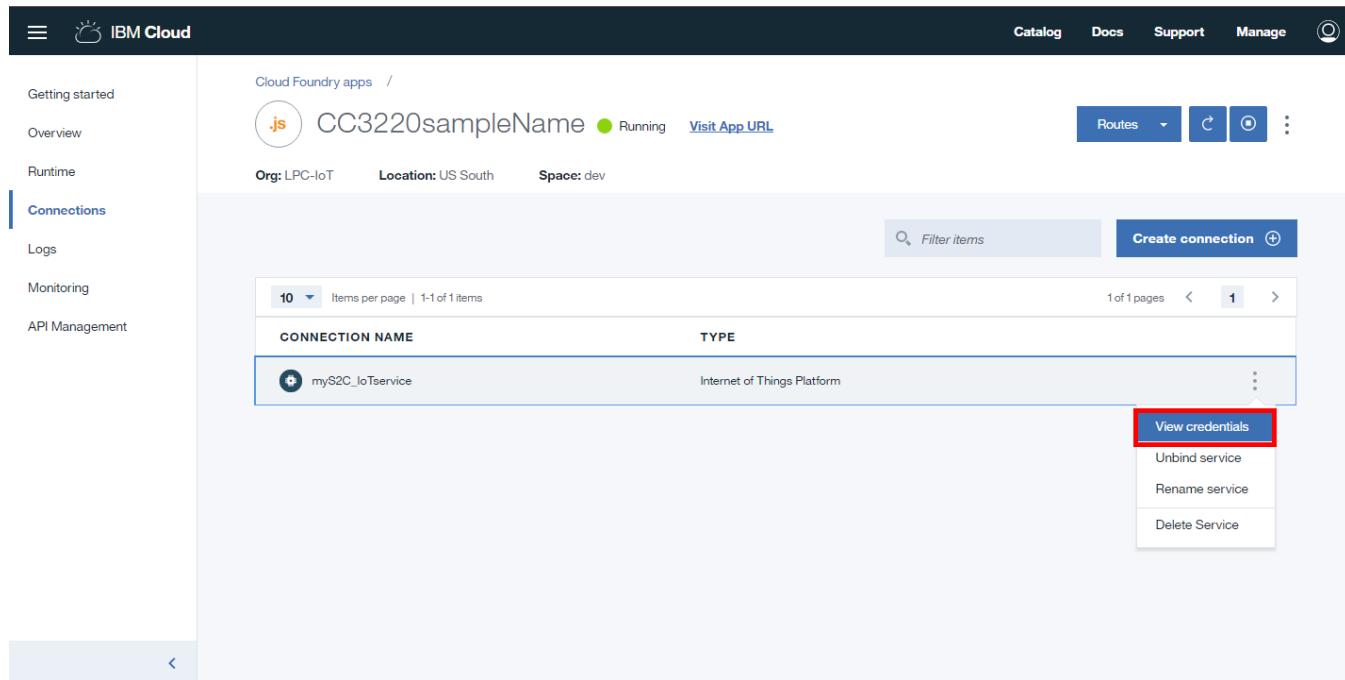

The screenshot shows the IBM Cloud interface for managing a Cloud Foundry app named "CC3220sampleName". The app is listed as "Running" in the US South location. On the left sidebar, the "Connections" tab is selected. In the main content area, a table lists a single connection entry:

CONNECTION NAME	TYPE
myS2C_IoTservice	Internet of Things Platform

A context menu is open next to the "myS2C_IoTservice" row, with the "View credentials" option highlighted by a red box. Other options in the menu include "Unbind service", "Rename service", and "Delete Service".

図 56. View Service Credentials

14. Take note of the Service credentials by clicking on the copy button and paste them into a notepad since they will be used in the next steps.


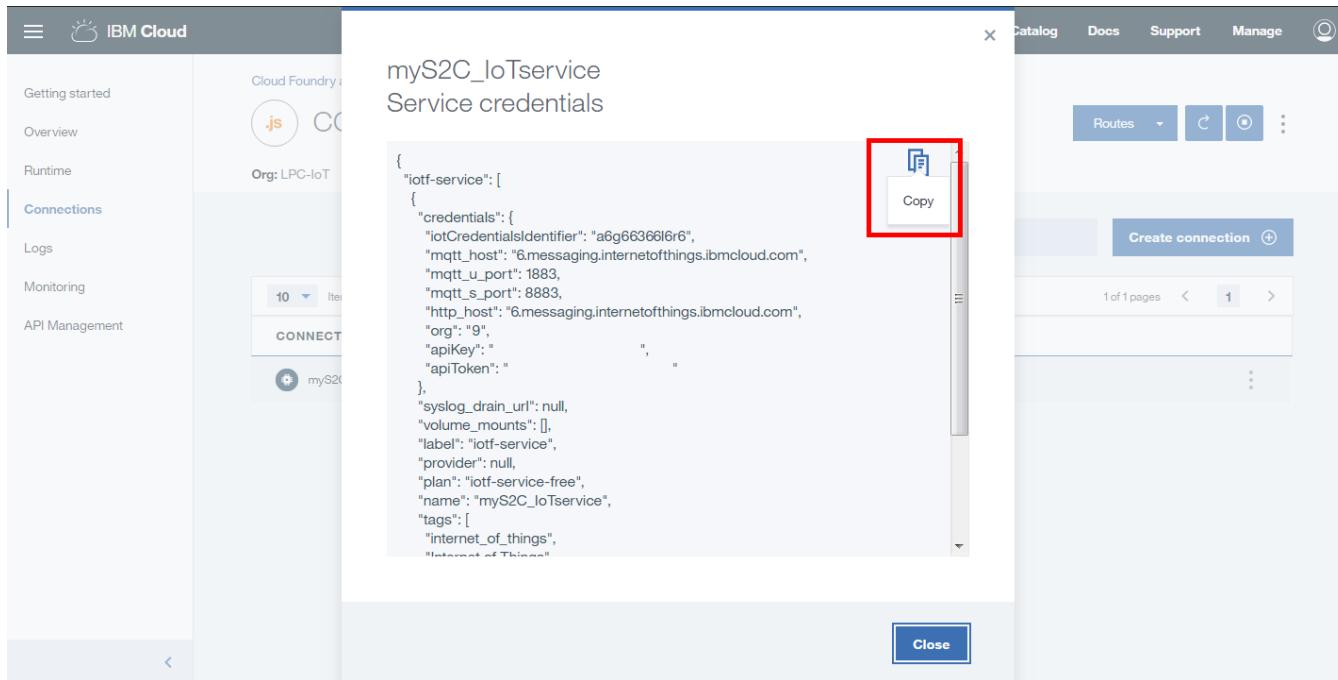


図 57. Copy Service credentials

15. Now go back to the Dashboard and open the webpage for the Cloud Foundry App. The link can be found next to the cloud foundry app name.

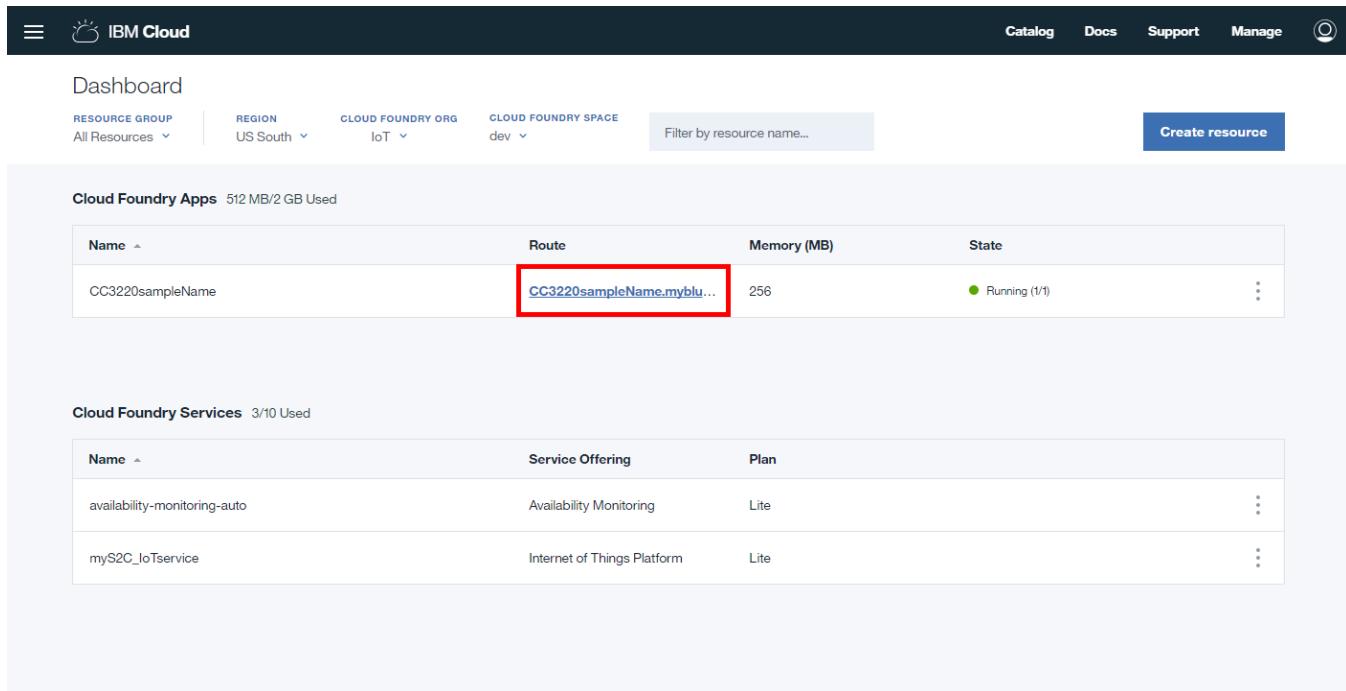

Cloud Foundry Apps 512 MB/2 GB Used


Name	Route	Memory (MB)	State
CC3220sampleName	CC3220sampleName.myblu...	256	● Running (1/1)

Cloud Foundry Services 3/10 Used

Name	Service Offering	Plan
availability-monitoring-auto	Availability Monitoring	Lite
myS2C_IoTservice	Internet of Things Platform	Lite

図 58. IBM® Web Page Link

16. If everything setup correctly, the dashboard will be visible. At this point, open the configuration menu located at the top.

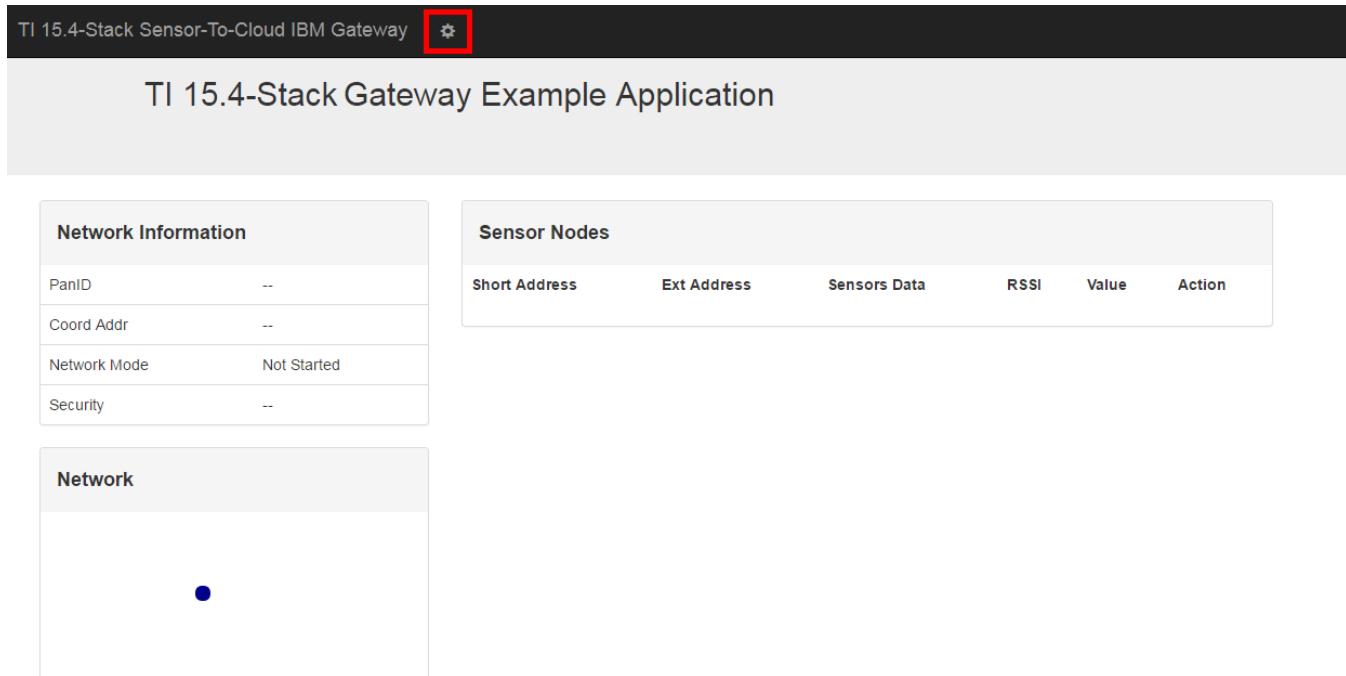

TI 15.4-Stack Sensor-To-Cloud IBM Gateway

TI 15.4-Stack Gateway Example Application

Network Information

PanID	--
Coord Addr	--
Network Mode	Not Started
Security	--

Sensor Nodes

Short Address	Ext Address	Sensors Data	RSSI	Value	Action
---------------	-------------	--------------	------	-------	--------

Network

図 59. Sensor2Cloud Front End

17. A form will pop up. Use the information saved in step 15 to fill out the form. For the *Device Type* and *Device ID*, use the information entered in [図 60](#). Save the changes, and close when done.

APP_NAME

Service credentials

```
"iotf-service": [
  {
    "credentials": {
      "iotCredentialsIdentifier": "a2g6k39si6r5",
      "mqtt_host": "qlq2p4.messaging.internetofthings.ibmcloud.com",
      "mqtt_u_port": 1883,
      "mqtt_s_port": 8883,
      "http_host": "qlq2p4.internetofthings.ibmcloud.com",
      "org": "qlq2p4",
      "apiKey": "a-qlq2p4-idhr0gsq3s",
      "apiToken": "YKzll8RFvmRAgJp2TU"
    },
    "syslog_drain_url": null,
    "label": "iotf-service",
    "provider": null,
    "plan": "iotf-service-free",
    "name": "APP_NAME"
    "tags": [
      "internet_of_things",
      "Internet of Things",
    ]
  }
]
```

IBM IoT Credentials

Service Name
Enter Service Name

ID
Enter iot Credentials Identifier

Org
Enter org

API Key
Enter api Key

API Token
Enter api Token

Device Type
Enter Device Type

Device ID
Enter Device Id

Close **Save changes**

図 60. IBM® IoT Credentials

3.2.1.1.9 Run and Use the Gateway

Before getting started with the instructions on how to run the gateway, make sure that the CC3220SF is plugged into the PC and that a serial console has been opened on the serial port assigned to the CC3220SF LaunchPad.

There are two ways to get the S2C Gateway up and running. The first method is described in [3.2.1.1.9.1](#), which explains how to provision the CC3220SF LaunchPad to a WiFi Network from the Simple Link Starter Pro App. The second method is explained in [3.2.1.1.9.2](#); this method uses the built-in, local provisioning web page.

3.2.1.1.9.1 Using the SimpleLink™ Starter Pro App

This section assumes that either the IOS or the Android app is already installed on the user's mobile phone. If not, install the app now.

1. Launch the SimpleLink Starter Pro App from the phone.
2. If the device is not found automatically by the app, go to *Device to configure*, and tap on *search for your device*.

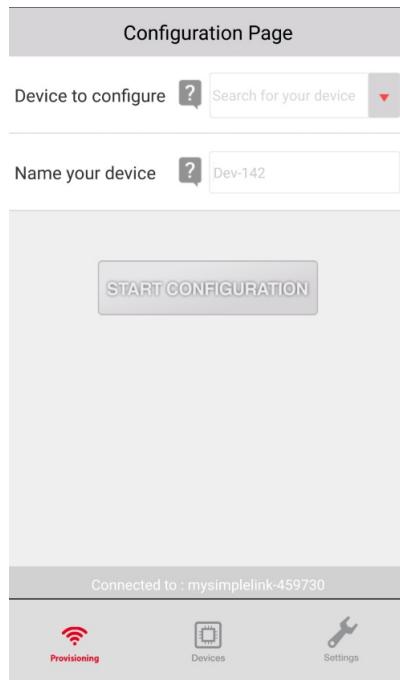


図 61. Configuration Page

3. Wait for the app to find the device to connect. The name should be something like *mysimplelink-XXXX*.

4. Select the device to connect, and tap *OK*.

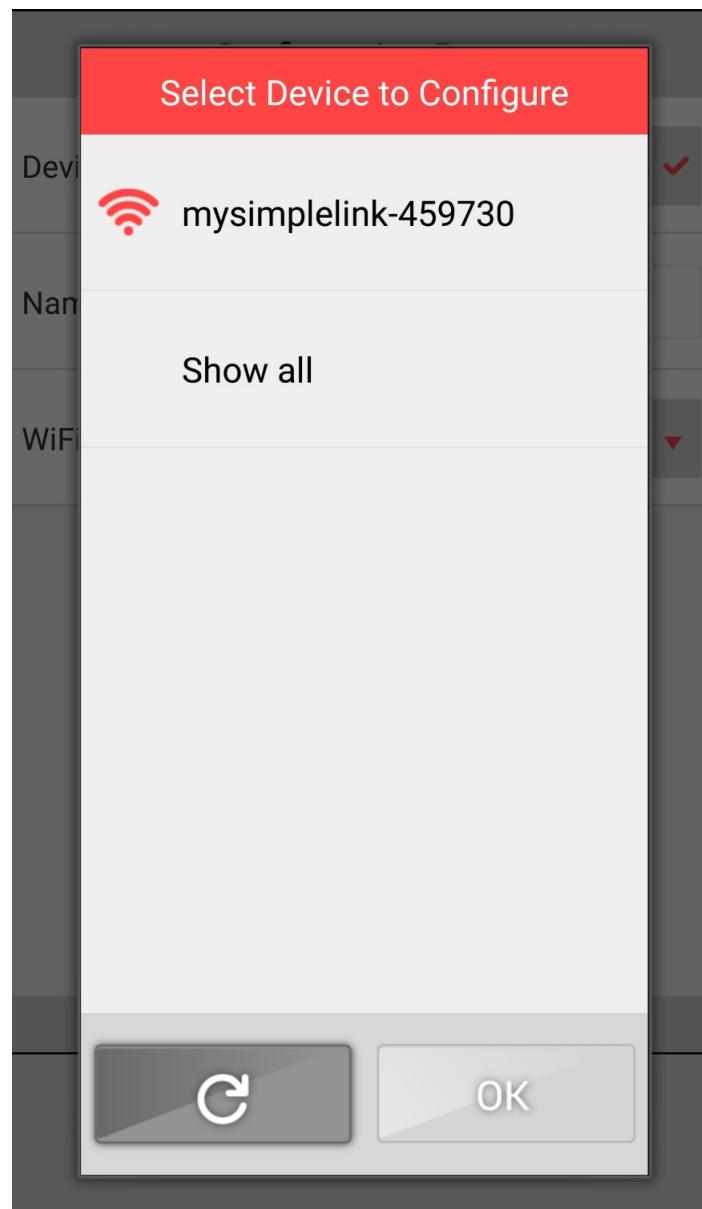


図 62. Select Device to Configure

5. Select the desired Wi-Fi network to connect with the CC3220SF LaunchPad. Enter the password, tap *OK*, and then tap *Start Configuration*.

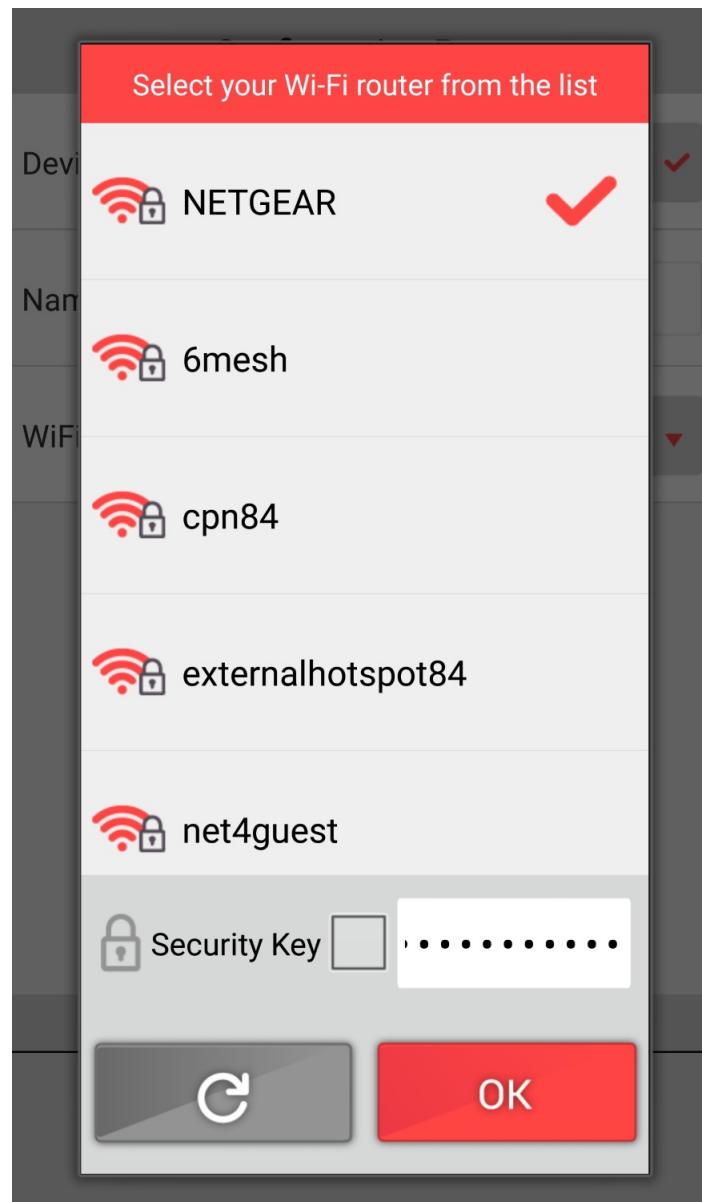


図 63. Select Wi-Fi Router

6. After the configuration is done, make sure the phone is connected to the same Wi-Fi network that the CC3220SF is connected.

7. Once connected, select the device from the device list.

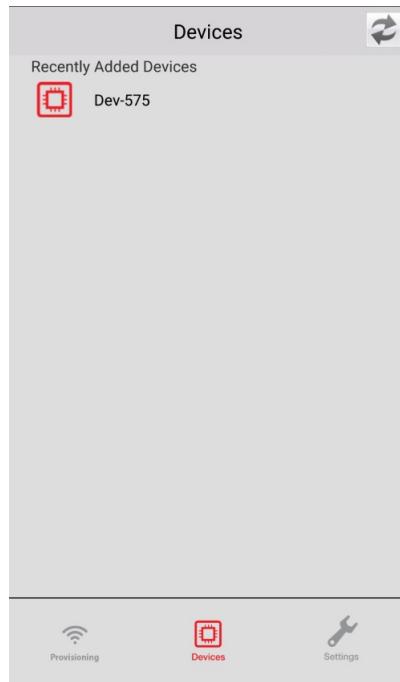


図 64. Devices


8. This will open a web page hosted by the device. If the device has already been provisioned to a Wi-Fi network then click on Sensor Dashboard, otherwise click on Configure WiFi Network and enter the WiFi access point credentials.



図 65. Local Web Server Start Page

注: If the browser gives a warning about security certificates, ignore it, and continue to the web page.

9. (*AWS IoT Example Only*) If running the AWS Example and the gateway is connected to the Internet then go to the front end website provided by StackArmor, it should look something like this http://iotdash.stackbuilder.us/#/dashboard/home?net=AWS_IOT_MY_THING_NAME where *AWS_IOT_MY_THING_NAME* should match the thing name in *aws_iot_config.h*.
 NOTE: if running the IBM Example then continue with the steps below.

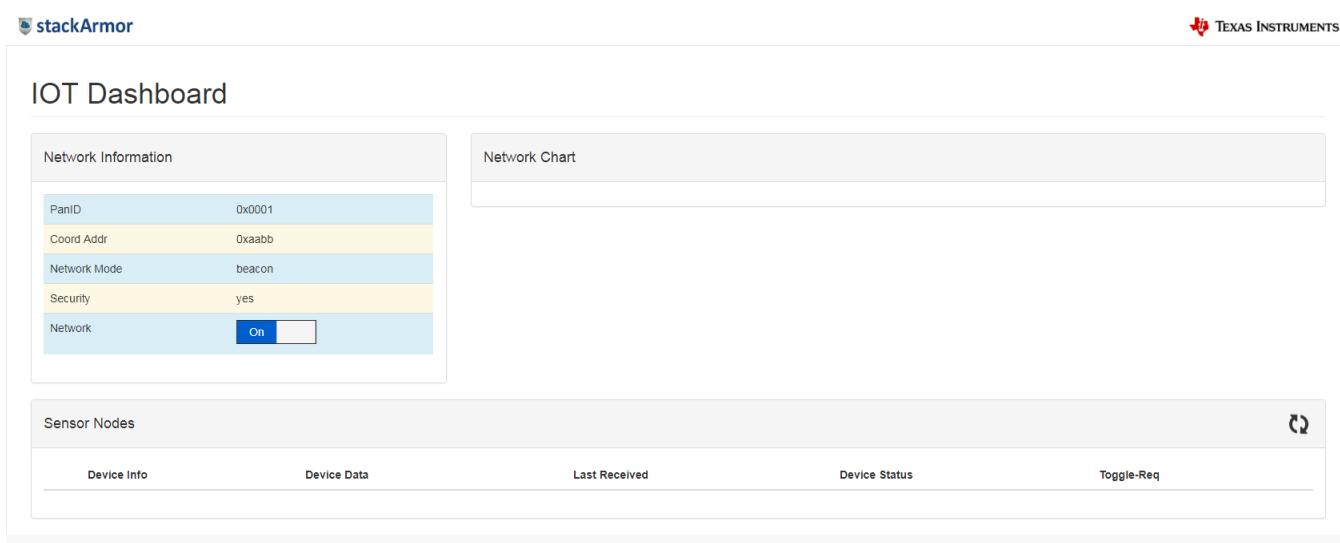

The screenshot shows the AWS IoT Dashboard interface. On the left, there's a sidebar with a "Network Information" section containing the following details:

PanID	0x0001
Coord Addr	0xaabb
Network Mode	beacon
Security	yes
Network	On <input type="button" value="Off"/>

To the right of the sidebar is a "Network Chart" area which is currently empty. Below the sidebar is a "Sensor Nodes" section with a table header:

Device Info	Device Data	Last Received	Device Status	Toggle-Req
-------------	-------------	---------------	---------------	------------

図 66. AWS IoT Dashboard

10. (*IBM Example Only*) On the start page click on the Sensor Dashboard button. Once on the dashboard click on the settings button to enter the IBM Cloud configuration information.

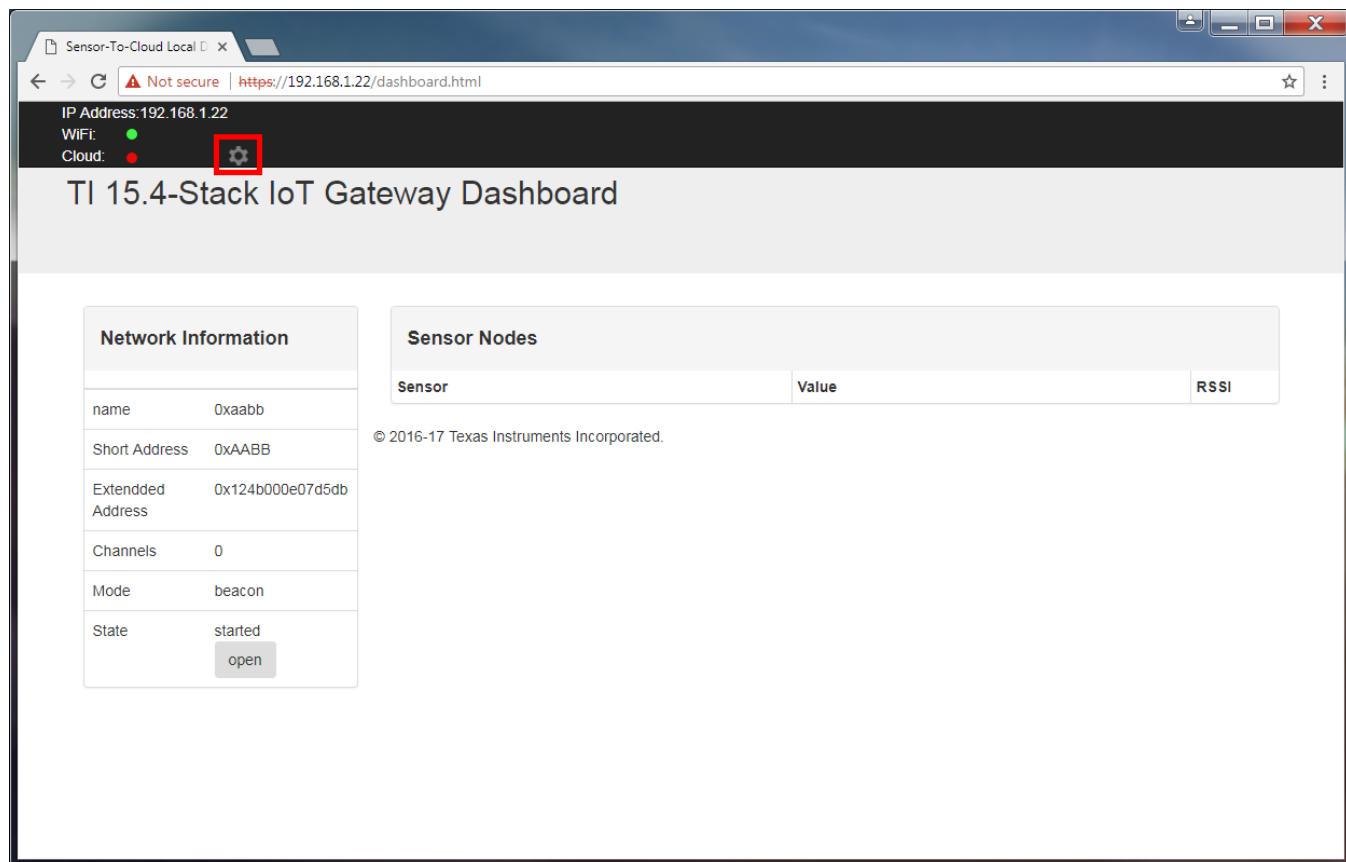


図 67. Local Dashboard

11. (*IBM Example Only*) A form will pop up, fill out the form with the IBM Cloud account information. When complete, click *Save Changes* and then *Close*. If the Gateway was successful on connecting to the IBM Cloud then the Red dot next to "Cloud" on the dashboard should turn green.

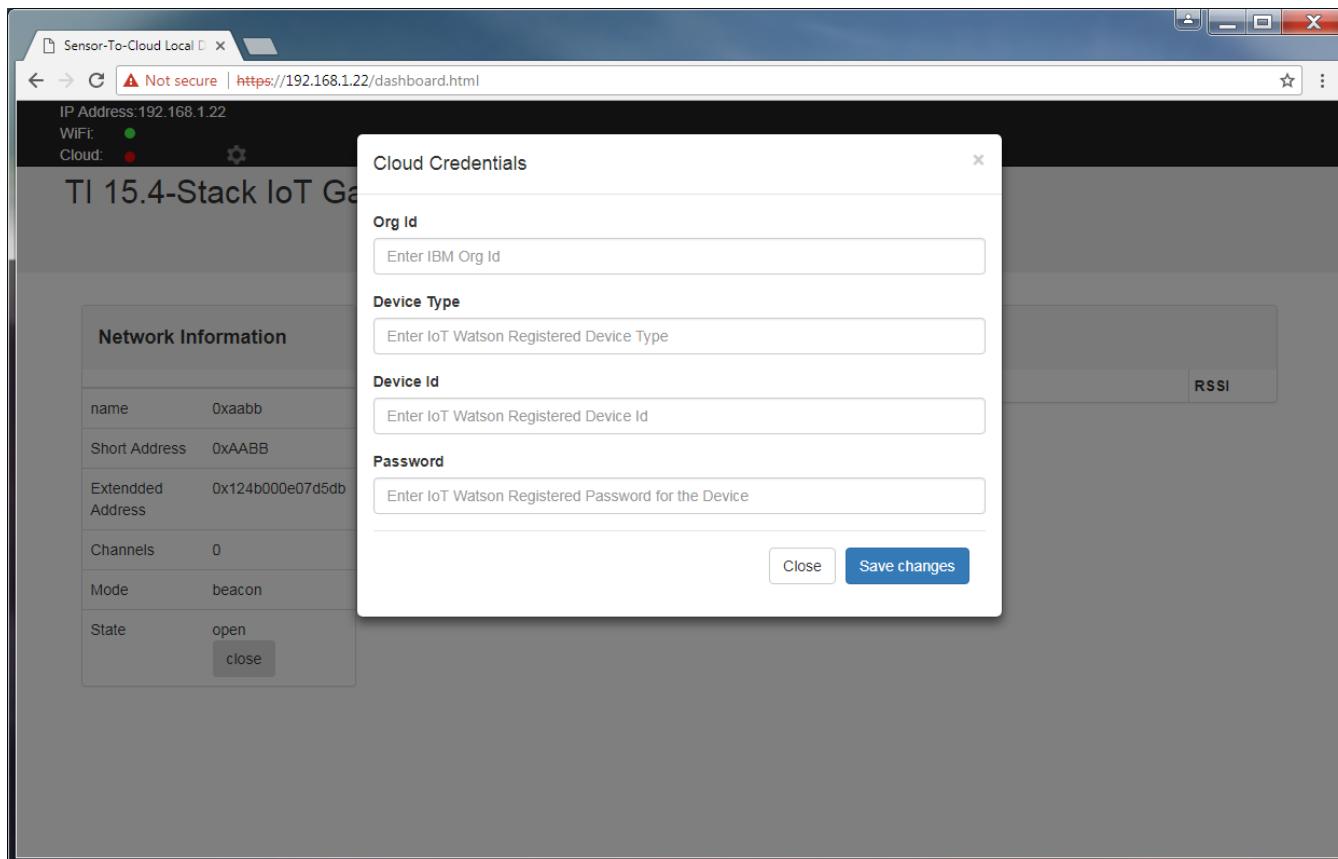


図 68. Cloud Credentials Form

12. (*IBM Example Only*) Go to the IBM Cloud Foundry App URL provided on the IBM Cloud account, which looks something like *APP_NAME.mybluemix.net*.
 13. Click the *open* button on the dashboard to allow sensors to join the network.


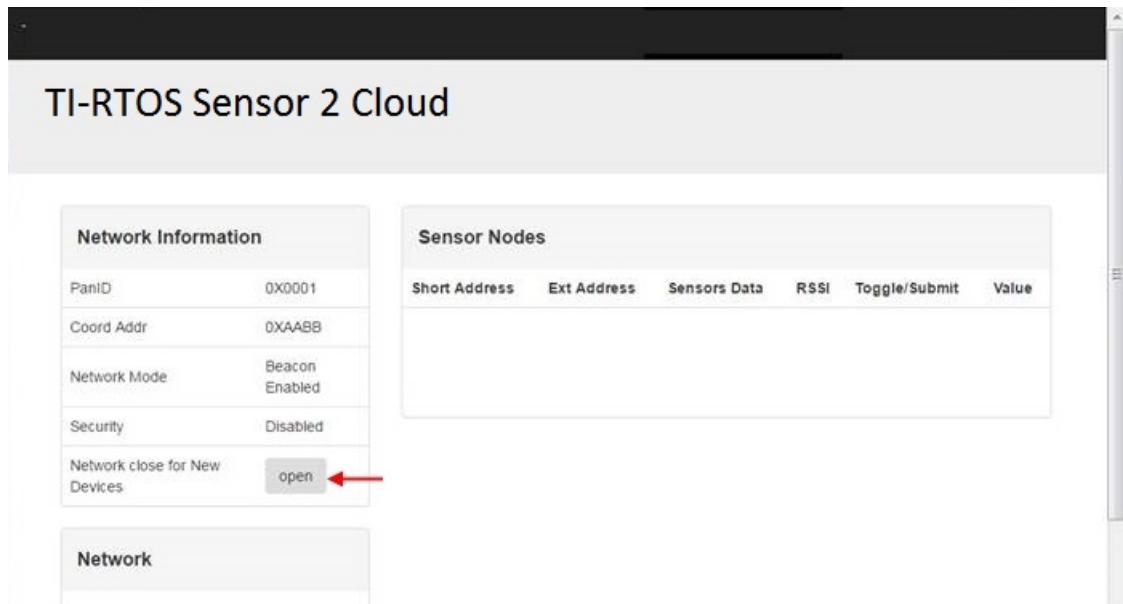


図 69. IBM Cloud Dashboard Open Button

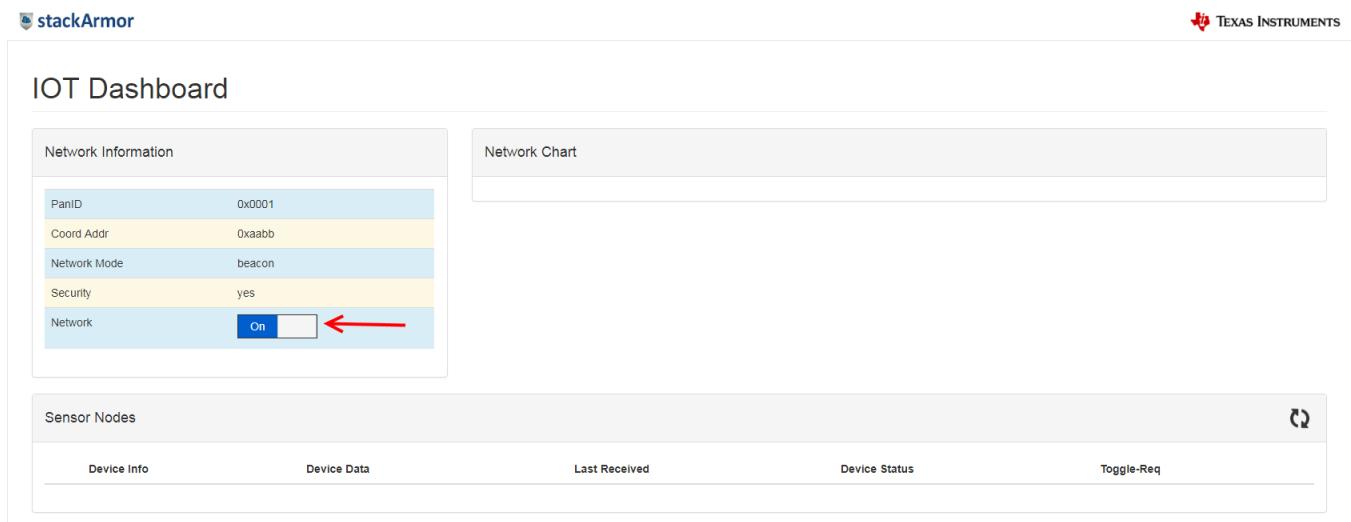

The screenshot shows the AWS Cloud Dashboard. At the top, there are links for stackArmor and Texas Instruments. The main area has two sections: 'Network Information' and 'Sensor Nodes'. The 'Network Information' section contains the following table:

PanID	0x0001
Coord Addr	0xaabb
Network Mode	beacon
Security	yes
Network	<input checked="" type="checkbox"/> On

A red arrow points to the 'On' button in the last row. The 'Sensor Nodes' section is currently empty.

図 70. AWS Cloud Dashboard Open Button

14. Apply power to the LaunchPad labeled *Sensor*.
15. Now the sensor should automatically start looking for a network. If paired with the network successfully, the *Sensor* board can be viewed and controlled from the web browser.

注: If the device is not visible in the web browser, the device is most likely connected to another network. To solve this error, complete a factory reset on the sensor by pressing the reset button while holding the right button (BTN-2), and try again.



IOT Dashboard

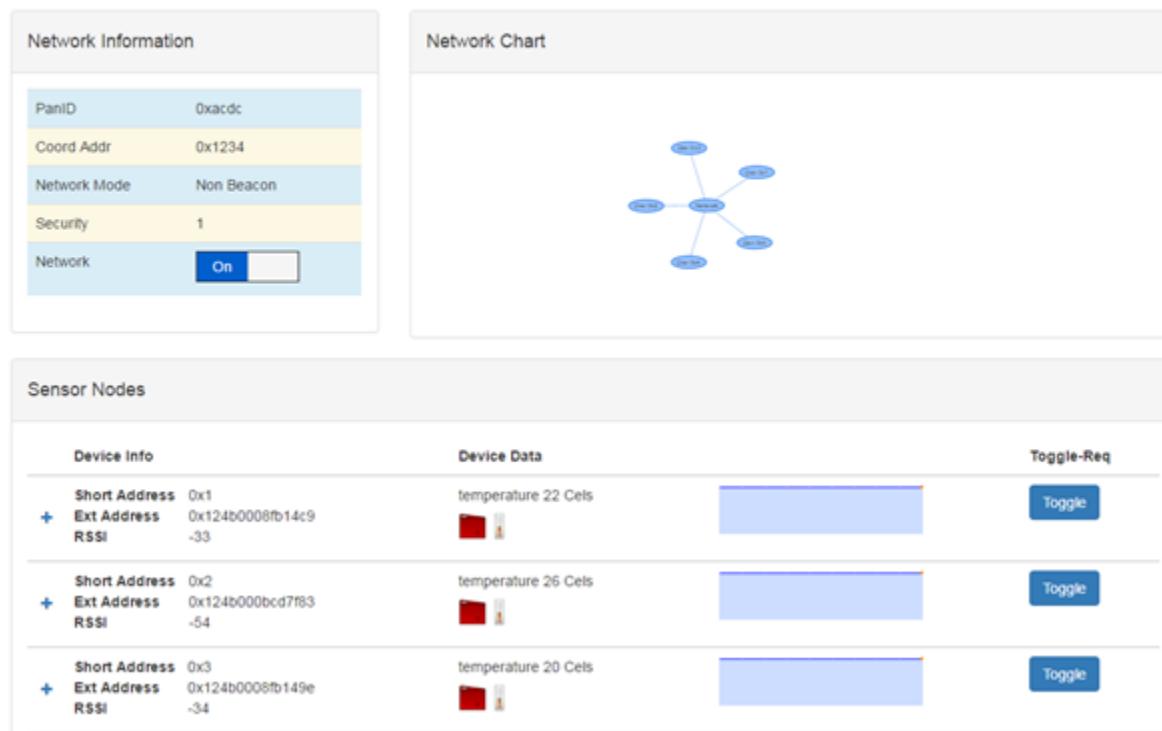


図 71. AWS Front End After Devices Joined

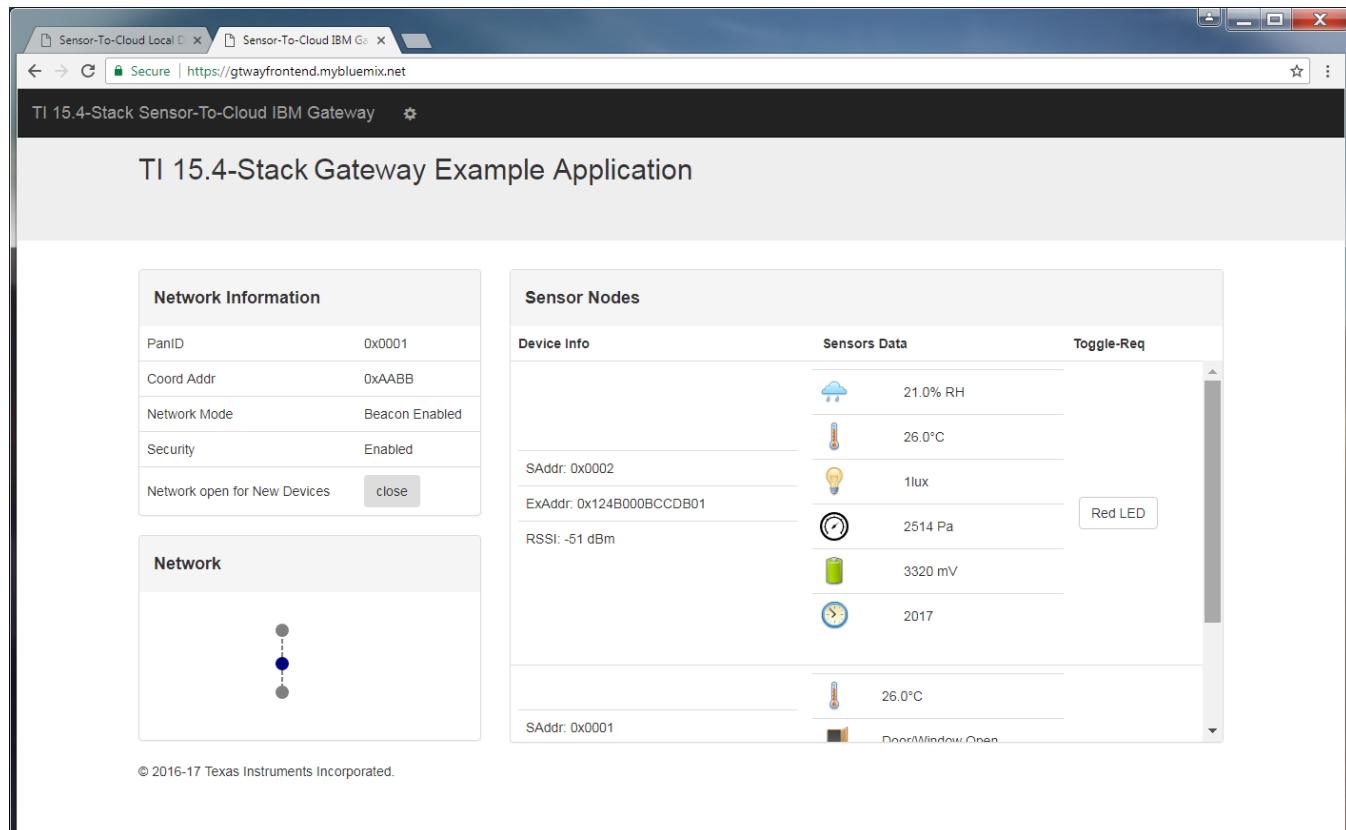


図 72. Sensor2Cloud Front End

3.2.1.1.9.2 Using the Local Provisioning Web Page

注: This is an alternate option if using the SimpleLink App is not desired.

1. Make sure the CC3220SF LaunchPad is powered on and that a serial console, like Tera Term, is opened to see the console output of the device.
2. On the PC search for Wi-Fi networks, and connect to the one broadcasted by the LaunchPad, which should look something like *mysimplelink-XXXX*.



図 73. Connect to LaunchPad™

3. Open a browser window, and navigate to *mysimplelink.net* this should open the start page shown below.

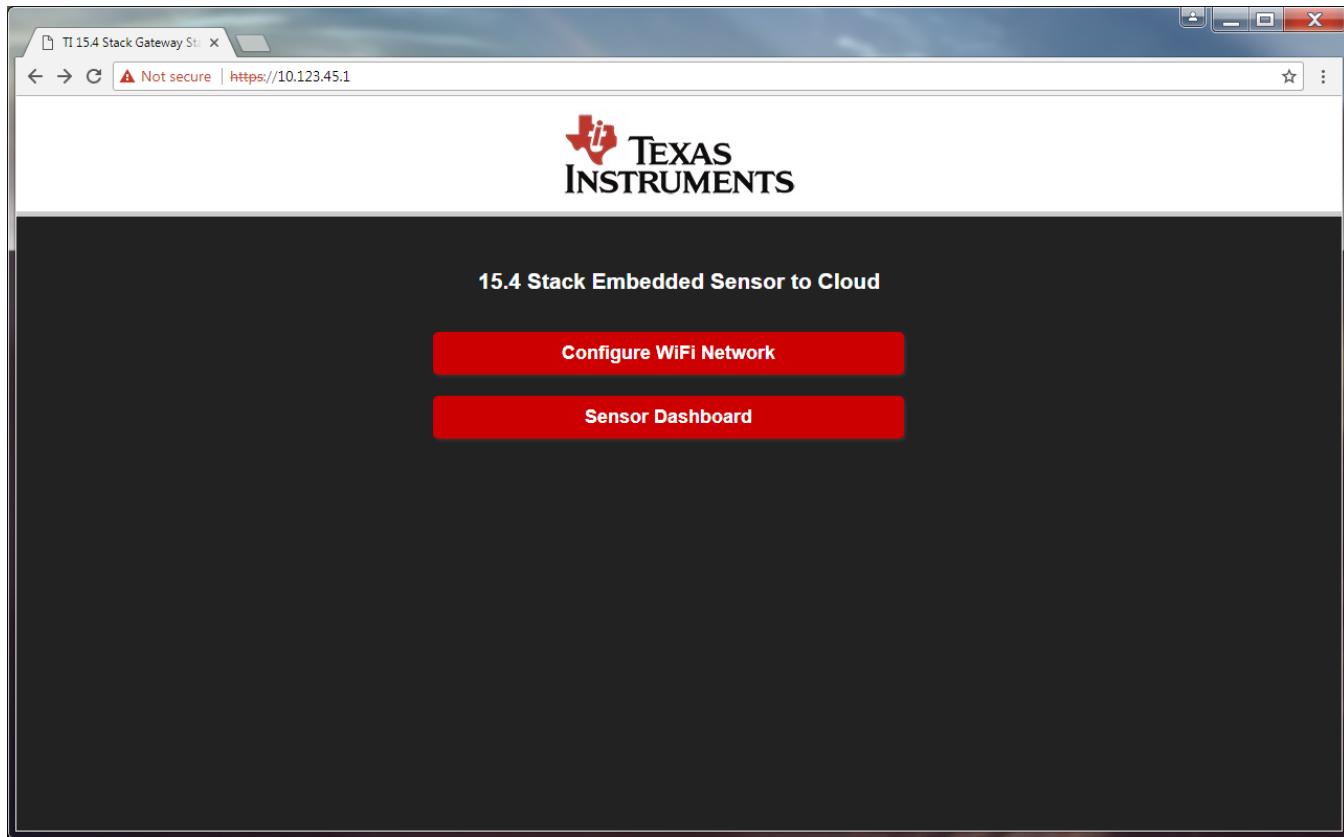


図 74. *mysimplelink.net* Local Home Page

4. Press the *Configure WiFi Network* button to go to the *Network Configuration* page.

Note: Before entering the network information make sure to have a serial terminal open for the CC3220 gateway so you can record the IP address given to the gateway.

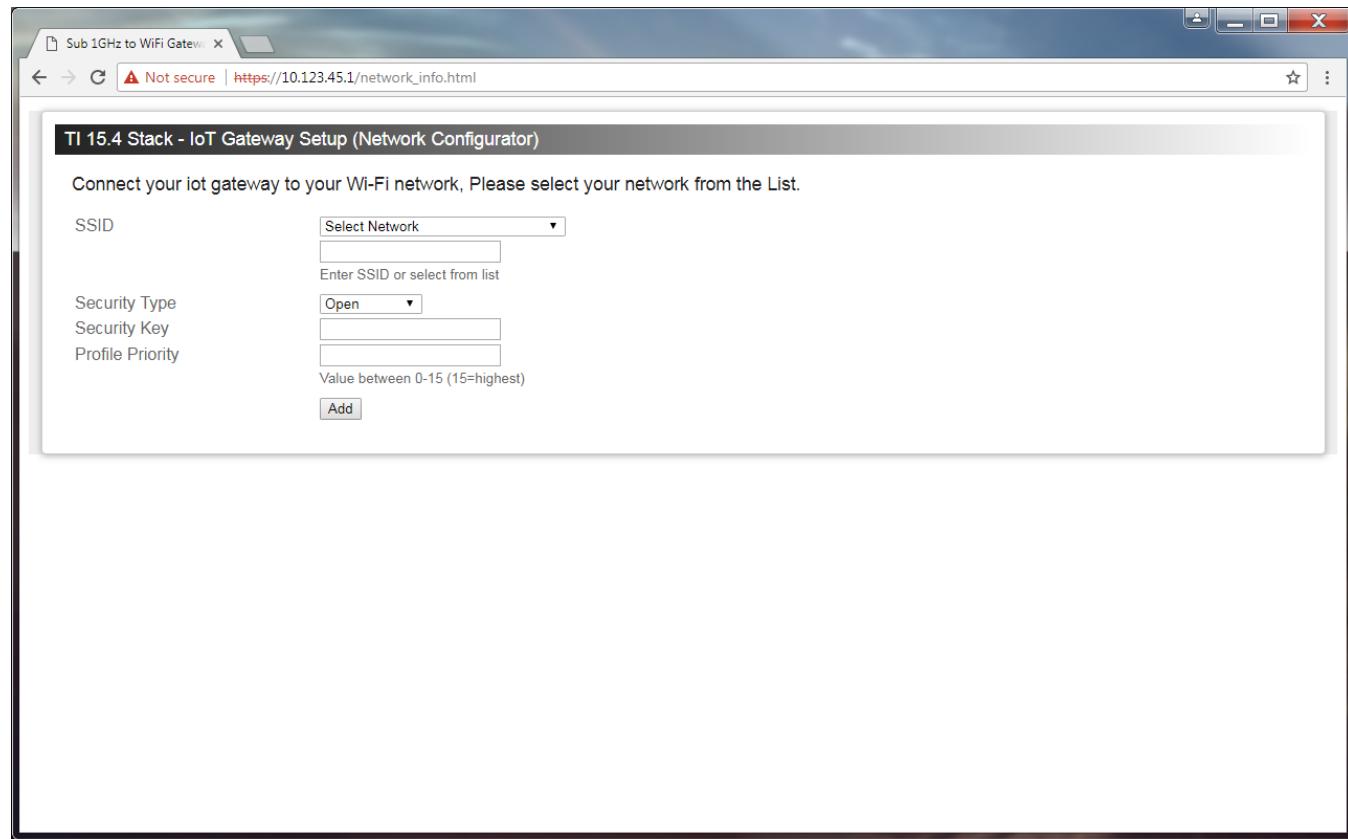


図 75. Network Configuration Page

5. Enter the required information for the desired Wi-Fi access point, and click on the *Add* button. A pop-up window with instructions like [図 76](#) will appear.


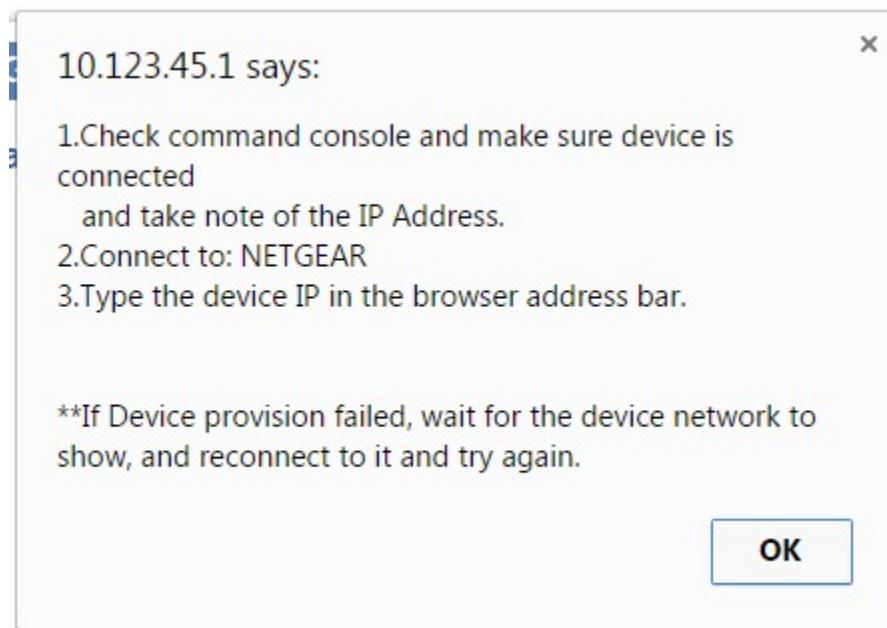


図 76. Pop-up Message

6. Go to the serial terminal and make sure to save the new IP address assigned to the CC3220 gateway.

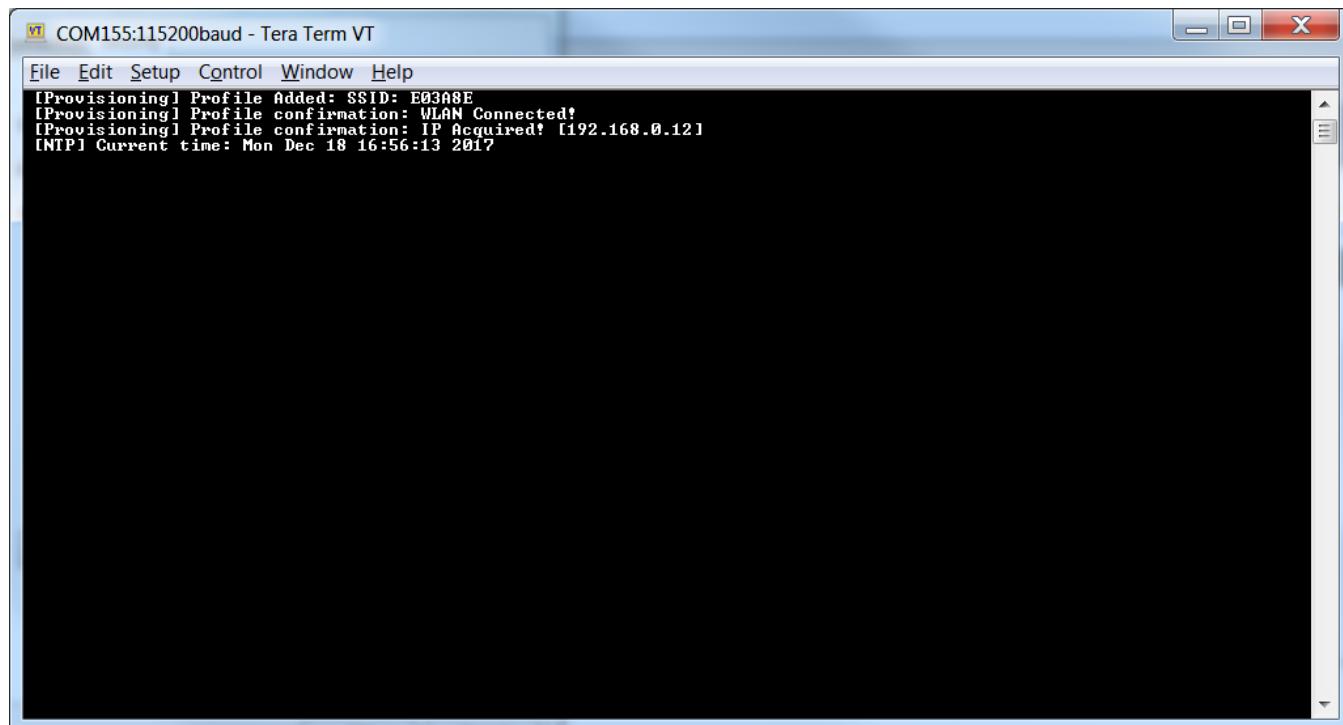

VT COM155:115200baud - Tera Term VT

```
[Provisioning] Profile Added: SSID: E03A8E
[Provisioning] Profile confirmation: WLAN Connected!
[Provisioning] Profile confirmation: IP Acquired! [192.168.0.12]
[NTP] Current time: Mon Dec 18 16:56:13 2017
```

図 77. IP Address displayed on Serial Terminal

7. Using a computer or a mobile device connect to the same WiFi access point as the CC3220 gateway, open an internet browser and go to the IP address assigned to the gateway, in this case it would be <https://192.168.0.12> this should open the start page shown below.

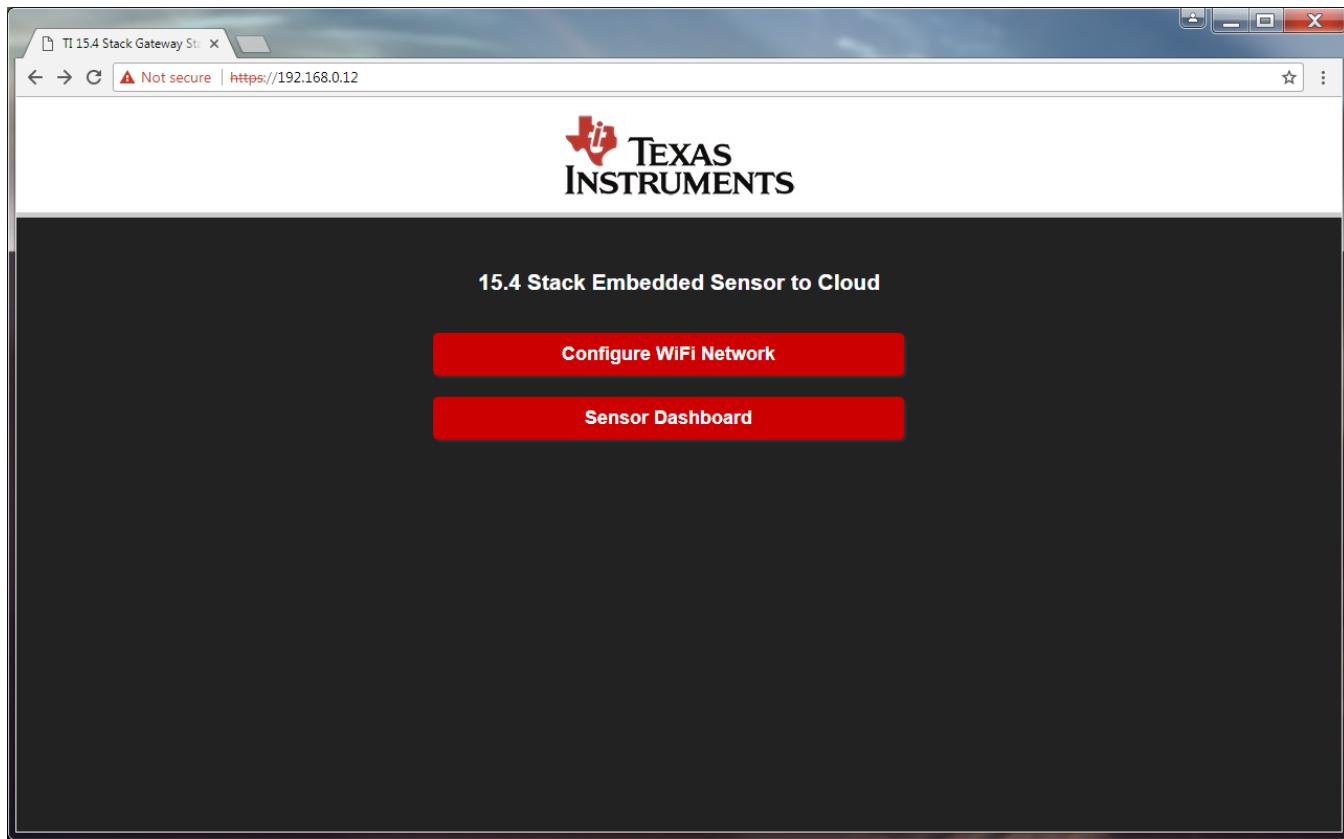



図 78. Start Page

8. Go to the section *Using SimpleLink Starter Pro App* at the beginning of [3.2.1.1.9](#), and follow the instructions starting from step 8.

3.2.2 Test Results

3.2.2.1 IoT Dashboard

図 79 shows an example of the IoT dashboard displayed on the web interface. Note that the current network information is shown. The network chart displays the number of connected devices, and the sensor nodes section shows the device and current sensor information for all the devices in the network.

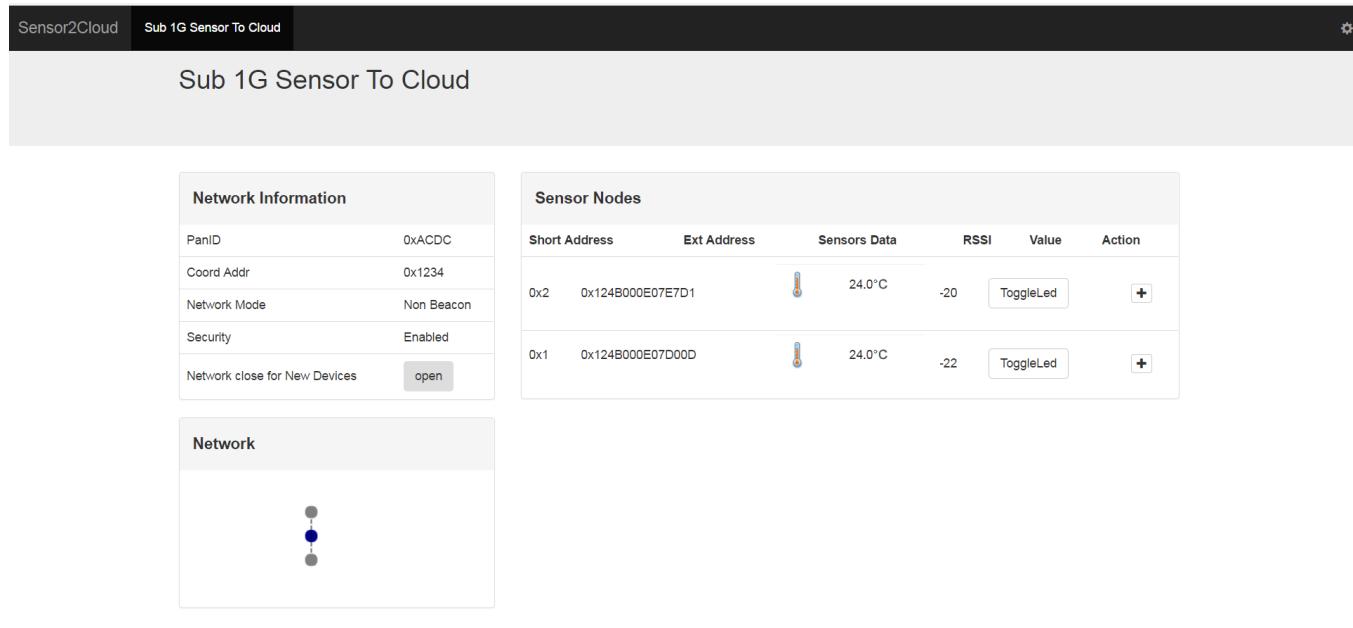

© 2016-17 Texas Instruments Incorporated.

図 79. IBM Sensor-to-Cloud Dashboard Results

4 Design Files

This reference design showcases the connectivity between CC3220SF and CC13x0 devices. The CC3220SF acts as a gateway processor and the CC13x0 as communication node. The CC3220SF LaunchPad is used as a platform for gateway processor, and the CC13x0-based LaunchPad acts as communication node. The recommended schematics for this reference design uses the schematics of the CC3220SF LaunchPad and CC13x0 LaunchPad and interface the two devices using the UART lines. This IoT gateway reference design only uses one UART port. In addition, bootloader backdoor pins are described in the [CC2538/CC26xx Serial Bootloader Interface](#) application report. These pins can be connected to upgrade the firmware on the CC13x0 using the serial ROM bootloader on the CC13x0 devices.

4.1 Schematics

To download the schematics for this reference design, see the following links:

- [LAUNCHXL-CC1310](#)
- [LAUNCHXL-CC1350](#)
- [CC3220SF-LAUNCHXL](#)

4.2 Bill of Materials

- [LAUNCHXL-CC1310](#)
- [LAUNCHXL-CC1350](#)
- [CC3220SF-LAUNCHXL](#)

4.3 PCB Layout Recommendations

For layout prints, Altium project files, Gerber files, and assembly drawings, see the following links:

- [LAUNCHXL-CC1310](#)
- [LAUNCHXL-CC1350](#)
- [CC3220SF-LAUNCHXL](#)

5 Software Files

To download the software files, see the link at <https://git.ti.com/tidc01002/tidc01002>.

6 Related Documentation

1. Texas Instruments, [SimpleLink TI 15.4-Stack IEEE 802.15.4e/g Standard Based Star Networking Software Development Kit](#), Tools Folder
2. Texas Instruments, [SimpleLink CC3220 SDK](#), Tools Folder
3. Texas Instruments, [TI 15.4-Stack Wiki](#), Wiki Page
4. Texas Instruments, [TI 15.4-Stack Embedded Developers Guide](#)

6.1 商標

LaunchPad, Internet-on-a-chip, SmartConfig, Code Composer Studio are trademarks of Texas Instruments.

SimpleLink is a trademark of Texas Instruments Incorporated.

Cortex is a registered trademark of ARM Limited.

ARM, Cortex are registered trademarks of Arm Limited.

Bluetooth is a registered trademark of Bluetooth SIG, Incorporated.

IOS is a registered trademark of Cisco.

Android is a trademark of Google Inc.

IBM Watson IoT is a registered trademark of International Business Machines Corporation.

Linux is a registered trademark of Linus Torvalds.

Wi-Fi, Wi-Fi Direct are registered trademarks of Wi-Fi Alliance.

すべての商標および登録商標はそれぞれの所有者に帰属します。

7 About the Authors

HECTOR RAMOS is a software applications engineer at Texas Instruments, where he has been working at since 2014 and is specialized in low-power wireless protocols. Hector earned his bachelors of science in electrical engineering and computer science from University of California Berkeley.

ANDRES BLANCO is an applications engineer at Texas Instruments, where he is responsible for supporting customers designing low power wireless systems. Andres earned his bachelor of science in computer engineering from University of Puerto Rico in Mayagüez, PR.

改訂履歴

資料番号末尾の英字は改訂を表しています。その改訂履歴は英語版に準じています。

2017年7月発行のものから更新

Page

• all instances of <i>TI Design to reference design</i> . 変更	2
• CC1310 to CC13x0 and CC1350 to CC13x02 throughout 変更	2
• cloud service provider to IBM Watson IoT 変更	2
• Software Block Diagram of TI 15.4-Stack Sensor-to-Cloud Reference Design image 変更	4
• System Design Theory section and moved TI IoT Gateway-to-Cloud Service Interface section 追加	8
• (for IBM Cloud only) to the Software section 追加	12
• CC3220 SDK v1.30.01.03 to CC3220 SDK v1.50.00.06 in the Software section 変更	12
• SimpleLink CC13x2 SDK and removed v1.30 from SimpleLink CC13x0 SDK 追加	12
• AWS IoT cloud services to Test Setup section 追加	13
• Running the Out-of-Box Examples section 変更	13
• Running IBM Gateway Example section and changed Bluemix to Cloud 追加	13
• Running the AWS IoT Example section 追加	14
• section title from <i>Program the MAC CoP LaunchPad™ to Programming the CC13x0 LaunchPad™</i> 変更	14
• MAC CoP to CC13x0 in the <i>Programming the CC13x0 LaunchPad™</i> section 変更	14
• CC1350 LaunchPad CoProcessor.hex or sensor_cc1350lp_doorlock.hex to CoProcessor or Sensor hex files provided in the prebuilt directory in the <i>Programming the CC13x0 LaunchPad™</i> section 変更	15
• out-of-the-box demonstration to CC3220SF LaunchPad in the <i>Programming the CC3220SF LaunchPad™</i> section 変更	16
• directory path from C:\<S2C_Repo_Directory>\CC3220_CC13x0Gateway\prebuilt\CC3220SF_LaunchXL\Uniflash_CC3220\ImageCreatorProject.zip to C:\<S2C_Repo_Directory>\tidc01002\prebuilt\CC3220SF_LaunchXL\Uniflash_CC3220\ImageCreatorProject.zip in <i>Programming a Preconfigured Image Creator Project</i> section 変更	19
• Importing Examples to Code Composer Studio (CCS) section 追加	22
• Compiling the Mac-CoP from Source section 追加	24
• trusted root-certificate catalog directory path in the <i>Creating an Image Creator Project in UniFlash</i> section 変更	27
• service pack directory path in the <i>Creating an Image Creator Project in UniFlash</i> section 変更	28
• directory path from C:\<S2C Repo Directory>\CC3220_CC13x0Gateway\examples\CC3220SF_LaunchXLcc3220sf_gateway_app\15_4_Stack_Gtway_CC3220SF_LAUNCHXL_tirtos_ccs/ to C:\<S2C Repo Directory>\tidc01002\src\www in the <i>Creating an Image Creator Project in UniFlash</i> section 変更	29
• instructions for the www folder in the <i>Creating an Image Creator Project in UniFlash</i> section 追加	29
• section title to <i>Connecting the MAC-CoP and the CC3220SF LaunchPad™</i> and updated jumper/configuration instructions 変更	35
• content in <i>Open and Configure an IBM Cloud™ Account</i> section 変更	37
• content in <i>Set Up Watson IoT™ Platform Service</i> section 変更	42
• content in <i>Set Up Node.js Cloud Foundry App</i> section 変更	50
• cd C:\<S2C Repo Directory>\CC3220_CC13x0Gateway\examples\ibm_cloud_application to cd C:\<S2C Repo Directory>\tidc01002\examples\ibm_cloud_application in <i>Set Up Node.js Cloud Foundry App</i> section 変更	51
• content in <i>Using the SimpleLink™ Starter Pro App</i> section 変更	60
• content in <i>Using the Local Provisioning Web Page</i> section 変更	70

TIの設計情報およびリソースに関する重要な注意事項

Texas Instruments Incorporated ("TI")の技術、アプリケーションその他設計に関する助言、サービスまたは情報は、TI製品を組み込んだアプリケーションを開発する設計者に役立つことを目的として提供するものです。これにはリファレンス設計や、評価モジュールに関する資料が含まれますが、これらに限られません。以下、これらを総称して「TIリソース」と呼びます。いかなる方法であっても、TIリソースのいずれかをダウンロード、アクセス、または使用した場合、お客様(個人、または会社を代表している場合にはお客様の会社)は、これらのリソースをここに記載された目的にのみ使用し、この注意事項の条項に従うことに合意したものとします。

TIによるTIリソースの提供は、TI製品に対する該当の発行済み保証事項または免責事項を拡張またはいかなる形でも変更するものではなく、これらのTIリソースを提供することによって、TIにはいかなる追加義務も責任も発生しないものとします。TIは、自社のTIリソースに訂正、拡張、改良、およびその他の変更を加える権利を留保します。

お客様は、自らのアプリケーションの設計において、ご自身が独自に分析、評価、判断を行う責任をお客様にあり、お客様のアプリケーション(および、お客様のアプリケーションに使用されるすべてのTI製品)の安全性、および該当するすべての規制、法、その他適用される要件への遵守を保証するすべての責任をお客様のみが負うことを理解し、合意するものとします。お客様は、自身のアプリケーションに関して、(1) 故障による危険な結果を予測し、(2) 障害とその結果を監視し、および、(3) 損害を引き起こす障害の可能性を減らし、適切な対策を行う目的での、安全策を開発し実装するために必要な、すべての技術を保持していることを表明するものとします。お客様は、TI製品を含むアプリケーションを使用または配布する前に、それらのアプリケーション、およびアプリケーションに使用されているTI製品の機能性を完全にテストすることに合意するものとします。TIは、特定のTIリソース用に発行されたドキュメントで明示的に記載されているもの以外のテストを実行していません。

お客様は、個別のTIリソースにつき、当該TIリソースに記載されているTI製品を含むアプリケーションの開発に関連する目的でのみ、使用、コピー、変更することが許可されています。明示的または默示的を問わず、禁反言の法理その他どのような理由でも、他のTIの知的所有権に対するその他のライセンスは付与されません。また、TIまたは他のいかなる第三者のテクノロジまたは知的所有権についても、いかなるライセンスも付与されるものではありません。付与されないものには、TI製品またはサービスが使用される組み合わせ、機械、プロセスに関連する特許権、著作権、回路配置利用権、その他の知的所有権が含まれますが、これらに限られません。第三者の製品やサービスに関する、またはそれらを参照する情報は、そのような製品またはサービスを利用するライセンスを構成するものではなく、それらに対する保証または推奨を意味するものではありません。TIリソースを使用するため、第三者の特許または他の知的所有権に基づく第三者からのライセンス、もしくは、TIの特許または他の知的所有権に基づくTIからのライセンスが必要な場合があります。

TIのリソースは、それに含まれるあらゆる欠陥も含めて、「現状のまま」提供されます。TIは、TIリソースまたはその仕様に関して、明示的か暗黙的かにかかわらず、他のいかなる保証または表明も行いません。これには、正確性または完全性、権原、続発性の障害に関する保証、および商品性、特定目的への適合性、第三者の知的所有権の非侵害に対する默示の保証が含まれますが、これらに限られません。

TIは、いかなる苦情に対しても、お客様への弁護または補償を行う義務はなく、行わないものとします。これには、任意の製品の組み合わせに関連する、またはそれらに基づく侵害の請求も含まれますが、これらに限られず、またその事実についてTIリソースまたは他の場所に記載されているか否かを問わないものとします。いかなる場合も、TIリソースまたはその使用に関連して、またはそれらにより発生した、実際的、直接的、特別、付隨的、間接的、懲罰的、偶発的、または、結果的な損害について、そのような損害の可能性についてTIが知らされていたかどうかにかかわらず、TIは責任を負わないものとします。

お客様は、この注意事項の条件および条項に従わなかったために発生した、いかなる損害、コスト、損失、責任からも、TIおよびその代表者を完全に免責するものとします。

この注意事項はTIリソースに適用されます。特定の種類の資料、TI製品、およびサービスの使用および購入については、追加条項が適用されます。これには、半導体製品(<http://www.ti.com/sc/docs/stdterms.htm>)、評価モジュール、およびサンプル(<http://www.ti.com/sc/docs/samptersms.htm>)についてのTIの標準条項が含まれますが、これらに限られません。